

2110Scope

Signal Analysis Software

Version 8



May 21, 2024

Table of Contents

Copyrights and Trademark Notices.....	7
General.....	7
GNU LESSER GENERAL PUBLIC LICENSE.....	15
0. Additional Definitions.....	15
1. Exception to Section 3 of the GNU GPL.....	15
2. Conveying Modified Versions.....	15
3. Object Code Incorporating Material from Library Header Files.....	15
4. Combined Works.....	16
5. Combined Libraries.....	16
6. Revised Versions of the GNU Lesser General Public License.....	16
MPEG Disclaimers.....	17
MPEGLA MPEG2 Patent.....	17
MPEGLA MPEG4 VISUAL.....	17
MPEGLA AVC.....	17
MPEG4 SYSTEMS.....	17
Drastic Technologies Limited Warranty and Disclaimers.....	17
Warranty Remedies.....	18
Software Updates.....	18
Restrictions and Conditions of Limited Warranty.....	18
Limitations of Warranties.....	18
Damages.....	18
About 2110Scope.....	20
Reference.....	22
Main Interface Overview.....	22
Audio Controls and Displays.....	23
Freeze Field/Frame.....	26
Line Select.....	26
Status Display.....	28
Scopes Layout and Setup.....	29
Layout Options.....	29
Single Scope Layout.....	30
Two Scopes Layout.....	31
Four Scopes Layout.....	32
Six Scopes Layout.....	33
Picture View.....	34
Graticules.....	37
Vectorscope.....	38
Vectorscope Setup.....	38
Vectorscope Window.....	40
Waveform YCbCr.....	41
Waveform YCbCr Setup.....	41
Waveform YCbCr Window.....	46
Waveform RGB.....	47
Waveform RGB Setup.....	47
Waveform RGB Window.....	50
Histogram YCbCr.....	51
Histogram YCbCr Setup.....	51
Histogram YCbCr Window.....	52
Histogram RGB.....	53
Histogram RGB Setup.....	53

Histogram RGB Window.....	54
Histogram HSV Setup.....	55
Histogram HSV Window.....	56
Histogram Luma.....	57
Histogram Luma Setup.....	57
Histogram Luma Window.....	58
H/S Scope.....	59
H/S Scope Setup.....	59
H/S Scope Window.....	61
H/S Scope Example.....	62
Chromaticity.....	63
Chromaticity Setup.....	63
Chromaticity Window.....	66
IP Timing Window.....	69
IP Timing Setup.....	69
IP Timing Window.....	70
Status Window.....	71
Status Setup.....	71
Status Window.....	72
Anc Monitor Window.....	73
Anc Monitor Setup.....	73
Anc Monitor Window.....	74
Audio Vector.....	75
Audio Vector Setup.....	75
Audio Vector Window.....	76
Audio Phase.....	79
Audio Phase Setup.....	79
Audio Phase Window.....	80
Audio Histogram.....	81
Audio Histogram Setup.....	81
Audio Histogram Window.....	83
Audio Wave.....	84
Audio Wave Setup.....	84
Audio Wave Window.....	85
Audio Spectrum.....	86
Audio Spectrum Setup.....	86
Audio Spectrum Window.....	89
Audio Meters.....	90
Audio Meters Setup.....	90
Audio Meters Window.....	92
Loudness Meter.....	93
Loudness Meter Setup.....	93
Loudness Meter Window.....	96
Surround Meter.....	97
Surround Meter Setup.....	97
5.1 Surround Sound Window.....	100
7.1 Surround Sound Window.....	101
System Configuration Window.....	103
IP Video Setup.....	104
Video Input.....	104
12G Type.....	105
Video Format.....	105
Color Format.....	105

Primaries.....	105
Transfer.....	105
Picture Mode.....	106
Down Convert.....	106
Output.....	106
Closed Caption.....	106
Audio Input.....	107
Audio Scale.....	107
Board Type.....	107
Board Select.....	108
Preferred Scan.....	108
Active Region.....	108
Auto Follow Input.....	109
Scope Vblank.....	109
Play Audio Computer Speakers.....	109
Audio Channels.....	109
Audio Pairs.....	109
Check for New Versions on Startup.....	109
Check for Updates.....	110
License.....	111
Done.....	112
IP Setup.....	112
ST-2110 IP Setup - Video.....	113
ST-2110 IP Setup - Audio.....	115
ST-2110 IP Setup - Anc.....	117
ST-2110 IP Setup - NDI.....	119
Display Modes.....	120
Off.....	121
Luma Only.....	122
Red Only.....	123
Green Only.....	124
Blue Only.....	125
Zebra Luma.....	126
Zebra Chroma.....	127
Clipping.....	128
Edge Difference.....	129
Focus Assist.....	130
Calibrate.....	131
Flip Flop.....	132
Show Alpha.....	135
Opacity.....	136
Luma Key.....	137
Green Screen Key.....	138
Chroma Key Despill.....	139
Chroma Key Simple.....	140
False Colour.....	141
Neutral.....	143
Display Modes Keyboard Controls.....	144
Manual.....	145
Capture Image.....	145
Data View.....	147
Color Coded Values display.....	148
Web Page.....	152

2110Scope Web Interface.....	153
Configure.....	154
Picture.....	155
Vector.....	156
Waveform RGB.....	157
Waveform YCbCr.....	158
Histogram.....	159
Chromaticity.....	161
ANC Monitor.....	162
Status.....	162
Audio Vector Scope.....	163
Audio Phase Scope.....	164
Audio Histogram Scope.....	165
Audio Wave Scope.....	166
Audio Meters Scope.....	166
Audio Surround Sound Scope.....	167
Event Log.....	169
Audio/Video Event Sensitivity.....	171
Vertical Line Repetition.....	171
Missing Lines.....	172
Missing Edges.....	173
Black and White.....	174
Still Frames.....	175
Broadcast Illegal.....	176
Oversaturation.....	177
Contrast Blacks.....	178
Gamut Over.....	179
Gamut Under.....	180
Loudness.....	181
Silence.....	182
Y Component.....	183
V Component.....	185
Single Color.....	186
Ancillary Data Streams Sensitivity.....	187
Supported Data Stream Types.....	188
Area Select.....	192
License.....	193
Audio Routing.....	194
Setup.....	196
Install the Software.....	196
License the Software.....	197
How Do I Remove the Watermarks?.....	197
Run the Software.....	197
Setup Window.....	197
Color Space and HDR/HLG in 2110Scope.....	198
Input Color - YCbCr (YUV) and RGB.....	198
Primaries.....	198
Transfer Characteristics.....	201
Turning Off Background Programs in Linux.....	202
Disable Hibernate, Sleep.....	202
Disable Kernel Updates.....	202
Set Default Kernel.....	202
Operations.....	203

Controlling 2110Scope.....	204
Zoom and Pan.....	204
Mouse Control.....	204
Making Marks/Guides (cross, line and box).....	205
Frame Compare.....	206
Command Line Parameters.....	206
Set Layout.....	206
Capture Image.....	206
Other Features.....	207
2110Scope Front Panel Controller.....	208
Controls and Displays.....	208
Scope Selection.....	208
Change Settings For the Scope.....	208
Change the Scope.....	208
Audio Meters.....	209
The Scopes and Settings.....	209
Adding Picture Scope.....	211
Adding Vector Scope.....	211
Adding Waveform YCbCr Scope.....	211
Adding Waveform RGB Scope.....	212
Adding Histogram Scope.....	212
Adding Chromaticity Scope.....	212
Adding Status Scope.....	212
Adding Audio Phase Scope.....	212
Adding Audio Wave Scope.....	212
Configuring the Crystalfontz Front Panel Linux.....	213
Permission Commands.....	213
REST API Commands.....	214
Basic Command Structure.....	214
Number of Scopes.....	214
Set/Get Individual Scopes.....	215
Set/Get Audio Meters.....	216
Set/Get Scope Settings.....	216

Copyrights and Trademark Notices

General

Copyright 2025, Drastic Technologies Ltd. All rights reserved worldwide. No part of this publication may be reproduced, transmitted, transcribed, altered, or translated into any languages without the written permission of Drastic Technologies. Information and specifications in this document are subject to change without notice and do not represent a commitment on the part of Drastic Technologies.

A&E Television Networks - A&E Networks is a trademark of A&E Television Networks

Adobe, Inc. - Adobe, the Adobe logo, Adobe Premiere, Adobe After Effects, Creative Cloud, Frame.io, and Iridas are either registered trademarks or trademarks of Adobe in the United States and/or other countries.

Advanced Micro Devices, Inc. - AMD is a trademark of Advanced Micro Devices, Inc.

ADVANTECH CO., LTD - ADVANTECH and B&B are trademarks of ADVANTECH CO., LTD

AES Audio Engineering Society - AES and Audio Engineering Society are trademarks of the Audio Engineering Society

aescripts + aeplugins - ZXPInstaller Copyright aescripts + aeplugins 2023

AIMS Alliance - The AIMS Alliance is a trademark of Alliance for IP Media Solutions (AIMS).

AJA Video Systems, Inc. - AJA® is a registered trademark of AJA Video Systems, Inc. AJA™ is a trademark of AJA Video Systems, Inc. Corvid Ultra®, KONA®, IO®, KUMO®, U-Tap®, and T-Tap® are registered trademarks of AJA Video Systems, Inc.

Amazon Web Services, Inc. - Amazon, AWS and Smile Logo, Powered by AWS Logo, AWS Co-Marketing Tools, the Partner Logo, the Program Marks, Amazon Web Services, AWS, AWS S3, and the names of AWS products, services, programs, and initiatives are trademarks or registered trademarks of Amazon Web Services, Inc.

Amberfin Limited - AMBERFIN is a trademark of Amberfin Limited.

AMERICAN BROADCASTING COMPANIES, INC - ABC is a trademark of AMERICAN BROADCASTING COMPANIES, INC

American Cinematographer - The ASC, American Cinematographer and Friends of the ASC are trademarks of the American Society of Cinematographers. (All rights reserved)

AMWA Advanced Media Workflow Association, Inc. - Copyright © 2025 AMWA – Advanced Media Workflow Association. All rights reserved.

Animation Magazine - © 2025 Animation Magazine. All Rights Reserved. The Business, Technology & Art Of Animation And VFX

Apple Inc. - Apple, the Apple logo, Final Cut, Final Cut Pro, Apple TV, iOS, iPad, iPhone, iPod touch, iTunes, Mac, Mac OS X, macOS, Shake, Final Cut Pro, ProRes, High Sierra, Mojave, Ventura, Sonoma, M1, M2, and QuickTime are trademarks of Apple Inc., registered in the U.S. and other countries. OpenCL and the OpenCL logo™ are trademarks owned by Apple Inc. and licensed to the Khronos Group.

ARRI AG – ARRI, Arri T-Link, and Alexa are registered trademarks of the ARRI Group

ASSIMILATE® Inc. - Assimilate SCRATCH and Assimilate SCRATCH Lab are either trademarks or registered trademarks of ASSIMILATE® Inc. or its subsidiaries in the United States and/or other countries.

ATI TECHNOLOGIES ULC - ATI is a trademark of ATI TECHNOLOGIES ULC

ATSC: The Broadcast Standards Association - © 2025 ATSC Advanced Television Systems Committee, Inc.

Autodesk, Inc. - Autodesk, Discreet, Flame, Flare, Smoke, Lustre, Maya, and Moxion are either trademarks or registered trademarks of Autodesk, Inc. or its subsidiaries in the United States and/or other countries.

Avid Technology, Inc. - Avid Media Composer®, Avid MediaCentral®, Avid Interplay®, ProTools®, and Avid NewsCutter® are either trademarks or registered trademarks of Avid Technology, Inc. or its subsidiaries in the United States and/or other countries.

Axis Communications AB - Axis is a registered trademark of Axis Communications AB

Bell Media Inc. - Bell Media, BNN, CP24, CTV, CTV TWO, Much, MuchMusic and The Comedy Network, and all associated designs and logos are trademarks of Bell Media Inc.

Belle Nuit Montage - Matthias Bürcher August 2000-2016. All rights reserved. Written in Switzerland. Starting 2016 Belle Nuit Subtitler is released under the GNU Lesser General Public License

BirdDog Software Corporation - BIRDDOG is a trademark of BirdDog Software Corporation

Blackmagic Design Pty. Ltd. - DaVinci Resolve, DaVinci Fusion, UltraStudio, DeckLink, Intensity Pro 4K, UltraScope, and RED are either trademarks or registered trademarks of Blackmagic Design Pty. Ltd. or its subsidiaries in the United States and/or other countries.

Bluefish Technologies - Bluefish444, IngeStore, Symmetry, Kronos, Epoch, Epoch:Neutron, Fury, Lust, Vengeance HD, Deepblue, Envy SD, and Epoch:SuperNova are trademarks of Bluefish Technologies

Boris FX, Inc. - Boris FX, Sapphire, and Silhouette are trademarks of Boris FX, Inc.

Bridge Digital, Inc. - Bridge Digital is a trademark of Bridge Digital, Inc.

Bright Technologies, Inc. - Bright and Bright Systems are trademarks of Bright Technologies, Inc.

British Broadcasting Corporation - BBC is a trademark of British Broadcasting Corporation

Broadcast Beat - © 2025 Relevant Media Properties, LLC. All Rights Reserved.

BT Group plc - BT is a trademark of BT Group plc

Cable News Network, Inc. - CNN is a trademark of Cable News Network, Inc.

Canadian Federal Institutions - Official symbols of federal institutions, including the Arms of Canada may not be reproduced, whether for commercial or non-commercial purposes, without prior written authorization.

CANON KABUSHIKI KAISHA - CANON is a trademark of CANON KABUSHIKI KAISHA

Catapult Group International Ltd - Catapult is a trademark owned by Catapult Group International Ltd

Changsha Kiloview Electronics Co., Ltd - KILOVIEW is a trademark of Changsha Kiloview Electronics Co., Ltd

Charter Communications Inc. - Charter Communications is a trademark of Charter Communications Inc.

CineSys LLC - CineSys is a registered trademark of CineSys LLC.

Cisco Systems, Inc. - Cisco, and Webex are registered trademarks of Cisco Systems, Inc.

Cloudfirst Technology Solutions Inc. - Cloudfirst is a registered trademark of Cloudfirst Technology Solutions Inc.

Cobalt Digital - Cobalt Digital is a registered trademark of Cobalt Digital Inc.

Codex Corporation - CODEX and Action Cam are trademarks of Codex Corporation

Comcast Corporation - Sky UK Limited is a wholly owned subsidiary of Comcast Corporation

Control Corporation - Control is a registered trademark of Control Corporation

CoreCodec, Inc. - MATROSKA is a trademark of CoreCodec, Inc.

Corel Corporation - WinZip, the WinZip vise and file logo, and Pinnacle are registered trademarks of Corel Corporation

CORSAIR MEMORY, INC. - ELGATO is a trademark of CORSAIR MEMORY, INC.

Corus Entertainment Inc. - CORUS is a trademark of Corus Entertainment Inc.

Crayon Software Experts Spain SL - Crayon is a trademark of Crayon Software Experts Spain SL

CrypKey Inc (formerly Kenonics) - CrypKey is a registered trademark of CrypKey Inc.

Deadline - Deadline is a part of Penske Media Corporation. © 2025 Deadline Hollywood, LLC. All Rights Reserved.

Deltacast - © Copyright 2024 DELTACAST. All rights reserved

Deluxe Media Inc. - Deluxe is a trademark of Deluxe Media Inc.

Digital Formation, Inc. - Digital Formation is a Copyright of Digital Formation, Inc.

Digital Video Systems Ltd - DVS is a trademark of Digital Video Systems Ltd

DIGITNOW! - Digitnow is a trademark of DIGITNOW!

Docker Inc. - DOCKER is a trademark of Docker, Inc.

Dolby Laboratories - Dolby, Dolby Vision, the double-D symbol, and Millicast are registered trademarks of Dolby Laboratories.

DPP - The Digital Production Partnership - DPP is a registered trademark | Digital Production Partnership © 2025

DTS - DTS, the Symbol, and DTS and the Symbol together are registered trademarks of DTS, Inc.

Dublin Core™ Metadata Initiative - "Dublin Core" is a protected under common law trademark of the Dublin Core™ Metadata Initiative.

Eastman Kodak Company - Cineon™ is a trademark of Eastman Kodak Company

Eaton Corporation plc - Eaton, Tripp Lite, and PowerAlert are registered trademarks of Eaton Corporation plc

EBU - Copyright EBU 2025. All rights reserved.

Empress Media Asset Management (eMAM) - eMAM, and eMAMDirector are registered trademarks of Empress Media Asset Management (eMAM)

Entertainment and Sports Programming Network - ESPN is a trademark of Entertainment and Sports Programming Network

Epiphan - All Epiphan product names and logos are trademarks or registered trademarks of Epiphan

Evercast, LLC - EVERCAST is a trademark owned by Evercast, LLC

Evertz Technologies Limited - Evertz is a registered trademark of Evertz Technologies Limited

EVS Broadcast Equipment - EVS is a registered trademark of EVS Broadcast Equipment

Fabrice Bellard - FFmpeg is a trademark of Fabrice Bellard

Filestage GmbH - Filestage is a trademark of Filestage GmbH

FilmLight Ltd. - FilmLight and BaseLight are trademarks of FilmLight Ltd.

Filmworkz - Filmworkz is an operating brand of BlissTek Ltd. BlissTek Ltd. Filmworkz Nucoda is either a trademark or registered trademark of BlissTek Ltd. or its subsidiaries in England, Wales, and/or other countries.

For-A - For-A is a registered trademark of FOR-A COMPANY LIMITED, Copyright © FOR-A Company Limited.

France Télévisions - France.tv is a trademark of France Télévisions

Fraunhofer IIS and Thomson Multimedia - MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson Multimedia.

Fraunhofer-Gesellschaft zur Förderung der angewandten Forschung e.V. - EASYDCP is a trademark and brand of Fraunhofer-Gesellschaft zur Förderung der angewandten Forschung e.V..

Free Software Foundation (FSF) - Portions of this product are licensed under LGPL, governed by the GNU LESSER GENERAL PUBLIC LICENSE, published by the Free Software Foundation (FSF).

Ftrack AB - FTRACK is a trademark and brand of Ftrack AB

Gen Digital Inc. (formerly Symantec Corporation and NortonLifeLock) - Symantec, Symantec Endpoint Virtualization Suite, Sygate, Altiris, and Altiris Virtualization Agent are registered trademarks of Gen Digital Inc.

Google LLC - YouTube, Google, Google Cloud, Google.meet.com, and Android are registered trademarks of Google LLC

GoPro, Inc. - Cineform® is a trademark or registered trademark of GoPro, Inc.

Grass Valley USA, LLC - Grass Valley®, GV®, the Grass Valley logo, and EDIUS® are trademarks or registered trademarks of Grass Valley USA, LLC, or its affiliated companies in the United States and other jurisdictions.

HaiVision Systems, Inc. - Haivision is a registered trademark of HaiVision Systems, Inc.

Harmonic - Harmonic is a registered trademark of Harmonic Inc.

Harris Corporation - Harris, and Leitch Technology Corp. are registered trademarks of Harris Corporation

Hewlett Packard Enterprise Company - OpenGL and SGI are registered trademarks and the OpenGL SC logo is a trademark of Hewlett Packard Enterprise Company

Hewlett Packard Group LLC - HP is a trademark of HP Hewlett Packard Group LLC.

i-scream - i-scream is a trademark of i-scream

IABM - © 2025 IABM IABM is company limited by guarantee. Registered in England No: 5262009. Registered Office: IABM, 5 Deansway, Worcester, WR1 2JG

IBC - IBC (International Broadcasting Convention) is owned and run by the IBC Partnership, comprising six industry bodies: IEEE, IET, IABM, SCTE, SMPTE, and RTS.

Ideal Systems Asia Pacific Ltd. - Ideal Systems is a registered trademark of Ideal Systems Asia Pacific Ltd.

IEEE - IEEE Broadcast Technology Society - The IEEE emblem is a trademark owned by the IEEE for the purpose of indicating membership in the IEEE.

Ikegami Electronics (USA) Inc. - EditCam is a registered trademark of Ikegami Electronics (USA) Inc.

Indiecam GmbH - IndieCam is a registered trademark of Indiecam GmbH

Infocomm - InfoComm, AVIXA and associated logos are a trademark or registered trademark of AVIXA

INOGENI Inc - INOGENI® is a Registered Trademark and TOGGLE is a Trademark of INOGENI Inc

Institute of Electrical and Electronics Engineers - IRE is a trademark of the Institute of Electrical and Electronics Engineers

INTEL CORPORATION - INTEL is a trademark of INTEL CORPORATION

International Business Machines Corporation ("IBM") - IBM® is a trademark owned by International Business Machines Corporation ("IBM") and might also be trademarked or a registered trademark in other countries

Interactive Effects, Inc. - Piranha is a registered trademark of Interactive Effects, Inc.

Intraware, Inc. - Intraware is a registered trademark of Intraware, Inc.

IO Industries Ltd. - IO Industries is a trademark of IO Industries Ltd.

Iteris, Inc. - Odetics is a registered trademark of Iteris, Inc.

JVC KENWOOD CORPORATION - JVC is a trademark of JVC KENWOOD CORPORATION

Kinefinity Inc. - KINEFINITY is a trademark of Kinefinity Inc.

L3Harris Technologies, Inc. - Louth is a trademark of L3Harris Technologies, Inc.

LeeLu Soft - Watch 4 Folder is a trademark of LeeLu Soft

LinkedIn Corporation - LinkedIn is a trademark of LinkedIn Corporation

Linus Torvalds - Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Logitech International SA - LOGITECH is a trademark of Logitech International SA

LogMeIn, Inc. - GoTo is a trademarks and service marks of LogMeIn, Inc., and may be registered in the U.S. Patent and Trademark Office and in other countries.

Louper.io Ltd - Louper.io is a trademark of Louper.io Ltd

Magic Lantern - Magic Lantern is a registered trademark of Magic Lantern

MAINCONCEPT GMBH - MAIN CONCEPT is a trademark of MAINCONCEPT GMBH

Marshall Electronics, Inc. - Marshall is a registered trademark of Marshall Electronics, Inc.

Mastercard International Incorporated - Mastercard is a trademark of Mastercard International Incorporated

Matrox Electronic Systems, Ltd - Matrox and Matrox product names are registered trademarks and/or trademarks of Matrox Electronic Systems, Ltd.

MediaArea.net SARL - MediaInfo - Copyright © 2002-2013 MediaArea.net SARL. All rights reserved.

Mellanox Technologies, Inc - Mellanox® and ConnectX® are registered trademarks of Mellanox Technologies, Inc

Meta Platforms, Inc - Facebook and Instagram are trademarks of Meta Platforms, Inc

Metro-Goldwyn-Mayer Studios, Inc. - Metro Goldwyn Mayer, and MGM, are trademarks of Metro-Goldwyn-Mayer Studios, Inc.

Microsoft Corporation - Microsoft: Windows®, Video For Windows (VFW), DirectShow, Microsoft, Skype, Microsoft Azure, Microsoft Teams, Wave Mapper, Microsoft, Windows NT|2000|XP|XP Professional|Server 2003|Server 2008 |Server 2012, Windows 7, Windows 8, Windows 10, Media Player, Media Encoder, Windows Defender, Microsoft Office, .Net, Internet Explorer, SQL Server 2005|2008|2012|2014, Windows Media Technologies and Internet Explorer are trademarks of Microsoft Corporation.

MPEG LA - MPEG LA licenses patent pools covering essential patents required for use of the MPEG-2, MPEG-4, IEEE 1394, VC-1, ATSC, MVC, MPEG-2 Systems, AVC/H.264 and HEVC standards.

Nanjing Magewell Electronics Co. - Magewell™, ULTRA STREAM® and (the MAGEWELL Logo) are trademarks or registered trademarks of Nanjing Magewell Electronics Co.

National Aeronautics and Space Administration - NASA is a registered trademark of The National Aeronautics and Space Administration

National Geographic Society - NATIONAL GEOGRAPHIC is a trademark of National Geographic Society

NBA Properties, Inc. - NBA and the NBA logo are trademarks of NBA Properties, Inc.

NBC UNIVERSAL MEDIA, LLC - NBC and NBC Universal are trademarks of NBC UNIVERSAL MEDIA, LLC

Netflix, Inc. - Netflix is a registered trademark of Netflix, Inc.

Nevion - copyright NEVION - All rights reserved. Nevion @ 2023

New Media Manitoba - Copyright © 2025 New Media Manitoba

NewTek, Inc. - NDI, TriCaster, 3Play, TalkShow, Video Toaster, LightWave 3D, and Broadcast Minds are registered trademarks of NewTek, Inc.

Nexidia Inc. - NEXIDIA is a trademark owned by Nexidia Inc.

NGC Corporation - NGC is a registered trademark of NGC Corporation

Nippon Hatsujo Kabushiki Kaisha - NHK is a trademark of Nippon Hatsujo Kabushiki Kaisha

Nokia Corporation - OSPREY is a trademark owned by Nokia Corporation

NVIDIA Corporation - NVIDIA, the NVIDIA logo, NVIDIA Quadro, Rivermax, BlueField2, PhysX, and NVIDIA RTX are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and/or other countries

Object Matrix Limited - ObjectMatrix, and Object Matrix are registered trademarks of Object Matrix Limited

Omneon Video Networks, Inc - Omneon is a trademark of Omneon Video Networks, Inc

ONVIF - the ONVIF primary trademark is the word, "ONVIF". This trademark has been registered in the United States, European Union, China, Japan and other countries throughout the world.

OpenSSL Project Authors - OpenSSL is a trademark of OpenSSL Project Authors

Oracle Corporation - Oracle®, Java, Front Porch Digital, and MySQL are registered trademarks of Oracle Corporation and/or its affiliates.

Panasonic Holdings Co., Ltd - Panasonic, and Varicam are trademarks of Panasonic Holdings Co., Ltd

PayPal, Inc. - PAYPAL is a trademark of PayPal, Inc.

PELOTON INTERACTIVE, INC. - PELOTON is a trademark of PELOTON INTERACTIVE, INC.

Pioneer Corporation - Pioneer is a registered trademark of Pioneer Corporation

Post Magazine - © Copyright 2024 Post Magazine. All Rights Reserved.

ProAV - PRO AV SYSTEMS is a trademark of Pro AV Systems, Inc

Production Weekly - Copyright © 2015-2025 Production Weekly

RE:Vision Effects, Inc. - RE:Vision Effects is a registered trademark of RE:Vision Effects, Inc.

Red Hat, Inc. - Red Hat, and the Red Hat logo are trademarks or registered trademarks of Red Hat, Inc. or its subsidiaries in the United States and other countries

Reddit - Reddit's trademarks and other brand assets are owned by Reddit.

Rogers Communications Inc. - Rogers and related marks are trademarks of Rogers Communications Inc. or an affiliate, used under licence.

Ross Video - ©2022 Ross Video Limited, Ross®, MiniME™, and any related marks are trademarks or registered trademarks of Ross Video Limited

Shenzhen Yunlang Technology Co., Ltd. - MOKOSE is a trademark of Shenzhen Yunlang Technology Co., Ltd.

Sigma Design Company, LLC - Sigma Design is a registered trademark of Sigma Design Company, LLC

Sinclair Broadcast Group, Inc. - Sinclair Broadcast Group is a trademark of Sinclair Broadcast Group, Inc.

Snell & Wilcox Limited - SNELL & WILCOX, and Quantel are trademarks owned by Snell & Wilcox Limited

Society of Broadcast Engineers - Copyright, Society of Broadcast Engineers Chapter One, all rights reserved. The SBE logo is used by permission of the Society of Broadcast Engineers.

Society of Cable Telecommunications Engineers (SCTE) - ©2025 Society of Cable Telecommunications Engineers, Inc. is a subsidiary of CableLabs. All rights reserved.

Society of Motion Picture and Television Engineers - Motion Imaging Journal and SMPTE are trademarks of Society of Motion Picture and Television Engineers.

SoftNI Corporation - SoftNI is a trademark of SoftNI Corporation

Sony Corporation - Sony, Sony DVD Architect, DVD, Catalyst, and Vegas are trademarks of Sony Corporation and/or its affiliates.

Sound On Sound - copyright © SOS Publications Group and/or its licensors, 1985-2025. All rights reserved.

SRT (Secure Reliable Transport) - SRT, developed by Harvision, is a royalty free, open source protocol

Streambox Inc. - Streambox is a trademark of Streambox Inc.

Streaming Media - Copyright © 2009 - 2025 Streaming Media Magazine

STREAMWELL LLC - Streamwell is a trademark of STREAMWELL LLC

Technicolor Creative Studios SA - Technicolor is a trademark of Technicolor Creative Studios SA

TechSmith Corporation - CAMTASIA STUDIO is a trademark of TechSmith Corporation

Tektronix, Inc. - Tektronix® and all identified Tektronix trademarks and logos are the property of Tektronix, Inc. or its wholly-owned subsidiaries

Telestream, LLC - Telestream, is a registered trademark, and MacCaption and CaptionMaker are trademarks of Telestream, LLC

The Apache Software Foundation (ASF) - Apache is a registered trademark of The Apache Software Foundation

The Foundry Visionmongers Ltd. - Nuke™ is a trademark of The Foundry Visionmongers Ltd.

The Perl Foundation - Perl and the Perl logo are trademarks of The Perl Foundation

The Qt Company Ltd - The Qt Company Ltd and its subsidiaries ("The Qt Company") is the owner of Qt trademarks ("Qt trademarks") worldwide, and "froglogic", "Squish" and "Coco" are trademarks of the Qt Company Ltd.

THE UNIVISION NETWORK LIMITED PARTNERSHIP - UNIVISION is a trademark of THE UNIVISION NETWORK LIMITED PARTNERSHIP

The Walt Disney Company - Disney, and The Walt Disney Company are trademarks of The Walt Disney Company. LucasFilm is a wholly owned subsidiary of The Walt Disney Company

Toolfarm.com Inc. - Toolfarm is a registered trademark of Toolfarm.com Inc.

Trend Micro Inc. - TrendMicro, and TrendMicro System Protection and registered trademarks of Trend Micro Inc.

Truevision, Inc - TARGA is a registered trademark of Truevision, Inc

TV Asahi Corporation - TV Asahi is a trademark of TV Asahi Corporation

TV Technology - TV Tech is part of Future US Inc, an international media group and leading digital publisher. © Future US, Inc. Full 7th Floor, 130 West 42nd Street, New York, NY 10036.

Twitch Interactive, Inc - TWITCH, the TWITCH Logo, the Glitch Logo, and/or TWITCHTV are trademarks of Twitch Interactive, Inc. or its affiliates.

Twitter, Inc. - Twitter is a wholly owned subsidiary of X Holdings Corp.

Tyler Perry Studios, LLC - Tyler Perry Studios is a trademark of Tyler Perry Studios, LLC

Vefxi Corporation - VEFXi DiamondBlade is a registered trademark of Vefxi Corporation

ViaLA - Via Licensing®, ViaSecure® and the Via logo are registered service marks, and any other Via Licensing names, titles or logos are trademarks or service marks, in each case, of Via Licensing Corporation, and are protected by law.

Video Clarity, Inc. - Video Clarity and ClearView are trademarks of Video Clarity, Inc.

Video Services Forum - ©2024 Video Services Forum

VideoLAN Non-profit Organization - VideoLAN, VLC, VLC media player and x264 are trademarks internationally registered by the VideoLAN non-profit organization

Videomaker - © Videomaker Inc., 1986 – 2025

Visa International - Visa is a registered trademark of Visa International

Vision Research, Inc - PHANTOM is a trademark of Vision Research, Inc

VITEC - Names and logos identifying products of VITEC are registered trademarks or trademarks of VITEC respectively

Vizrt - VIZRT is a trademark of VIZRT AG.

Warner Bros. Discovery - Discovery, Turner, and Home Box Office, Inc. (HBO), are trademarks of Warner Bros. Discovery

Weisscam GmbH - Weisscam is a trademark and brand of Weisscam GmbH

Wheatstone - ® Wheatstone, Audioarts, and VoxPro are registered trademarks and Wheatstone Layers is a trademark of Wheatstone Corporation

Wizards of OBS, LLC - UNIX, OBS, Open Broadcast Software, the OBS logo, and OBS Studio are trademarks of Wizards of OBS, LLC (The Company)

World Animation Summit - © 2025 Animation Magazine. All Rights Reserved.

World Wrestling Entertainment, Inc. - WWE is a trademark of World Wrestling Entertainment, Inc.

Wowza Media Systems, LLC - Wowza is a trademark of Wowza Media Systems, LLC

wxWidgets - wxWidgets is a trademark of wxWidgets

Xceed Software Inc. - Xceed DataGrid for JavaScript, Xceed Ultimate ListBox for Silverlight, Xceed DataGrid for Silverlight, Xceed DataGrid for WPF, Xceed Grid for .NET, Xceed Zip for .NET, Xceed Real-Time Zip for Silverlight, Xceed Upload for Silverlight, Xceed Zip Compression Library, Xceed FTP for .NET, Xceed Chart for .NET, Xceed Chart for ASP.NET, Xceed SmartUI for .NET, Xceed SmartUI, Xceed Encryption Library, Xceed Binary Encoding Library, Xceed Streaming Compression Library, Xceed Streaming Compression for .NET, Xceed Zip for .NET Compact Framework, Xceed Ultimate Suite, Xceed Data Manipulation Suite, Xceed Absolute Packager are trademarks of Xceed Software Inc.

Xena Networks - Xena is a trademark of Xena Networks

Zapex Technologies - Zapex is a registered trademark of Zapex Technologies
Zhang Haijun - RYBOZEN is a trademark of Zhang Haijun
Ziflow Limited - Ziflow is a trademark of Ziflow Limited
Zixi - Zixi Software and any logos or icons identifying Zixi and the Zixi Software are trademarks of Zixi.
ZLIB - The ZLIB Compressed Data Format Specification is Copyright (C) 1995-2013 Jean-Loup Gailly and Mark Adler.
Zoom Video Communications, Inc. - Zoom and the Zoom logo are trademarks of Zoom Video Communications, Inc.

LGPL: Portions of this product are licensed under LGPL, governed by the following license:

GNU LESSER GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<https://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

This version of the GNU Lesser General Public License incorporates the terms and conditions of version 3 of the GNU General Public License, supplemented by the additional permissions listed below.

0. Additional Definitions.

As used herein, "this License" refers to version 3 of the GNU Lesser General Public License, and the "GNU GPL" refers to version 3 of the GNU General Public License.

"The Library" refers to a covered work governed by this License, other than an Application or a Combined Work as defined below.

An "Application" is any work that makes use of an interface provided by the Library, but which is not otherwise based on the Library. Defining a subclass of a class defined by the Library is deemed a mode of using an interface provided by the Library.

A "Combined Work" is a work produced by combining or linking an Application with the Library. The particular version of the Library with which the Combined Work was made is also called the "Linked Version".

The "Minimal Corresponding Source" for a Combined Work means the Corresponding Source for the Combined Work, excluding any source code for portions of the Combined Work that, considered in isolation, are based on the Application, and not on the Linked Version.

The "Corresponding Application Code" for a Combined Work means the object code and/or source code for the Application, including any data and utility programs needed for reproducing the Combined Work from the Application, but excluding the System Libraries of the Combined Work.

1. Exception to Section 3 of the GNU GPL.

You may convey a covered work under sections 3 and 4 of this License without being bound by section 3 of the GNU GPL.

2. Conveying Modified Versions.

If you modify a copy of the Library, and, in your modifications, a facility refers to a function or data to be supplied by an Application that uses the facility (other than as an argument passed when the facility is invoked), then you may convey a copy of the modified version:

- a) under this License, provided that you make a good faith effort to ensure that, in the event an Application does not supply the function or data, the facility still operates, and performs whatever part of its purpose remains meaningful, or
- b) under the GNU GPL, with none of the additional permissions of this License applicable to that copy.

3. Object Code Incorporating Material from Library Header Files.

The object code form of an Application may incorporate material from a header file that is part of the Library. You may convey such object code under terms of your choice, provided that, if the incorporated material is not limited to numerical parameters, data structure layouts and accessors, or small macros, inline functions and templates (ten or fewer lines in length), you do both of the following:

- a) Give prominent notice with each copy of the object code that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the object code with a copy of the GNU GPL and this license document.

4. Combined Works.

You may convey a Combined Work under terms of your choice that, taken together, effectively do not restrict modification of the portions of the Library contained in the Combined Work and reverse engineering for debugging such modifications, if you also do each of the following:

- a) Give prominent notice with each copy of the Combined Work that the Library is used in it and that the Library and its use are covered by this License.
- b) Accompany the Combined Work with a copy of the GNU GPL and this license document.
- c) For a Combined Work that displays copyright notices during execution, include the copyright notice for the Library among these notices, as well as a reference directing the user to the copies of the GNU GPL and this license document.
- d) Do one of the following:
 - 0) Convey the Minimal Corresponding Source under the terms of this License, and the Corresponding Application Code in a form suitable for, and under terms that permit, the user to recombine or relink the Application with a modified version of the Linked Version to produce a modified Combined Work, in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.
 - 1) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (a) uses at run time a copy of the Library already present on the user's computer system, and (b) will operate properly with a modified version of the Library that is interface-compatible with the Linked Version.
- e) Provide Installation Information, but only if you would otherwise be required to provide such information under section 6 of the GNU GPL, and only to the extent that such information is necessary to install and execute a modified version of the Combined Work produced by recombining or relinking the Application with a modified version of the Linked Version. (If you use option 4d0, the Installation Information must accompany the Minimal Corresponding Source and Corresponding Application Code. If you use option 4d1, you must provide the Installation Information in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.)

5. Combined Libraries.

You may place library facilities that are a work based on the Library side by side in a single library together with other library facilities that are not Applications and are not covered by this License, and convey such a combined library under terms of your choice, if you do both of the following:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities, conveyed under the terms of this License.
- b) Give prominent notice with the combined library that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

6. Revised Versions of the GNU Lesser General Public License.

The Free Software Foundation may publish revised and/or new versions of the GNU Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library as you received it specifies that a certain numbered version of the GNU Lesser General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that published version or of any later version published by the Free Software Foundation. If the Library as you received it does not specify a version number of the GNU Lesser General Public License, you may choose any version of the GNU Lesser General Public License ever published by the Free Software Foundation.

If the Library as you received it specifies that a proxy can decide whether future versions of the GNU Lesser General Public License shall apply, that proxy's public statement of acceptance of any version is permanent authorization for you to choose that version for the Library.

Other brands, product names, and company names are trademarks of their respective holders, and are used for identification purpose only.

MPEG Disclaimers

MPEGLA MPEG2 Patent

ANY USE OF THIS PRODUCT IN ANY MANNER OTHER THAN PERSONAL USE THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, LLC, 4600 S. Ulster Street, Suite 400, Denver, Colorado 80237 U.S.A.

MPEGLA MPEG4 VISUAL

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

MPEGLA AVC

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

MPEG4 SYSTEMS

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 SYSTEMS PATENT PORTFOLIO LICENSE FOR ENCODING IN COMPLIANCE WITH THE MPEG-4 SYSTEMS STANDARD, EXCEPT THAT AN ADDITIONAL LICENSE AND PAYMENT OF ROYALTIES ARE NECESSARY FOR ENCODING IN CONNECTION WITH (i) DATA STORED OR REPLICATED IN PHYSICAL MEDIA WHICH IS PAID FOR ON A TITLE BY TITLE BASIS AND/OR (ii) DATA WHICH IS PAID FOR ON A TITLE BY TITLE BASIS AND IS TRANSMITTED TO AN END USER FOR PERMANENT STORAGE AND/OR USE. SUCH ADDITIONAL LICENSE MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com) FOR ADDITIONAL DETAILS.

Drastic Technologies Limited Warranty and Disclaimers

Drastic Technologies Ltd (the Company) warrants to the original registered end user that the product will perform as stated below for a period of ninety (90) days from the date of licensing or; in the case of hardware, for a period matching the warranty period offered by the original manufacturer of said equipment.

Hardware and Media—The Product hardware components, if any, including equipment supplied but not manufactured by the Company but NOT including any third party equipment that has been substituted

by the Distributor or customer for such equipment (the "Hardware"), will be free from defects in materials and workmanship under normal operating conditions and use.

Warranty Remedies

Your sole remedies under this limited warranty are as follows:

Hardware and Media—The Company will either repair or replace (at its option) any defective Hardware component or part, or Software Media, with new or like new Hardware components or Software Media. Components may not be necessarily the same, but will be of equivalent operation and quality.

Software Updates

Except as may be provided in a separate agreement between Drastic Technologies and You, if any, Drastic Technologies is under no obligation to maintain or support the Software and Drastic Technologies has no obligation to furnish you with any further assistance, technical support, documentation, software, update, upgrades, or information of any nature or kind.

Restrictions and Conditions of Limited Warranty

This Limited Warranty will be void and of no force and effect if (i) Product Hardware or Software Media, or any part thereof, is damaged due to abuse, misuse, alteration, neglect, or shipping, or as a result of service or modification by a party other than the Company, or (ii) Software is modified without the written consent of the Company.

Limitations of Warranties

THE EXPRESS WARRANTIES SET FORTH IN THIS AGREEMENT ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. No oral or written information or advice given by the Company, its distributors, dealers or agents, shall increase the scope of this Limited Warranty or create any new warranties.

Geographical Limitation of Warranty—This limited warranty is valid only within the country in which the Product is purchased/licensed.

Limitations on Remedies—YOUR EXCLUSIVE REMEDIES, AND THE ENTIRE LIABILITY OF Drastic Technologies Ltd WITH RESPECT TO THE PRODUCT, SHALL BE AS STATED IN THIS LIMITED WARRANTY. Your sole and exclusive remedy for any and all breaches of any Limited Warranty by the Company shall be the recovery of reasonable damages which, in the aggregate, shall not exceed the total amount of the combined license fee and purchase price paid by you for the Product.

Damages


Drastic Technologies Ltd SHALL NOT BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OR INABILITY TO USE THE PRODUCT, OR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF THOSE DAMAGES, OR ANY REMEDY PROVIDED FAILS OF ITS ESSENTIAL PURPOSE.

Further information regarding this limited warranty may be obtained by writing:

Drastic Technologies Ltd
523 The Queensway, Suite 201

Toronto, ON, M8V 1J7
Telephone: (416) 255-5636

About 2110Scope

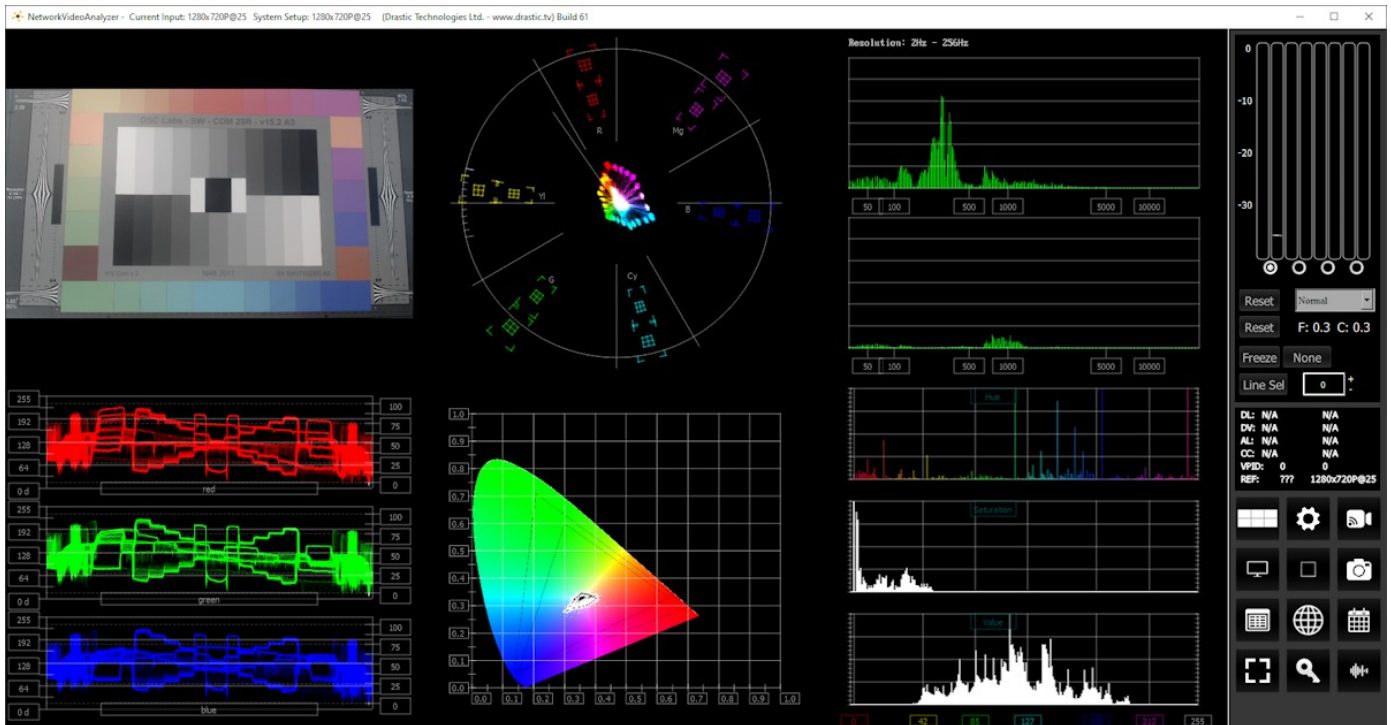

2110Scope is the world's most powerful ST2110/2022 (and optionally baseband video signals and TR-01) software signal monitoring tool.

2110Scope is designed to take advantage of standard NICs as well as AJA's and Matrox's IP capture hardware. It supports both Rec.709 or BT.2020 and SDR as well as HDR analysis. The 2110Scope provides the most cost effective IP signal monitoring solution available. 2110Scope is available for CentOS/Red Hat or Windows 10 or greater.

It provides the following signal analysis tools:


- Picture, with zoom and pan
- Closed caption detection, decode and displayed
- Multiple time code display
- Data View with Ancillary Data Streams view
- Vectorscope
- YCbCr Waveform Monitor (stacked, parade, or luma only)
- RGB Waveform Monitor (stacked, parade, or overlay)
- Histogram YCbCr
- Histogram RGB
- Histogram HSV
- Histogram Luma
- H/S (hue/saturation) Scope
- Chromaticity
- IP Timing
- Status, including MaxCLL and MaxFALL
- Anc Monitor
- Audio Vectorscope (Lissajousxy, Lissajous, Polar)

- Audio Phase
- Audio Histogram (logarithmic or linear)
- Audio Waveform Monitor
- Audio Spectrum Scope (mono or stereo, various scaling functions)
- Audio Loudness Meter Scope
- Audio Surround Sound Scope
- In-GUI Audio Meters (Loudness, RMS and Peak)
- Freeze and compare
- Save signal and scopes to image
- Standard desktop software with remote access

Reference

The reference section provides a detailed look at each of the elements in the **2110Scope** graphical user interface.


Main Interface Overview

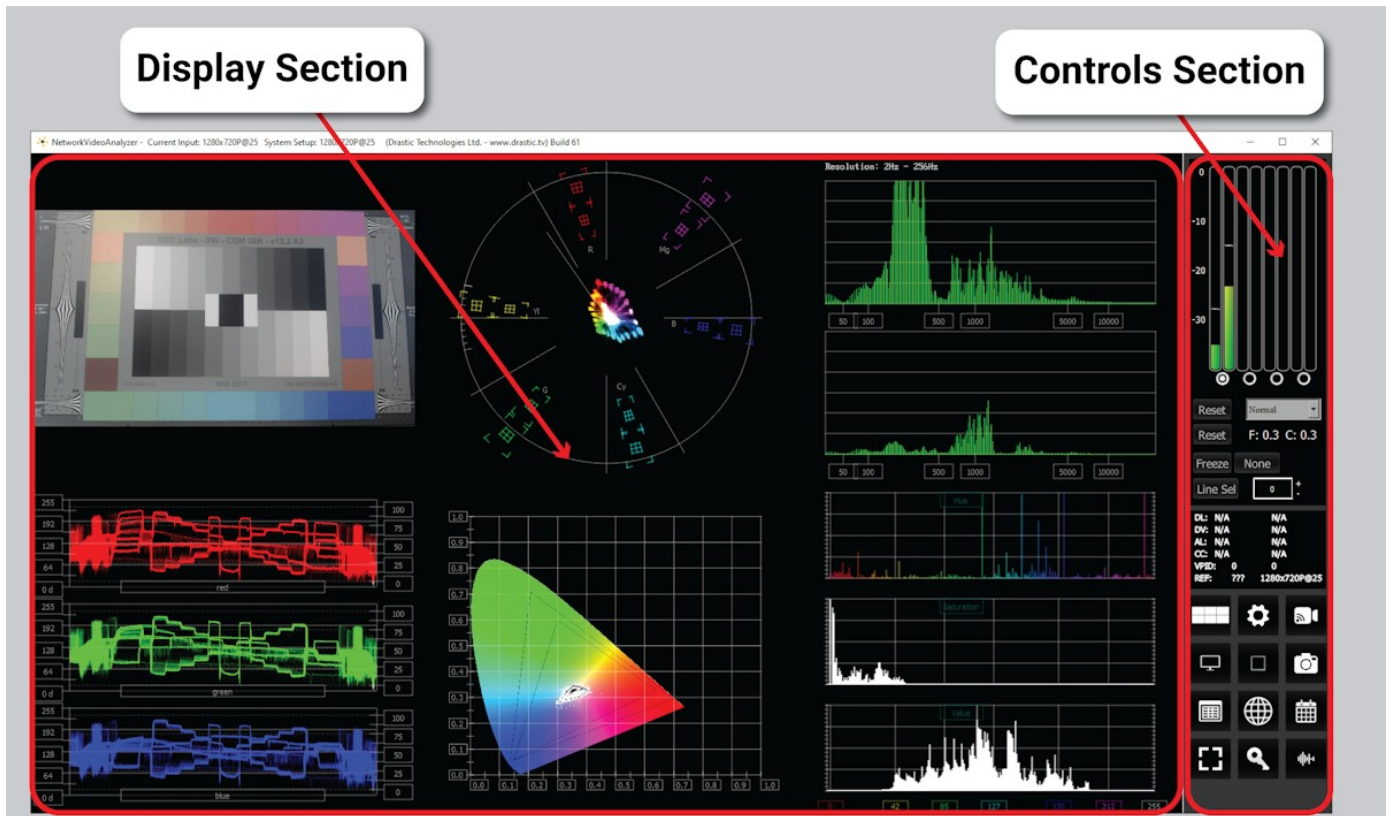

Display section – to the left of the controls (the main portion of the GUI) is the screen where the various scopes, meters, or data will be displayed. 2110Scope features four different layouts: single, side by side, four quadrants, and six up (three across, two down). These can be selected in the Scope Config window. The Data View can be selected by clicking the Data View button in the Controls section.

Controls section – The panel on the right with the audio controls, status display, and access buttons is the Controls section. Following are details for the Controls section.

Audio Controls and Displays

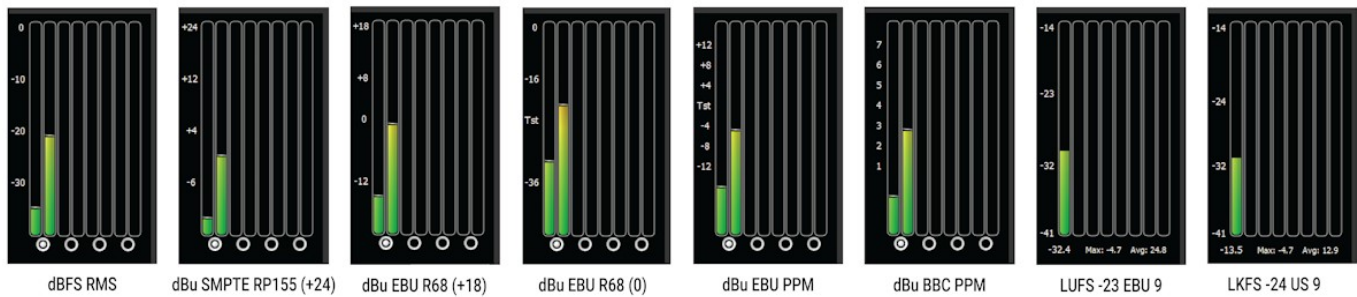


Audio display and pair selectors – At the top of the Controls section there are either 8 or 16 audio meters for loudness or Peak/RMS (Root Mean Square) display. The buttons just below the meters allow the user to select between audio pairs for monitoring. Various types of audio meters may be selected using the Audio Scale pulldown in the Configuration Settings window.

In the above spread, the types are all shown (L-R):


- dBFS RMS - decibels relative to Full Scale, root mean squared
- dBu SMPTE RP155 (+24) – decibel units, SMPTE RP155
- dBu EBU R68 (+18) - decibel units, EBU R68
- dBu EBU R68 (0) - decibel units, EBU R68
- dBu EBU PPM - decibel units, EBU peak programme meter
- dBu BBC PPM - decibel units, BBC peak programme meter
- LUFS -23 EBU 9 - Loudness Units relative to full scale, -23 EBU 9
- LKFS -24 US 9 - Loudness, K-weighted, relative to full scale, -24 US 9

Loudness Settings

With either of the loudness scales set, a Config button becomes available.



Pressing this will open the **Loudness Meter Config** dialog.

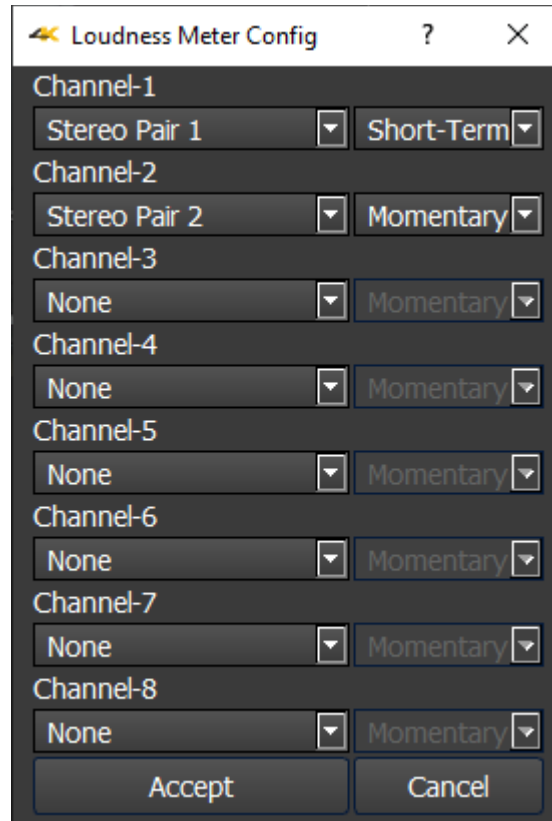

In this dialog there are a number of presets for monitoring differing audio input types. Presently these include:


- None
- 5.1 Surround
- 5.1-Protocols - L C R Ls Rs Lfe
- 5.1 Smppte - L R C Lfe Ls Rs
- 5.1-AAC - C L R Ls Rs Lfe
- 5.1-DTS - L R Ls Rs C Lfe
- Stereo Pair 1
- 7.1 Surround
- 7.1-Protocols - L C R Lss Rss Lsr Rsr Lfe
- 7.1-Smppte - L R C Lfe Lss Rss Lsr Rsr
- 7.1-EXT - L R C Lfe Lss Rss Lsr Rsr
- 7.1-Dolby - L C R Ls Rs Lfes Bsl Bsr
- Stereo Pair 2

The descriptions for the channels (abbreviated above) are as follows:

- L - Left
- R = Right
- C = Center
- Ls = Left Surround
- Rs = Right Surround

- Lfe = Low Frequency Effects
- Lss = Left Side Surround
- Rss = Right Side Surround
- Lsr = Left Rear Surround
- Rsr = Right Rear Surround
- Lfes = Low Frequency Effects
- Bsl = Back Surround Left
- Bsr = Back Surround Right

Each channel can be set up separately. Once an input type has been selected, the user can select between measurement options.

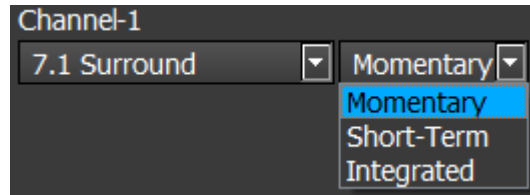

These include:


- **Momentary Loudness** - measures the loudness of the past 400 Milliseconds
- **Short-Term Loudness** - measures the loudness of the past 3 Seconds
- **Integrated Loudness** - (Also called Programme Loudness) indicates how loud the programme is on average, and is measured over entire duration of material

At the bottom of the Loudness Meter Config dialog, there is an **Accept** button to enable any changes you have made, and there is a **Cancel** button to exit the dialog without making any changes to the settings.


Hold Peak/RMS – Just under the audio pair selector buttons there is a reset button and a pulldown menu for options to hold the peak audio level.

The following options are available:

- **Normal** – allow Peak and RMS to range freely with no hold
- **Hold Peak 4 sec** – hold the peak (the little white line in the audio level, typically near the top) for 4 seconds
- **Hold RMS 4 sec** – hold the RMS (the main audio level, green near the bottom and red at the top if the signal is too high) for 4 seconds
- **Hold Peak Infinite** – hold the Peak at its highest level and leave it there
- **Hold RMS Infinite** – hold the RMS at its highest level and leave it there

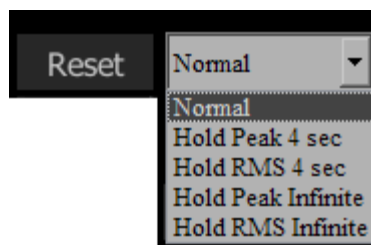

These values can be held for either 4 seconds, or frozen (Infinite Hold), or not held. A Reset button exists to clear any Peak/RMS values to refresh the display for a new measurement.



MaxFall/MaxCLL section – below the Peak/RMS is the MaxFall/MaxCLL section.

When working in HDR, MaxFall and MaxCLL values become available. MaxFALL/MaxCLL is metadata required for HDR10 content.

MaxFALL (Maximum Frame Average Light Level) indicates the maximum value of the frame average light level (in cd/m2 or nits) of the entire playback sequence. MaxFALL is calculated by averaging the decoded luminance values of all the pixels within a frame. MaxFALL is usually much lower than MaxCLL.

MaxCLL (Maximum Content Light Level) indicates the maximum light level of any single pixel (in cd/m2 or nits) of the entire playback sequence. MaxCLL is usually measured off the final delivered content after mastering.

The **F** field displays the MaxFall.


The **C** field displays the MaxCLL.

A reset button clears the measurement to view a new signal, or refresh the display for another look at the same signal.

Freeze Field/Frame



Freeze section – the Freeze button saves an image of the current frame of video for closer inspection or comparison. The button to the right offers a popup menu for the type of image that is created.

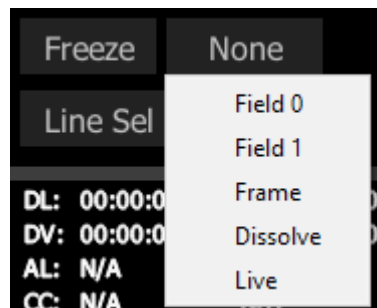

Field/Frame/Live drop down – selects how a frozen frame will be displayed against the live video

Field 0 – show field 0 frozen, field 1 live

Field 1 – show field 1 frozen, field 0 live

Frame – show the frozen frame

Dissolve – show 50% of the frozen frame and 50% of the live frame


Live – show the live video (frozen frame is still saved)

Line Select



Line Select – when clicked, all the video scopes will analyze only the video line in the line selection box next to the button. This line will be highlighted on the in app video display. Clicking the plus and minus buttons will increment the line up or down. Pressing the Line Sel button sets that line as the line to monitor.

Status Display

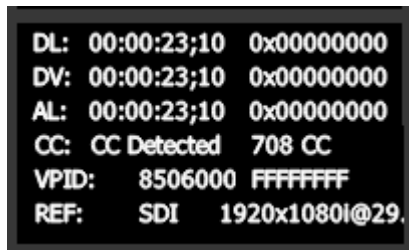

```
DL: 00:00:23;10 0x00000000
DV: 00:00:23;10 0x00000000
AL: 00:00:23;10 0x00000000
CC: CC Detected 708 CC
VPID: 8506000 FFFFFFFF
REF: SDI 1920x1080i@29.
```

Status Display – the Status display shows time code and user bits (where present) for:

- RP-188 L SDI inputs
- RP-188 V SDI inputs
- Analog SMPTE time code input
- Closed captions presence and type
- VPID (Video Payload Identifier)
- Reference input presence and type

Scopes Layout and Setup



Scope Setup button – The Scope Setup button in the Controls section opens the Scope Config window, which allows the user to configure how many scopes are displayed, to switch between scopes, and to set up each particular scope.

Layout Options


When you press the Setup button the Scopes config window opens up. At the top of the window there are four layout options. Select the layout that suits your workflow:



From left to right, the choices are: 1 scope (single), 2 scopes (side by side), 4 scopes (2 x 2 grid), or 6 scopes (two rows of three scopes).

Single Scope Layout


A single scope layout has been selected.

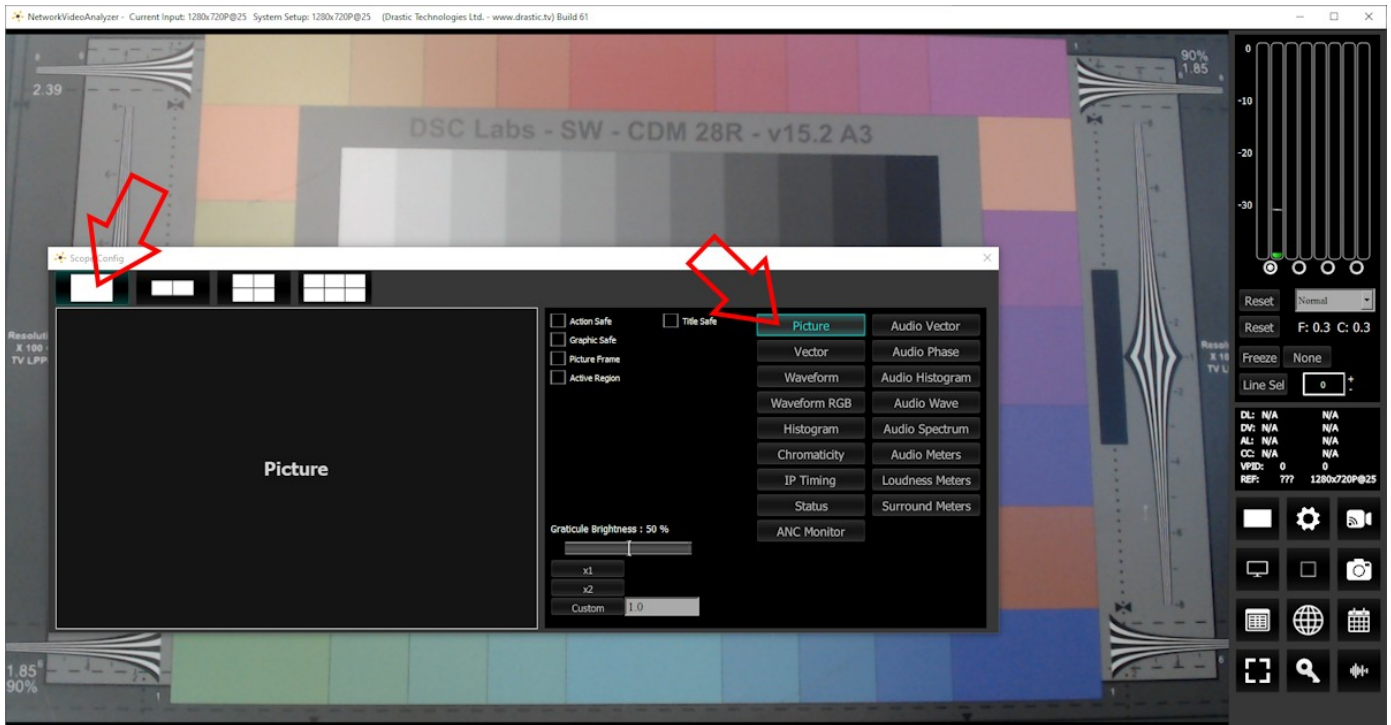

The arrow on the left shows the button used to select the single scope layout. The example shown displays the selection of the picture view. The arrow on the right shows the button used to select the picture view.

Two Scopes Layout

The two scopes layout has been selected.

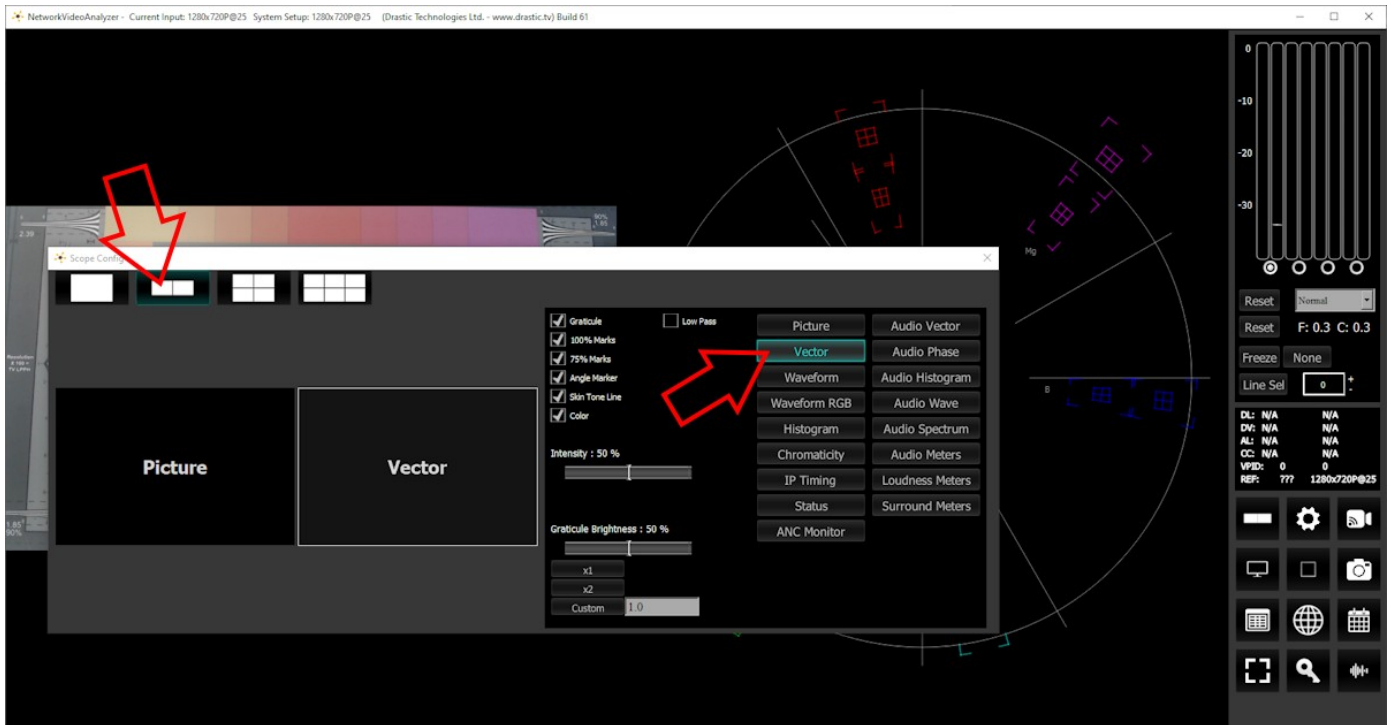


The arrow on the left shows the button used to select the two scopes layout. The example shown features the picture view and the vectorscope. The arrow on the right shows the button used to select the vectorscope.

To change which scope appears in a panel, click on it and use the selection buttons on the right to choose the scope. For example if you would like a waveform monitor on the left panel, you would click on the left panel, and click on the appropriate waveform button.

Four Scopes Layout

The four scopes layout has been selected.

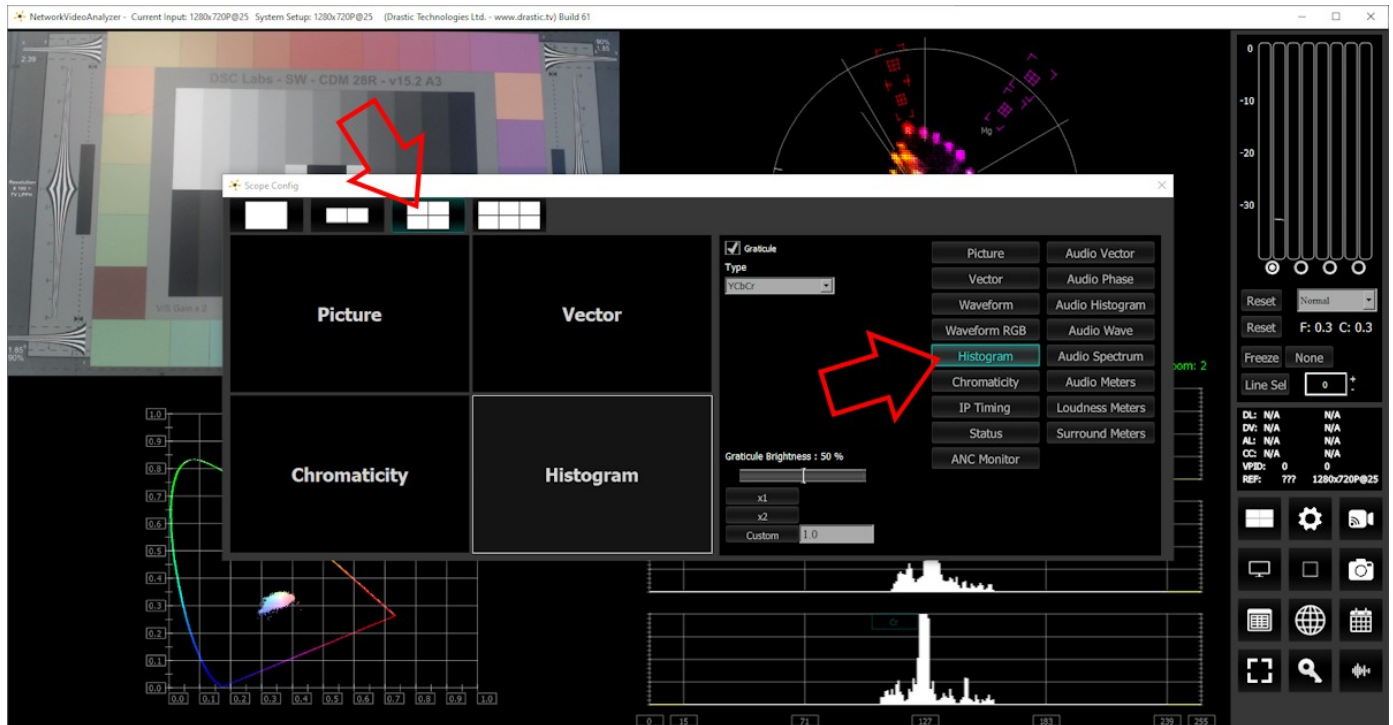


The arrow on the left shows the button used to select the four scopes layout. The example shown features the picture view, the vectorscope, the chromaticity, and the histogram. The arrow on the right shows the button being used to select the histogram.

To change which scope appears in a panel, click on it and use the selection buttons on the right to choose the scope. For example if you would like a waveform monitor on the lower left panel, you would click on the left panel, and click on the appropriate waveform button.

Six Scopes Layout

The six scopes layout has been selected.

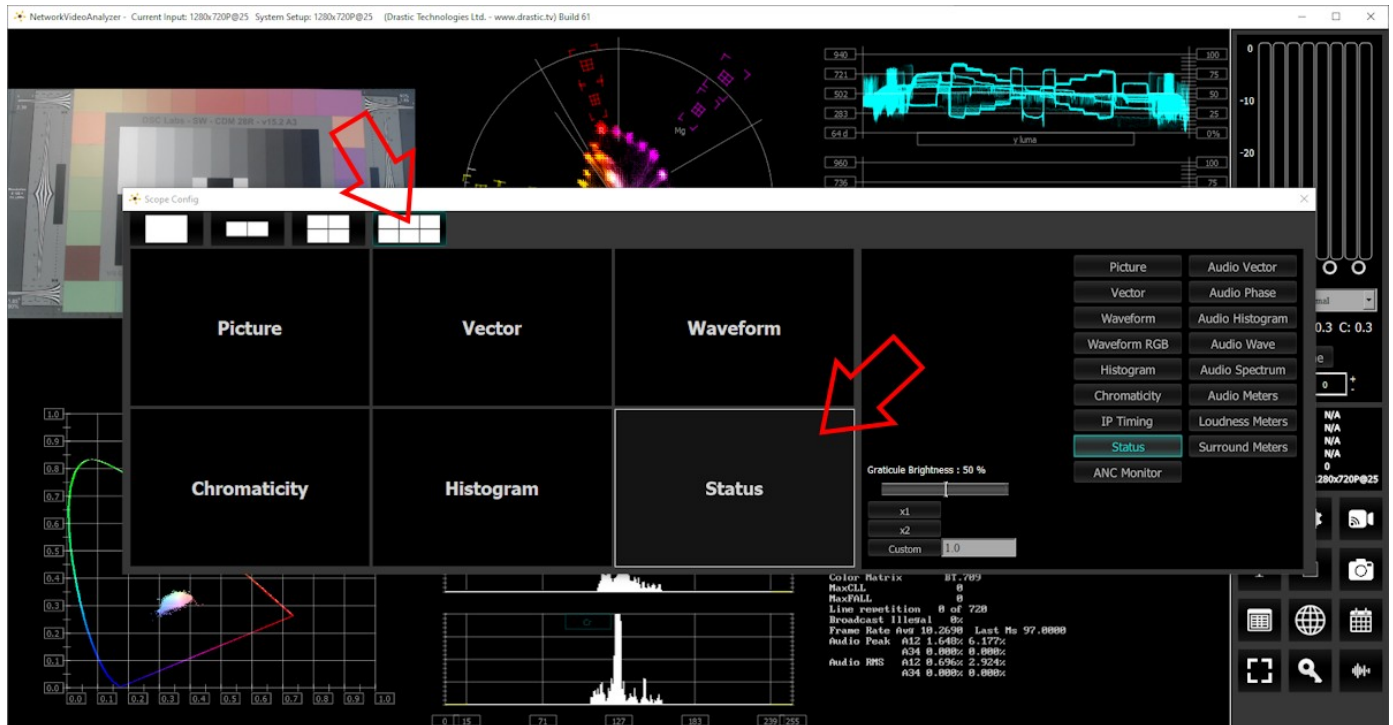


The arrow on the left shows the button used to select the six scopes layout. The example shown features the picture view, the vectorscope, the YCbCr waveform, the chromaticity, the YCbCr histogram, and the status display. The arrow on the right shows the button being used to select the status view.

To change which scope appears in a panel, click on it and use the selection buttons on the right to choose the scope. For example if you would like an audio waveform display on the lower left panel, you would click on the left panel, and click on the appropriate waveform button.

Picture View

To set up the Picture view, press the **Scope Config** button. This opens the Scope Config window. Click on the **Picture** button on the right. There are a number of options to set up the picture view:

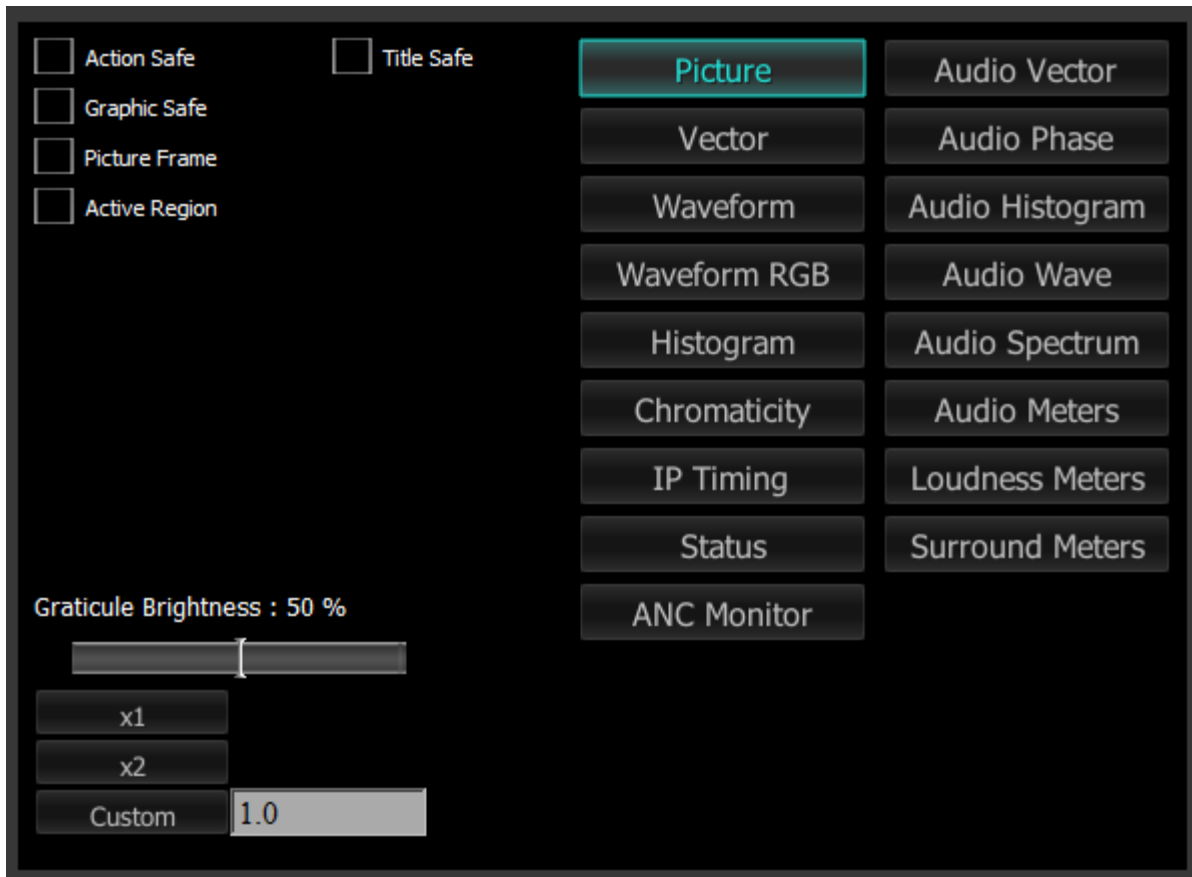

Action Safe checkbox - when selected, the Action Safe graticule is displayed over the video output.

Title Safe checkbox - when selected, the Title Safe graticule is displayed over the video output.

Graphic Safe checkbox - when selected, the Graphic Safe graticule is displayed over the video output.

Picture Frame checkbox - when selected, the Picture Frame graticule is displayed over the video output.

Active Region checkbox - when selected, the Active region graticule is displayed over the video output.

Graticule Brightness slider - Moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button - clicking this button sets the display to standard size

x2 button - clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field - The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.


Pressing the x in the upper right corner will close the Scope Config window.

Here is the Picture view.



The Picture view shows the video signal, to confirm the source is correct and to display time code location.

Graticules

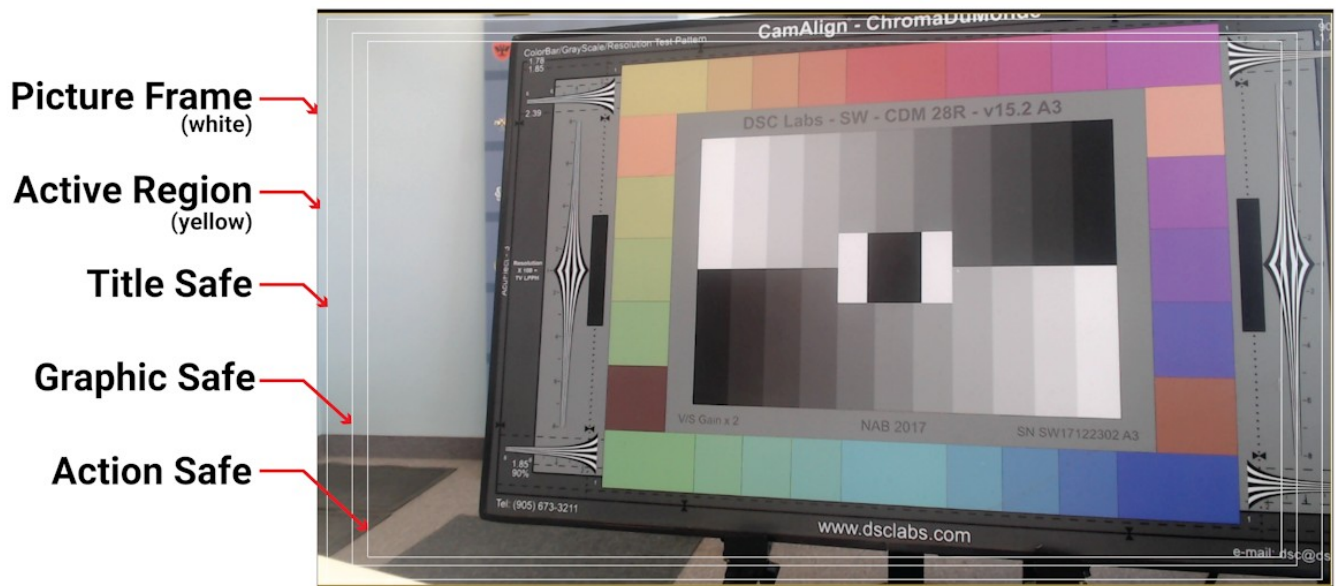


Action Safe, Title Safe, Graphic Safe, Picture Safe, and Active Region graticules may be optionally overlaid.

Vectorscope

Vectorscope Setup

To set up the vectorscope, press the **Scope Config** button. This opens the Scope Config window. Click on the **Vector** button on the right. There are a number of options to set up the vectorscope:

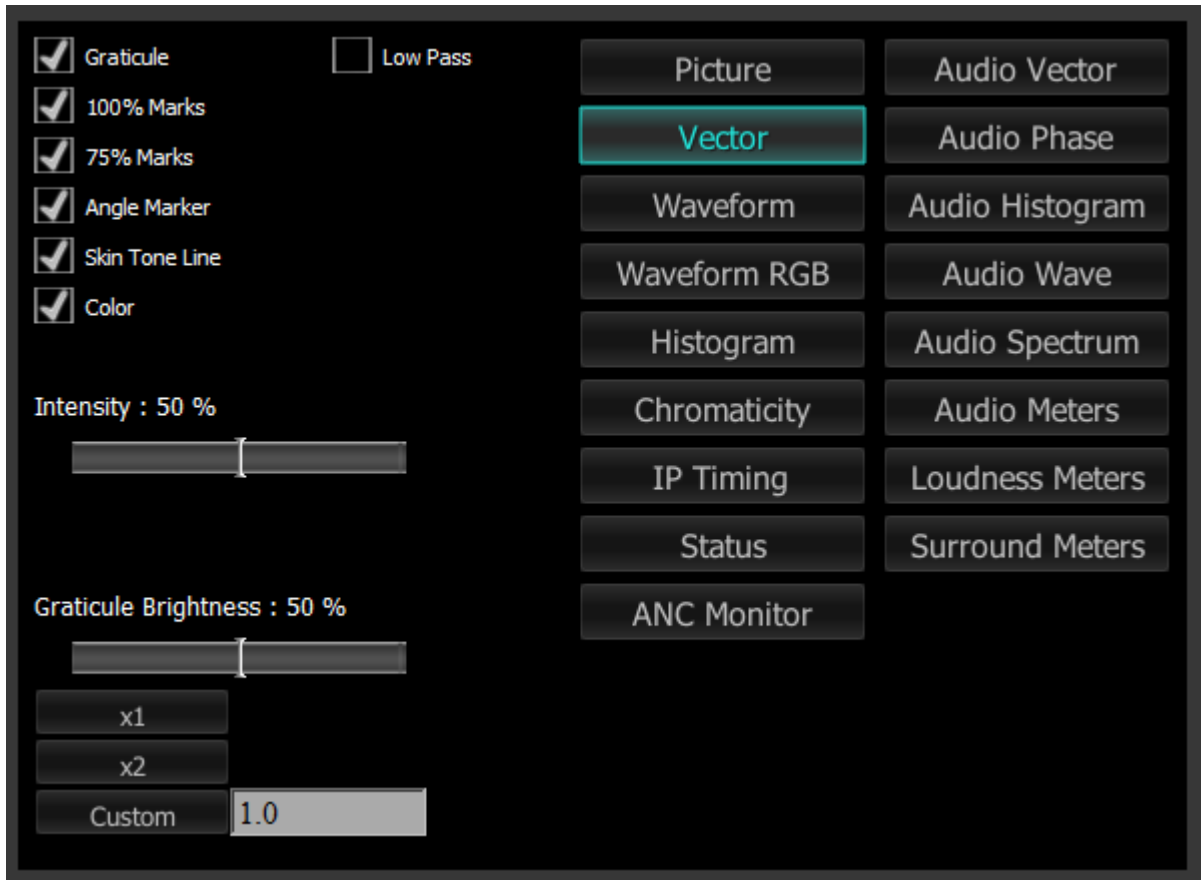

Graticule checkbox – when selected, the graticule is laid over the Vectorscope. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

100% Marks checkbox – when selected, the 100% Marks are displayed over the Vectorscope

75% Marks checkbox - when selected, the 75% Marks are displayed over the Vectorscope

Angle Marker checkbox - when selected, the Angle Marker is displayed over the Vectorscope

Skin Tone Line checkbox - when selected, the Skin Tone Line is displayed over the Vectorscope

Color checkbox – when selected, the lines, regions, and points of the signal in the vectorscope are drawn in their respective colors.

Intensity slider – Moving the Intensity slider brightens or dims the display of the video signal through the Vectorscope. The current setting is displayed above the slider, as a percentage, 0% providing no display and 100% being maximum intensity.

Graticule Brightness slider - Moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Vectorscope Window

Here is the Vectorscope.

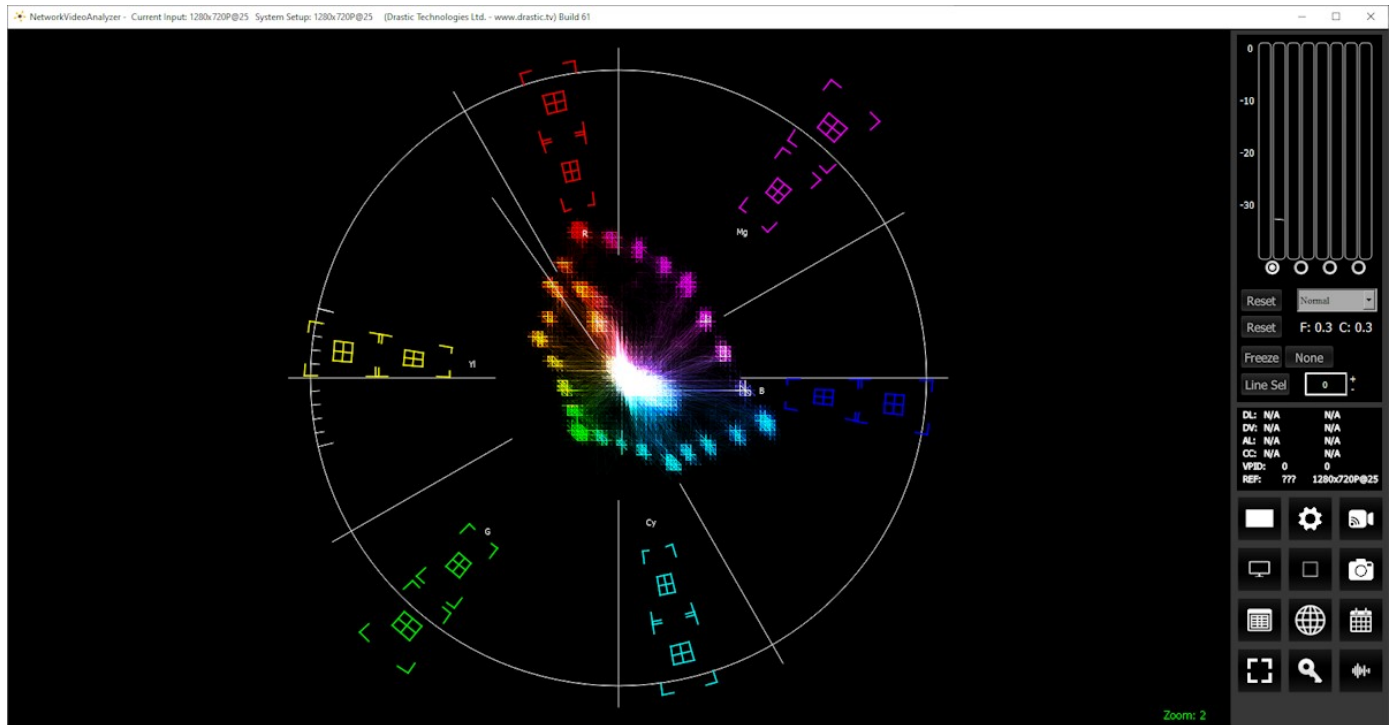

The **Vectorscope** displays a traditional Cb by Cr X-Y display with overlaid reference graticule. Color accurate graticules automatically switch between SD and HD color spaces. The markers include color points (for standard bar checks) at 75% and 100% saturation. All the standard points are boxed; red, magenta, blue, cyan, green and yellow. A skin tone/flesh line is provided to allow for easy hue adjustment as well as standard diagonals.


At all times a minimum and maximum value for each of the channels (Y, Cr and Cb) is displayed in 10 bit mode (0-1023). The color of the text for each channel indicates the following: in range (green), out of range but legal (yellow) and illegal/sync values (red).

For single link 8 and 10 bit YCbCr signals, there is no color processing involved. For dual link 4:4:4 RGB signals, the equivalent Cb and Cr are calculated to create the display.

Waveform YCbCr

Waveform YCbCr Setup


To set up the Waveform YCbCr, press the **Scope Config** button. This opens the Scope Config window. Click on the **Waveform** button on the right. There are a number of options to set up the waveform:

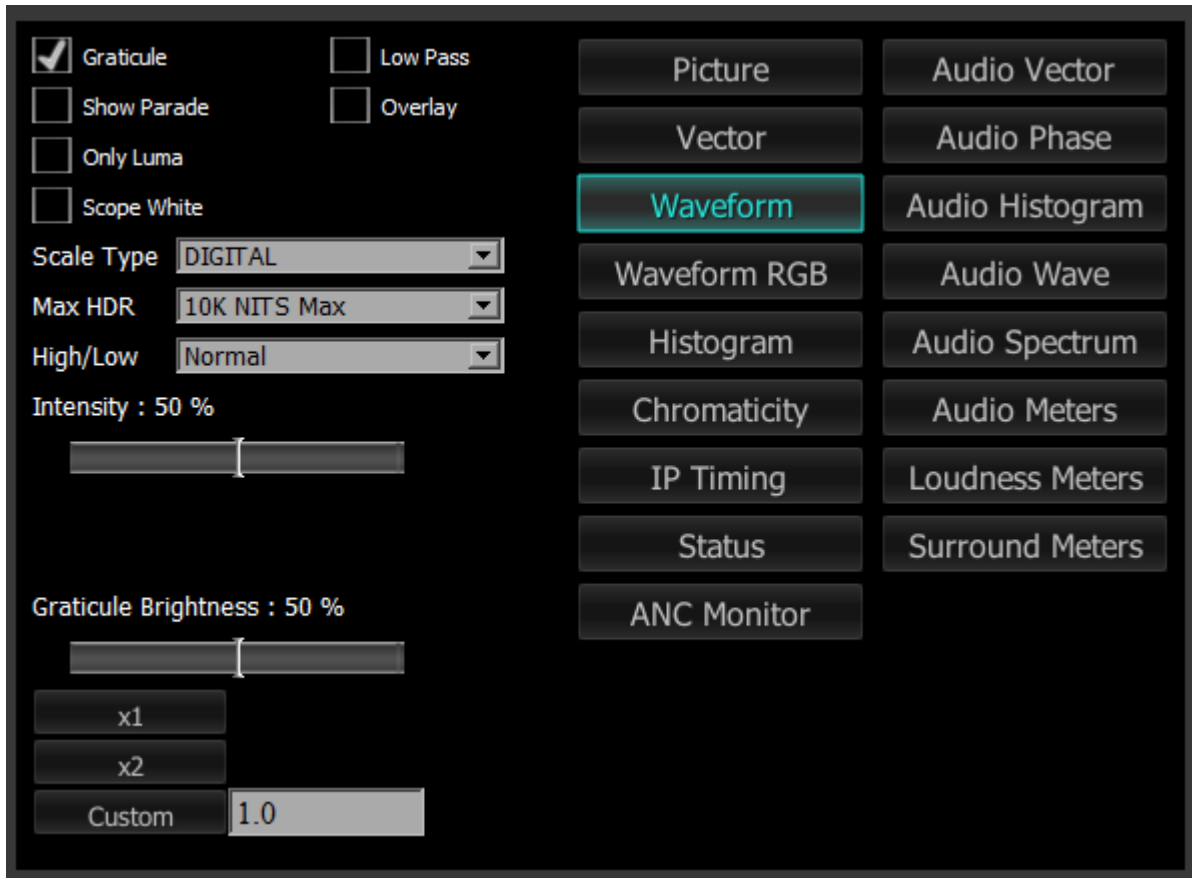


Graticule checkbox – when selected, the graticule is laid over the Waveform YCbCr display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Low Pass checkbox – when selected, smooth the scope with a 1/3 filter to remove single pixel anomalies.

Show Parade checkbox – when selected, the display is from left to right. When not selected, the display is stacked top to bottom.

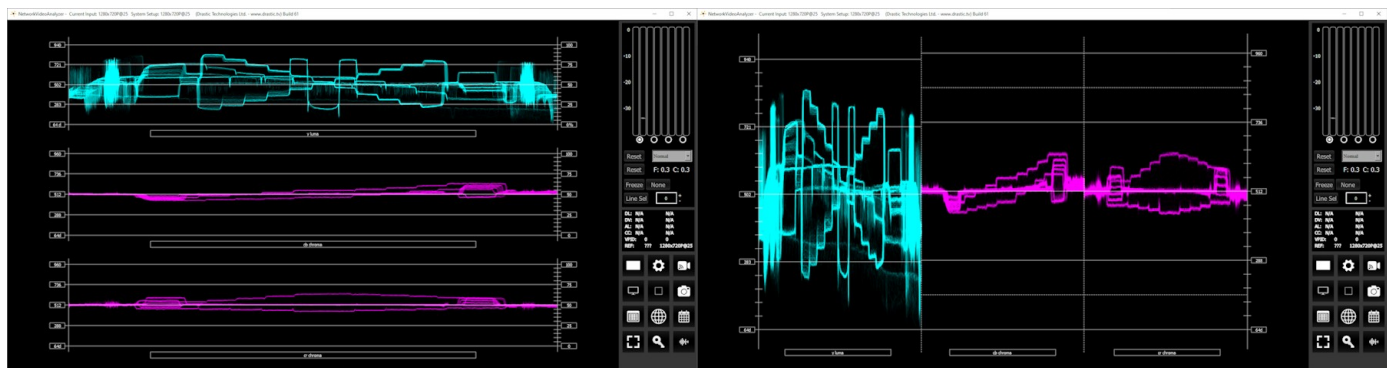


Overlay checkbox – when selected, overlays the Y, Cb, and Cr channels on one waveform.

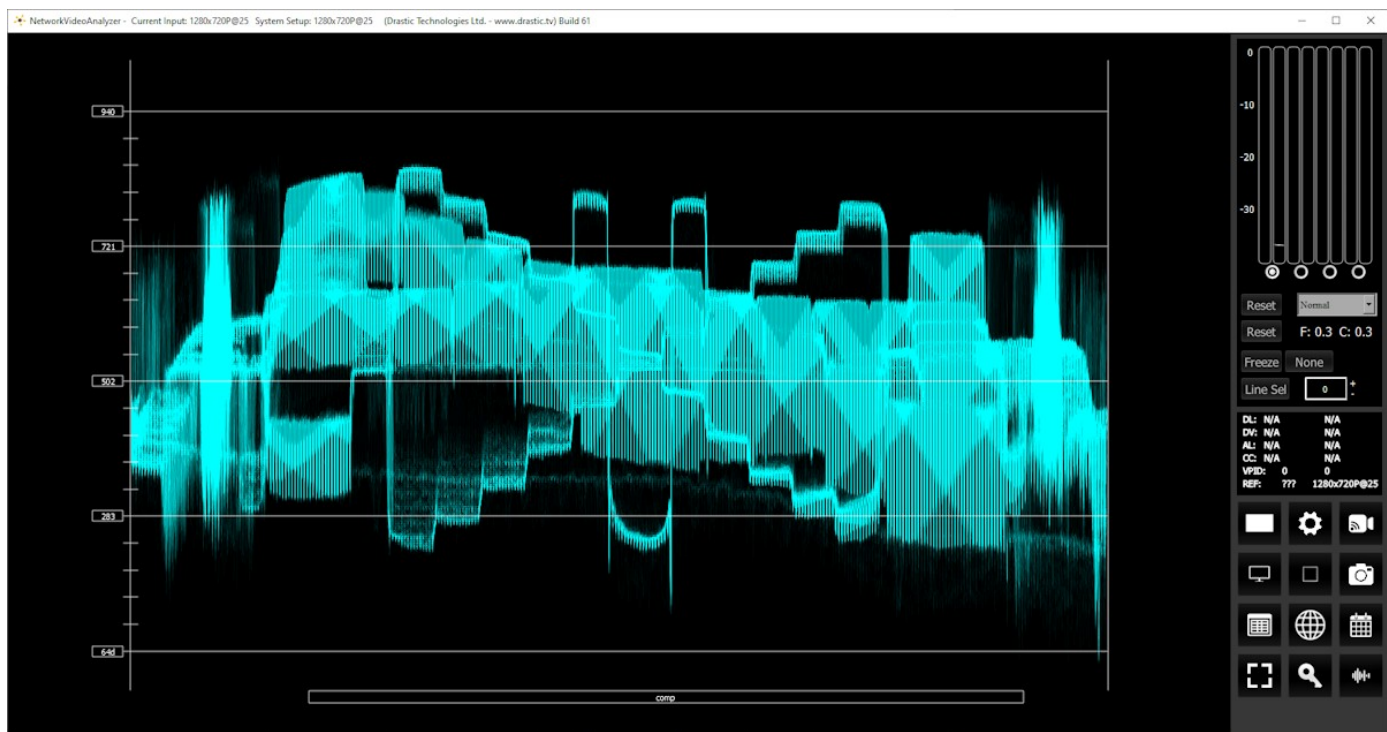

Composite Waveform YCbCr


Only Luma checkbox – when selected, displays only the luminance of the signal.

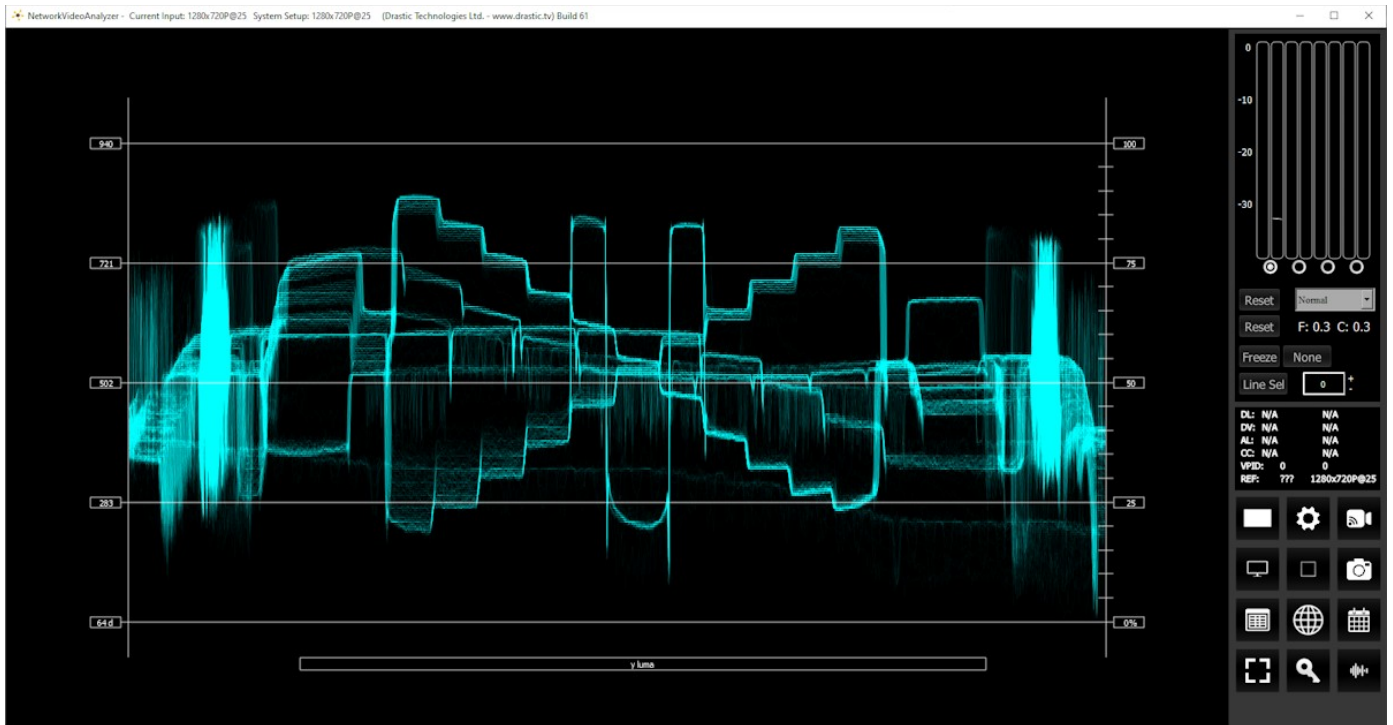


Scope White checkbox – turns the display white.

Scale Type pulldown – set the type of scale used to draw the waveform. Choices include:


- **Digital** - the actual 0..255, 0..1023, or 0..4095 numeric values of the signal. In parade mode, the Cb and Cr graticule are not displayed.

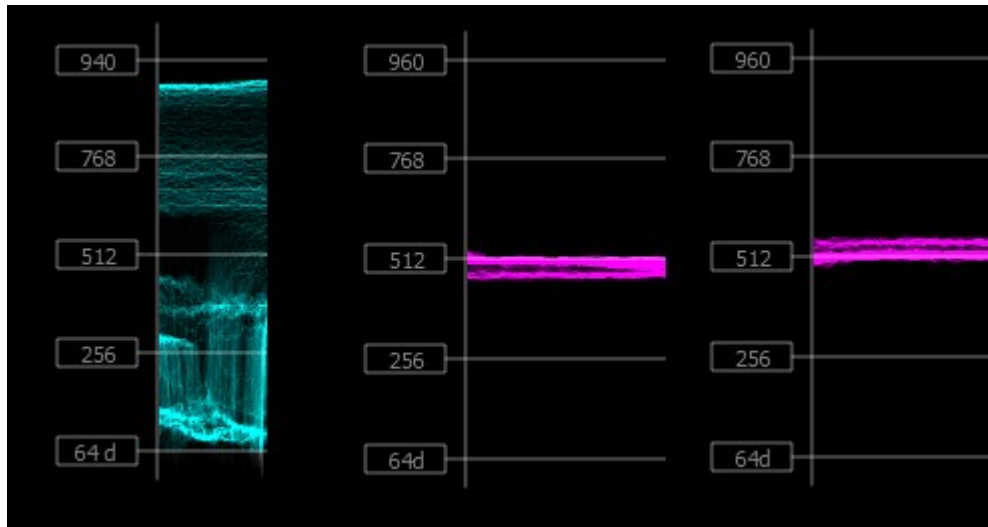

- **MV** - the equivalent millivolts value of the signal if it was converted to analog. In parade mode, the Cb and Cr graticule are not displayed.

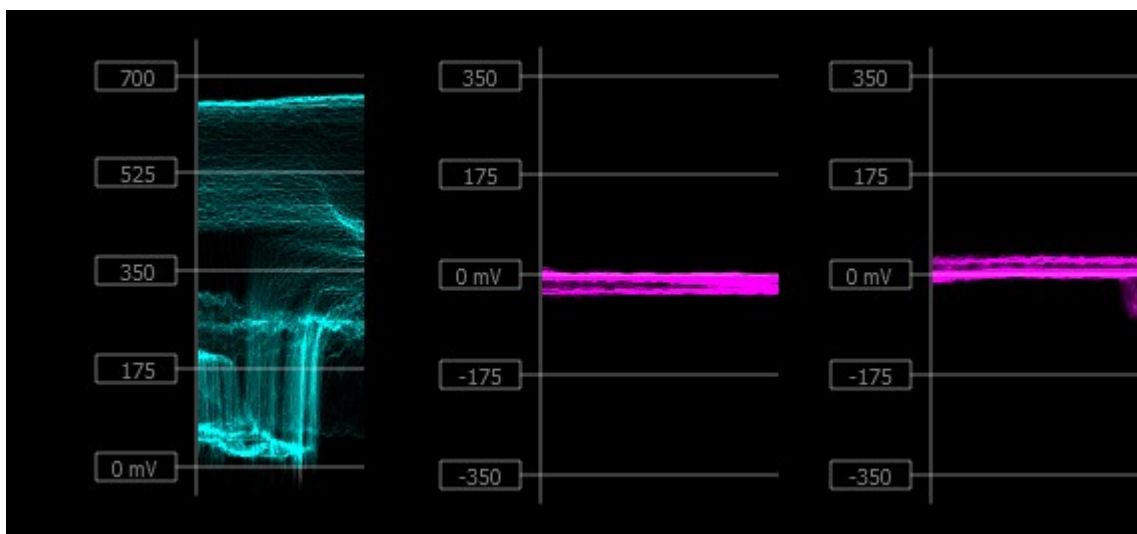

- **IRE** – Institute of Radio Engineers units, spanning 0..100. In parade mode, the Cb and Cr graticule are not displayed.

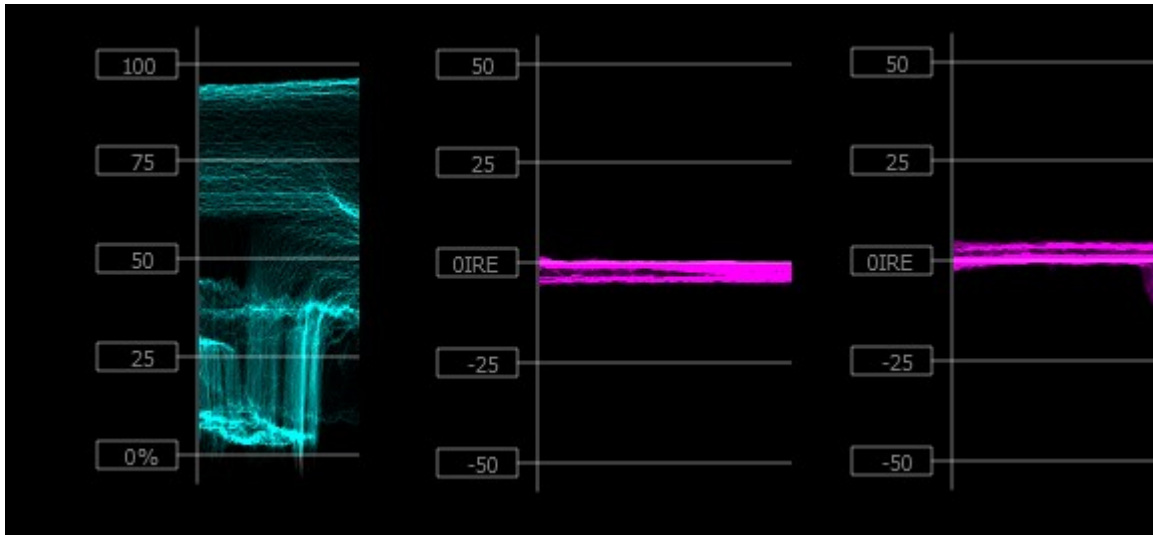

Max HDR checkbox – lets the user select between NITS settings for HDR work. Options include:

- 10K NITS Max
- 5K NITS Max
- 4K NITS Max
- 3K NITS Max
- 2K NITS Max
- 1K NITS Max
- 200 NITS Max

High/Low pulldown – Show only the high and low portions of the signal, cutting out the middle. Choices include: Normal, 2x zoom, 3x zoom.

Intensity slider – Moving the Intensity slider brightens or dims the display of the video signal through the Vectorscope. The current setting is displayed above the slider, as a percentage, 0% providing no display and 100% being maximum intensity.

Graticule Brightness slider – Moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Waveform YCbCr Window

Here is the Waveform YCbCr.

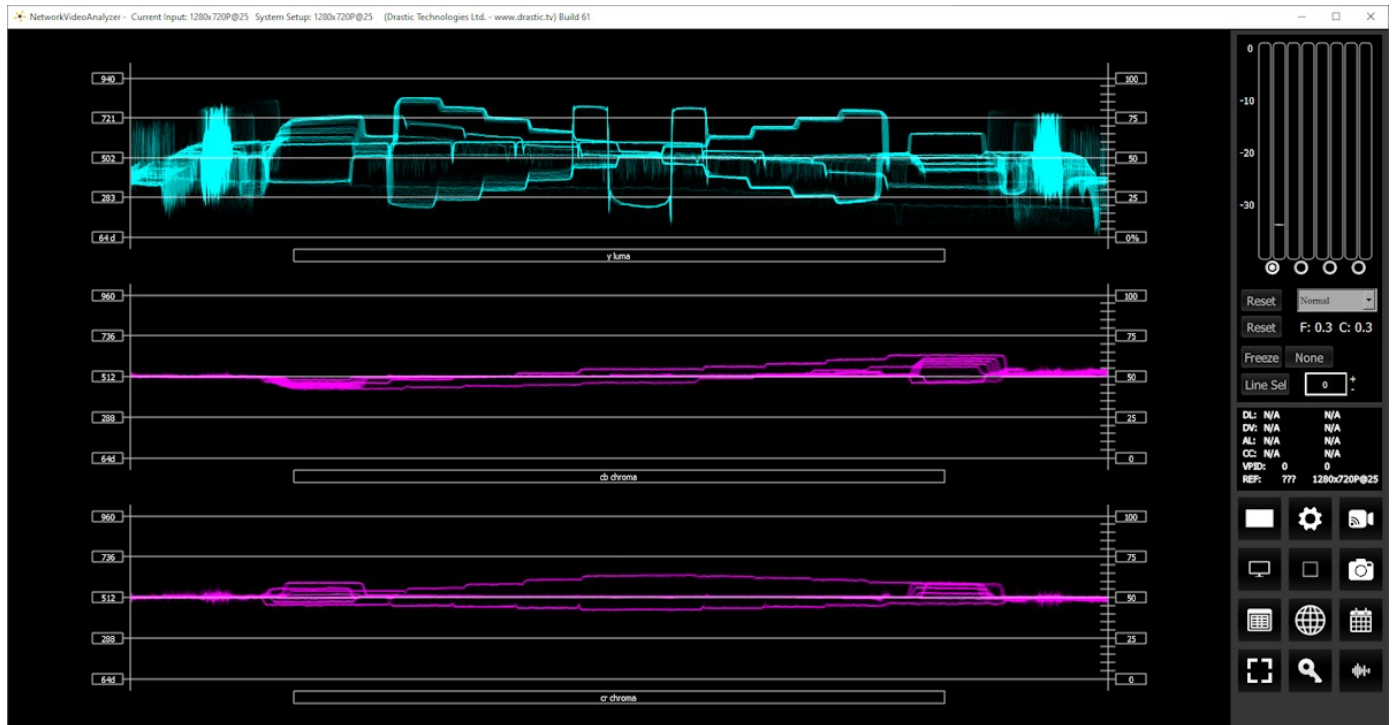

The YCbCr Waveform Monitor displays the levels of the Y, Cb and Cr from the left of the picture to the right of the picture with all the lines summed into one graph. The Y, or luma/luminance, graph provides accurate white and black level information, as well as the range in between. The Cb and Cr display the +/- 512 levels of chroma of both types. This provides a visual representation of the chroma range of the signal.

IRE (percentage) to Digital Equivalence

Waveform 0..100% SMPTE Level/YCbCr

- * 0 – 64d 0x40
- * 25 – 283d 0x11b
- * 50 – 502d 0x1F6
- * 75 – 721d 0x2D1
- * 100 – 940d 0x3AC


Critical for downstream color correction is the need to ensure proper luminance levels at the stage of initial capture, so any corrections will not muddy or wash out the signal information.

At all times a minimum and maximum value for each of the channels (Y, Cr and Cb) is displayed in 10 bit mode (0-1023). The color of the text for each channel indicates the following: in range (green), out of range but legal (yellow) and illegal/sync values (red).

Waveform RGB

Waveform RGB Setup


To set up the Waveform RGB press the **Scope Config** button. This opens the Scope Config window. Click on the **Waveform RGB** button on the right. There are a number of options to set up the Waveform RGB:

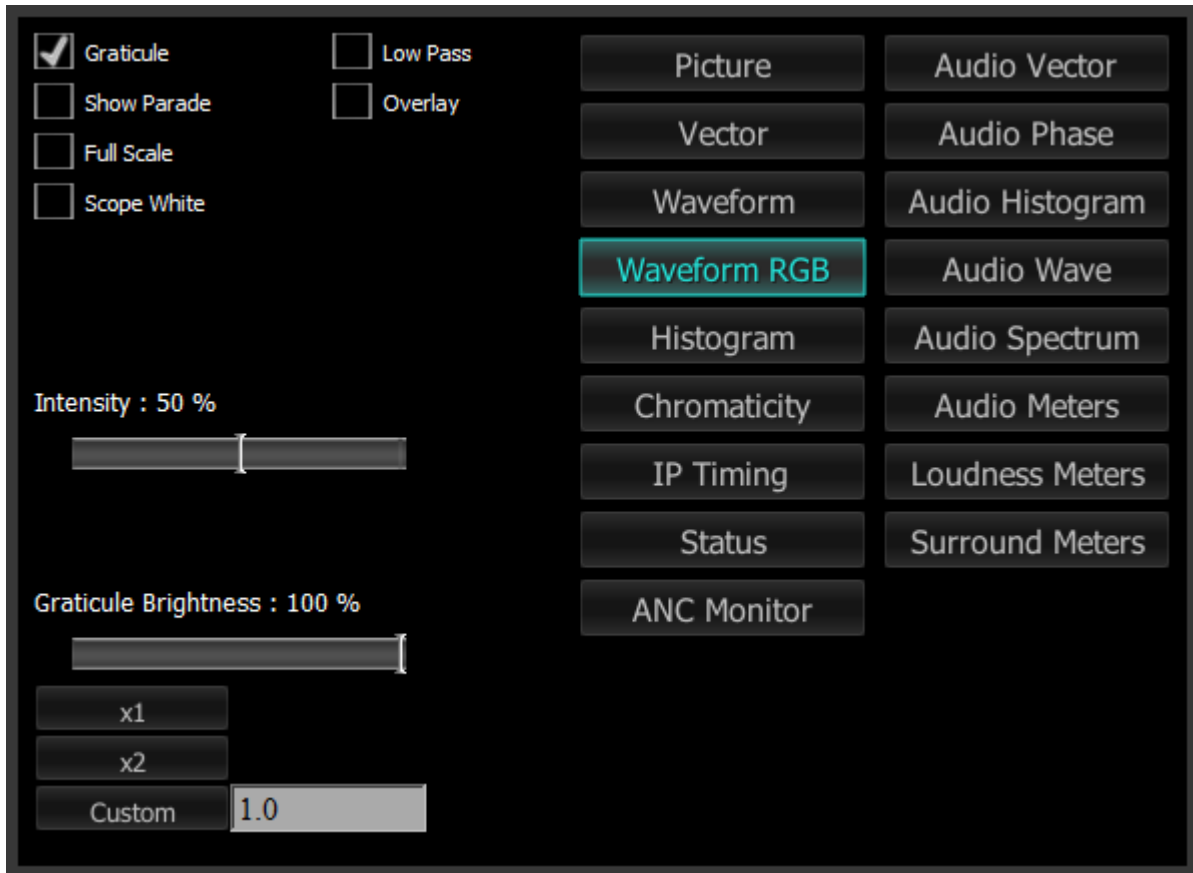


Graticule checkbox – when selected, the graticule is laid over the Waveform RGB display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Low Pass checkbox - Smooth the scope with a 1/3 filter to remove single pixel anomalies.

Show Parade checkbox – when selected, the display is from left to right. When not selected, the display is stacked top to bottom.

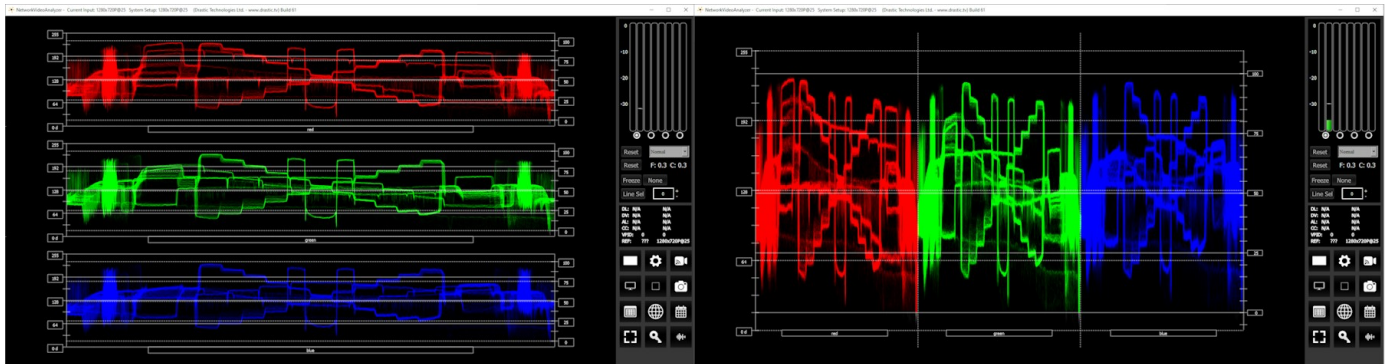

Overlay checkbox – show Red, Green, and Blue overlaid on top of each other, to directly compare the relative strength of the channels.

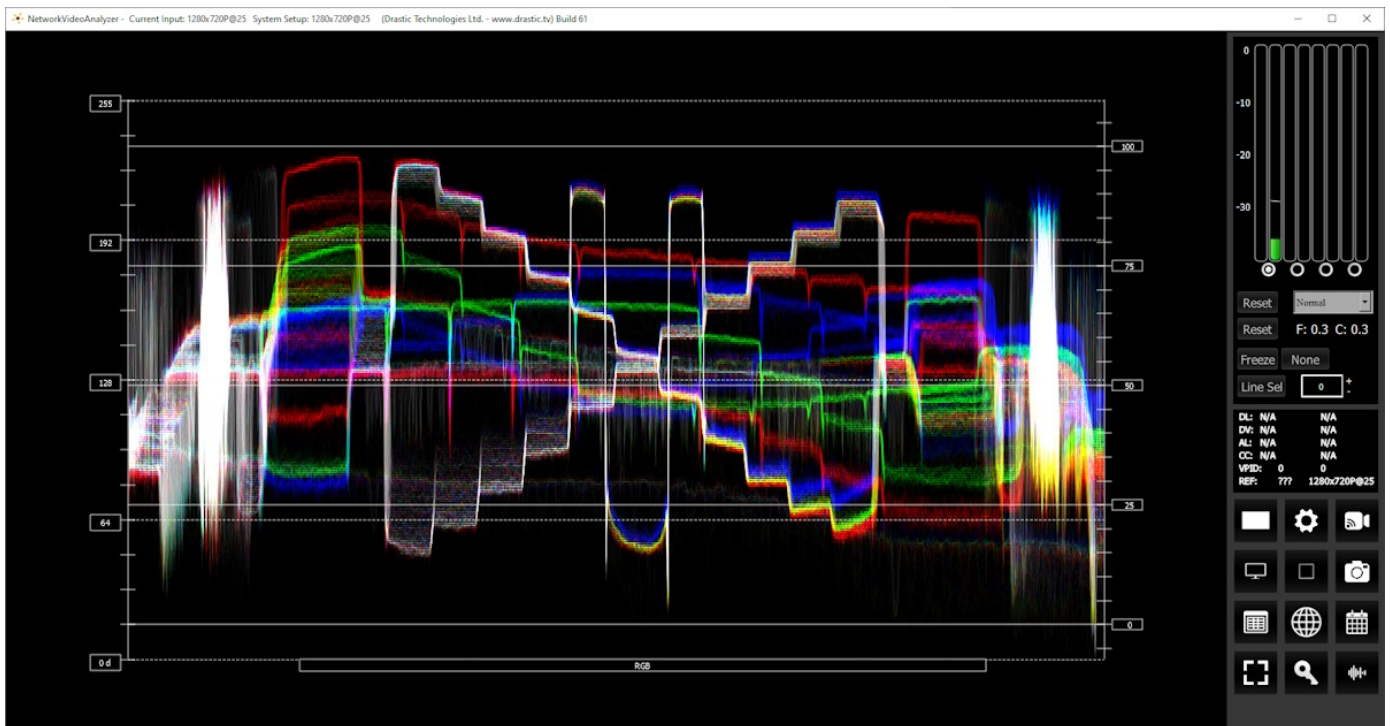

Full Scale checkbox – RGB, by default, will be sRGB. The range of each color will be from 16 to 240 (in 8 bit), so the scale will place white at 240 and black at 16 in normal scale. If in full scale, white will be placed at 255 and black at 0.

Scope White checkbox – turns the trace white.

Intensity slider – Moving the Intensity slider brightens or dims the display of the video signal. The current setting is displayed above the slider, as a percentage, 0% providing no display and 100% being maximum intensity.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Waveform RGB Window

Here is the Waveform RGB.

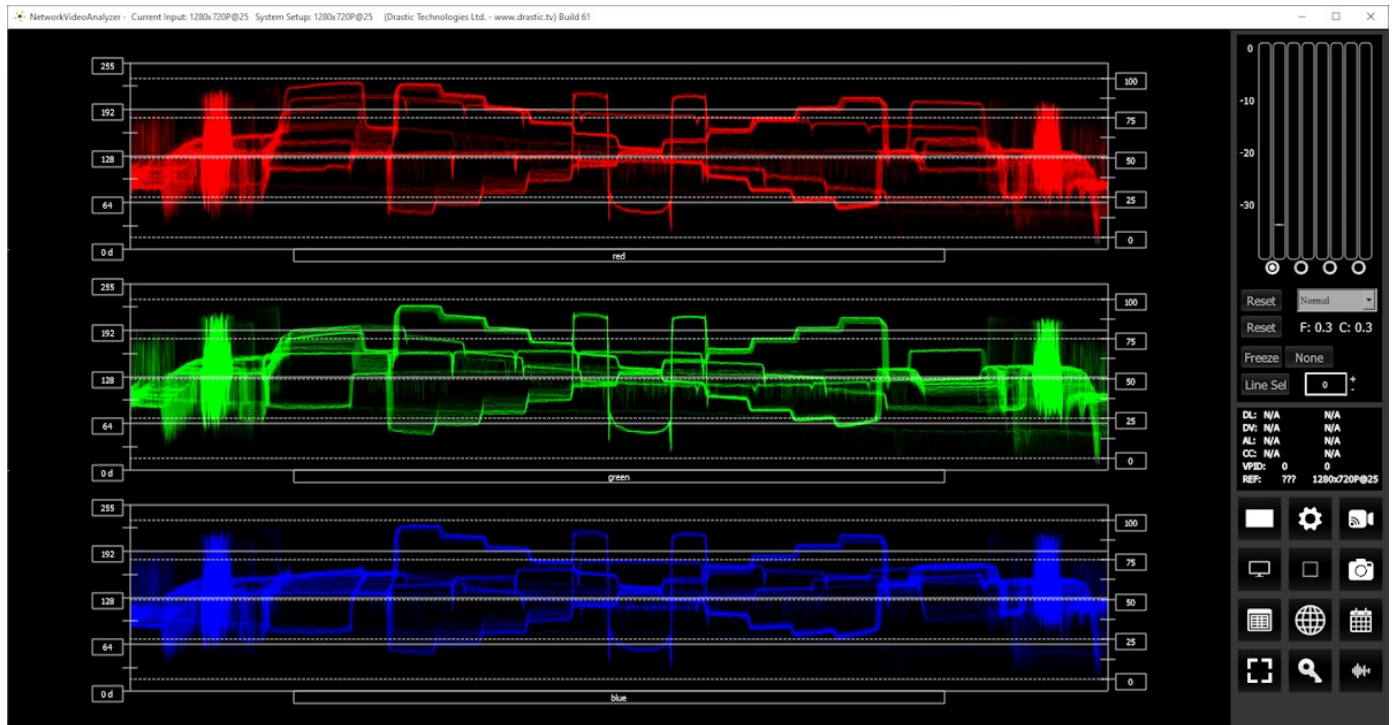

The RGB Waveform Monitor shows each of the red, green and blue signals as independent graphs, displaying the RGB, or chrominance/color values associated with the signal.

IRE (percentage) to Digital Equivalence

Waveform 0..100% RGB Level/FULL

0 - 0	0x0
25 - 256	0x100
50 - 512	0x200
75 - 768	0x300
100 - 1023	0x3FF


For dual link RGB signals, the original RGB 10 bit values are used unprocessed. For single link YCbCr signals, they are first converted to RGB before being analyzed and displayed.

Histogram YCbCr

Histogram YCbCr Setup

There are five Histograms available in the histogram panel: the Histogram YCbCr, Histogram RGB, Histogram HSV, Histogram Luma, and the H/S Scope.

To set up the Histogram YCbCr press the **Scope Config** button. This opens the Scope Config window. Click on the **Histogram** button on the right. Then use the pulldown menu to select YCbCr. There are a number of options to set up the Histogram YCbCr:

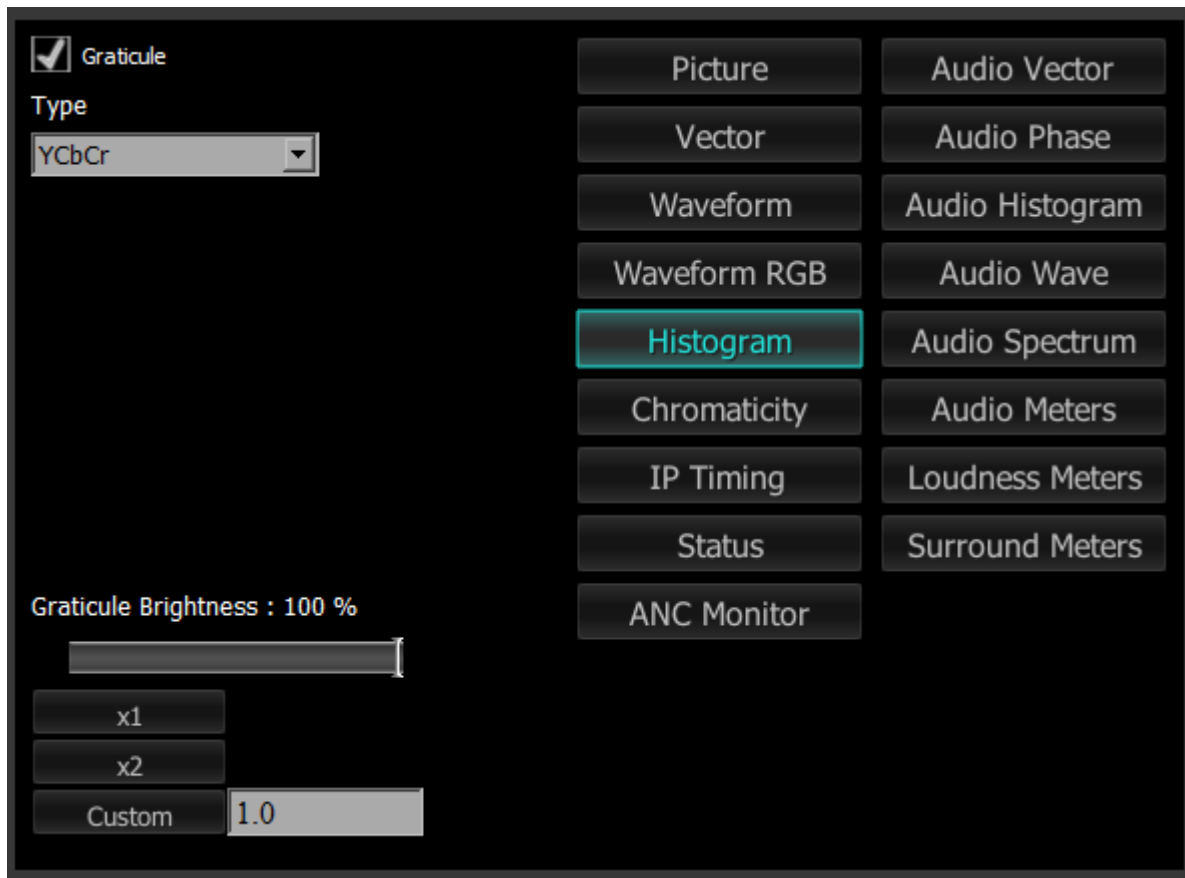

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Histogram YCbCr Window

Here is the Histogram YCbCr.

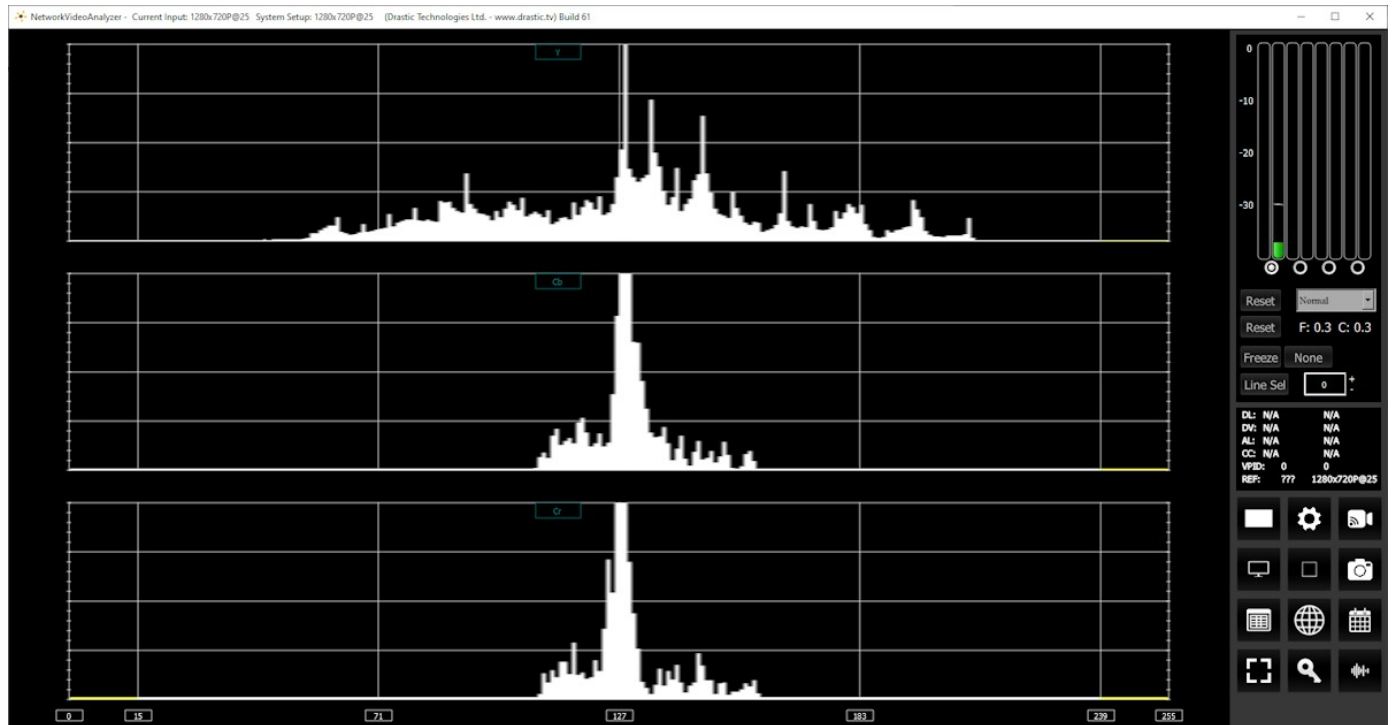


YCbCr - displays a YCbCr range. This histogram breaks up the signal in into luma and chroma components. The top histogram represents the luma (Y) power of the various levels in the signal. The Cb (blue difference) and Cr (red difference) histograms that follow show the power distribution for those two components.

Histogram RGB

Histogram RGB Setup

There are five Histograms available in the histogram panel: the Histogram YCbCr, Histogram RGB, Histogram HSV, Histogram Luma, and the H/S Scope.

To set up the Histogram RGB press the Scope Config button. This opens the Scope Config window. Click on the Histogram button on the right. Then use the pulldown menu to select RGB. There are a number of options to set up the Histogram RGB:

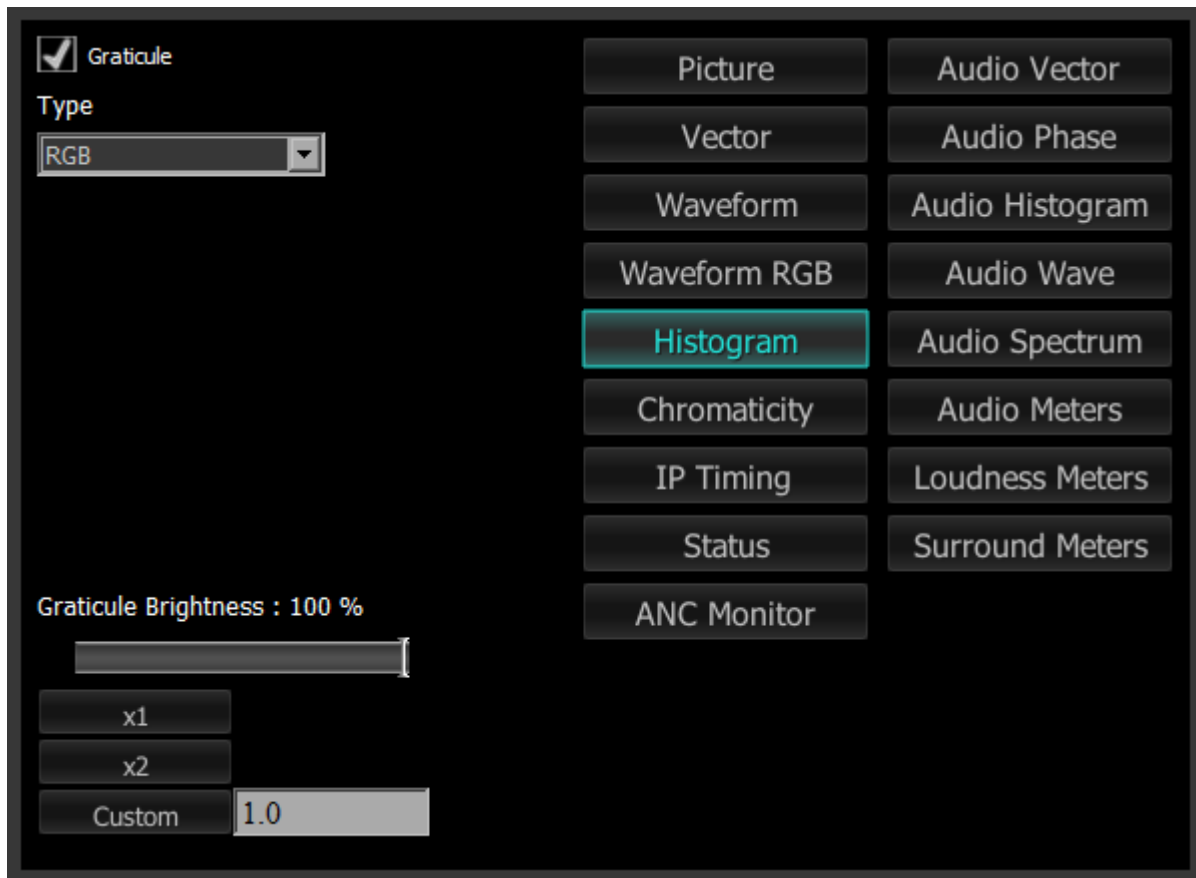

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the Graticule Brightness slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Histogram RGB Window

Here is the Histogram RGB:

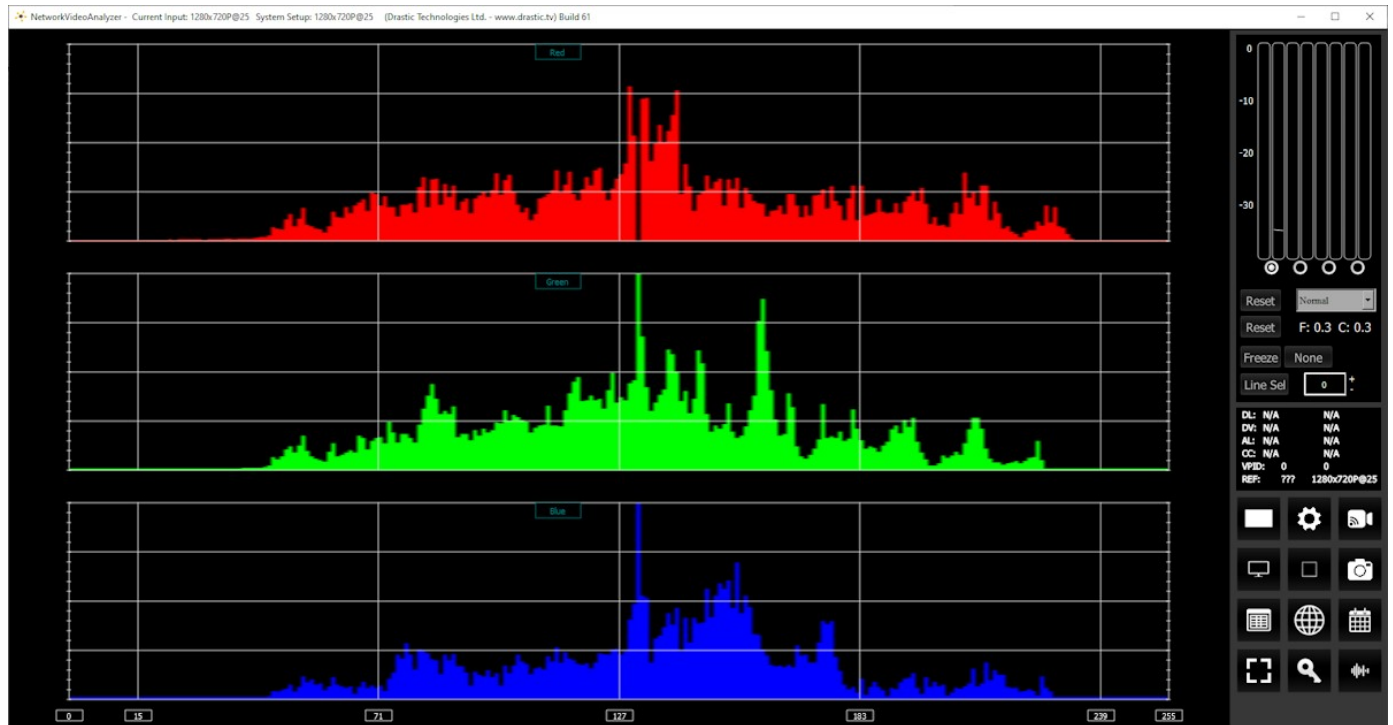


RGB – display an RGB range. Shows the distribution of red/green/blue within the signal as a series of discrete bars that make a continuous graph for each color. This display provides an overview of the tonal range of each color in the picture. Each bar is the count of the number of pixels for one of the 256/1024/4096 possible bins.

Histogram HSV Setup

There are five Histograms available in the histogram panel: the Histogram YCbCr, Histogram RGB, Histogram HSV, Histogram Luma, and the H/S Scope.

To set up the Histogram HSV press the Scope Config button. This opens the Scope Config window. Click on the Histogram button on the right. Then use the pulldown menu to select HSV. There are a number of options to set up the Histogram HSV:

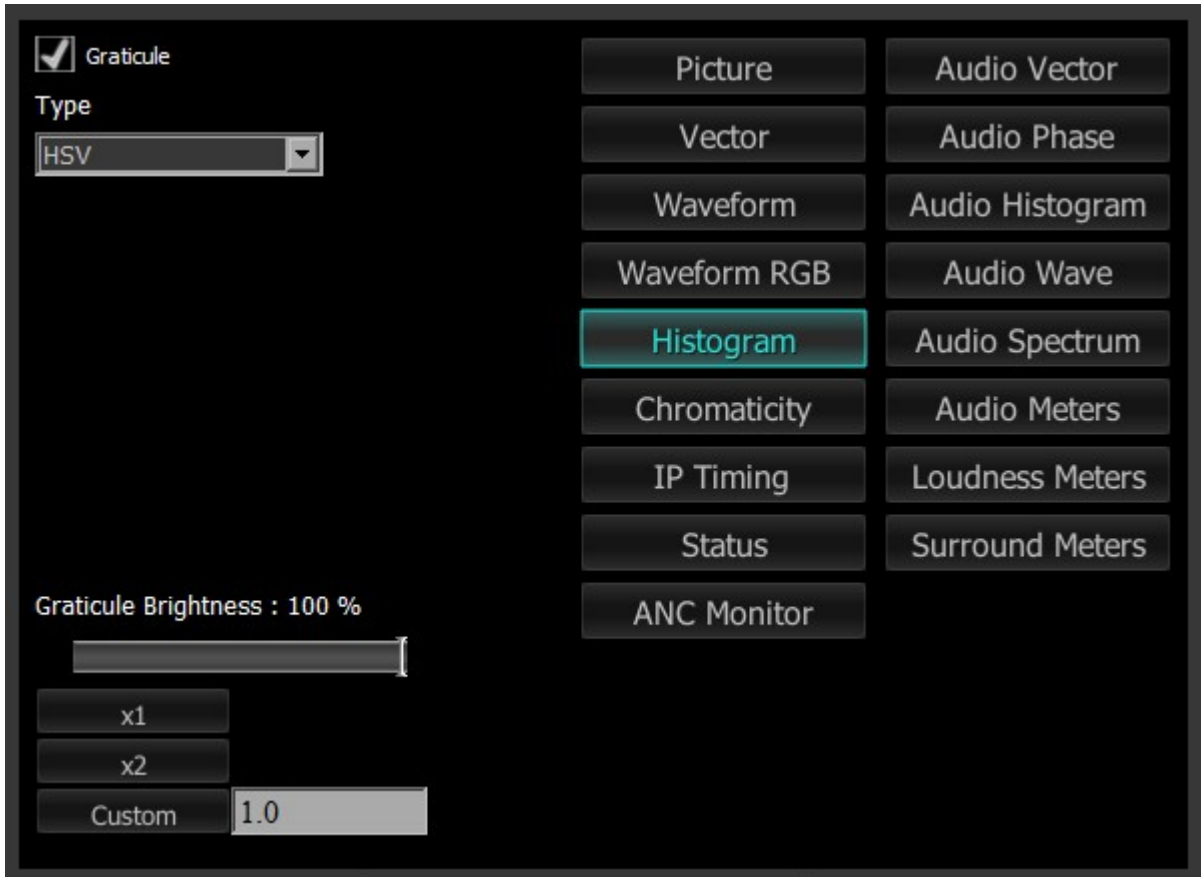

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the Graticule Brightness slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Histogram HSV Window

Here is the Histogram HSV:

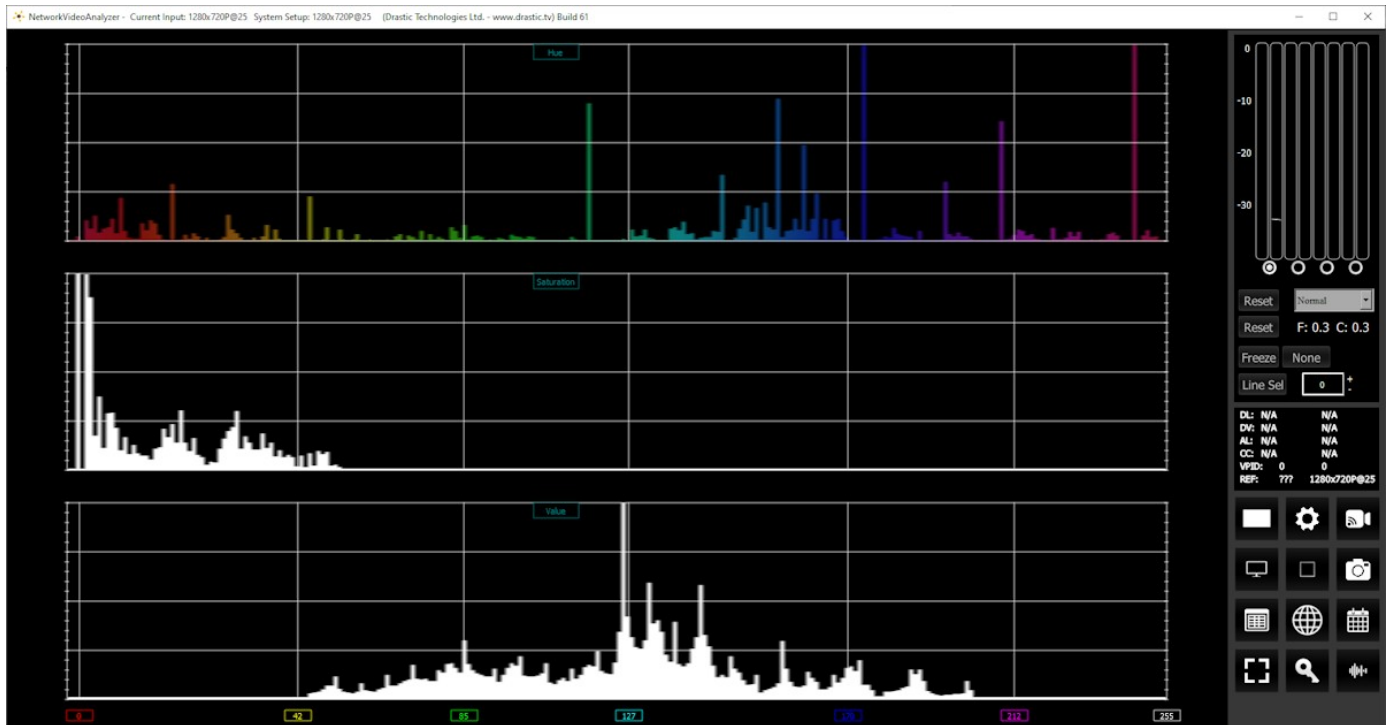


HSV – display Hue, Saturation, and Value levels. The top range shows the strength of each hue, the middle section displays the saturation levels of the hues, and the lower section displays the value, or darkness/lightness levels.

Histogram Luma

Histogram Luma Setup

There are five Histograms available in the histogram panel: the Histogram YCbCr, Histogram RGB, Histogram HSV, Histogram Luma, and the H/S Scope.

To set up the Histogram Luma press the Scope Config button. This opens the Scope Config window. Click on the Histogram button on the right. Then use the pulldown menu to select Luma. There are a number of options to set up the Histogram Luma:

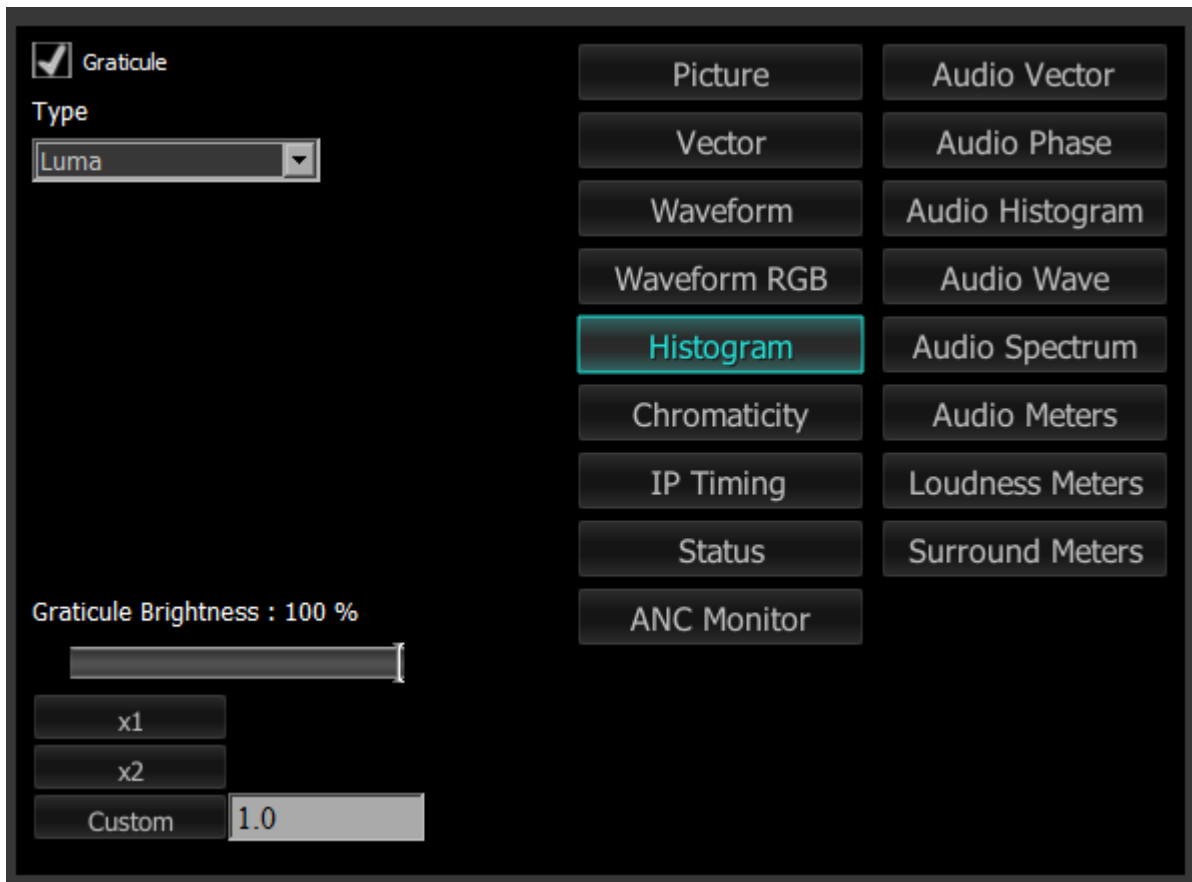

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the Graticule Brightness slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Histogram Luma Window

Here is the Histogram Luma:

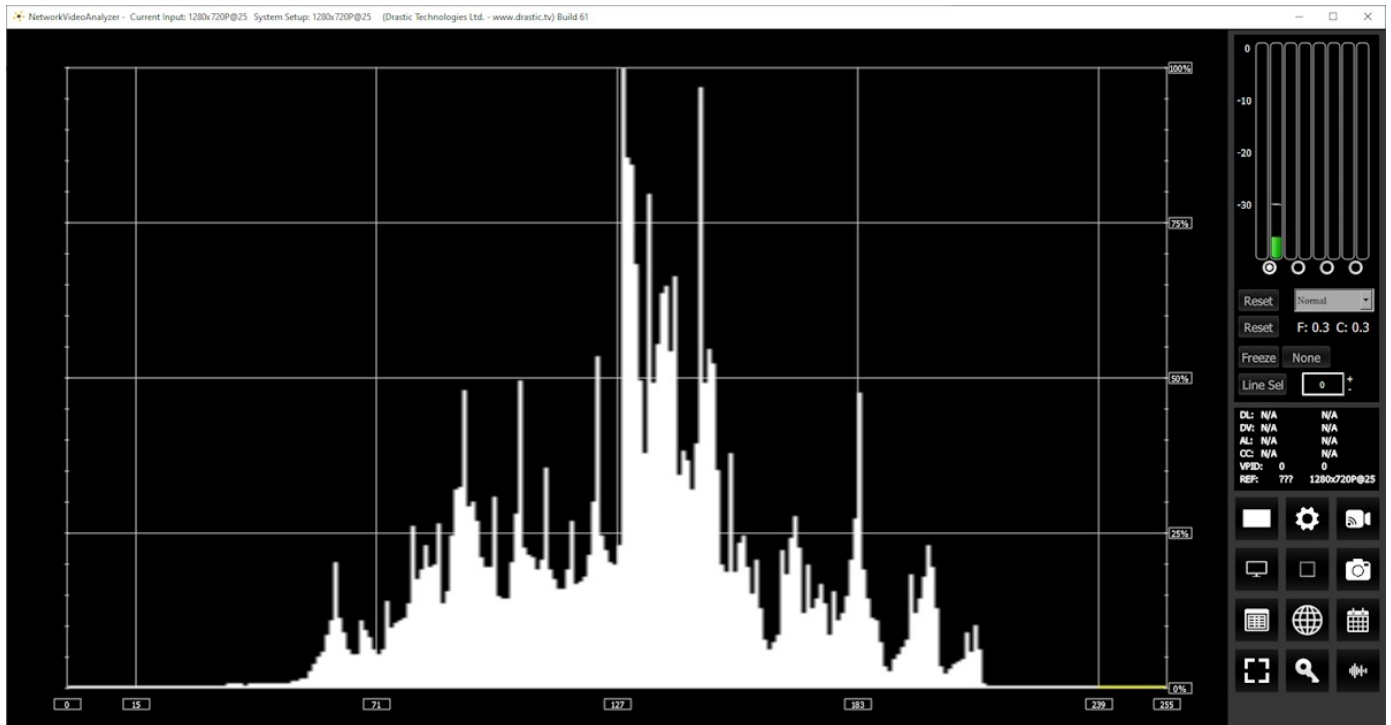


Luma – display only the luma in the signal.

H/S Scope

H/S Scope Setup

There are five Histograms available in the histogram panel: the Histogram YCbCr, Histogram RGB, Histogram HSV, Histogram Luma, and the H/S Scope.

To set up the H/S Scope press the Scope Config button. This opens the Scope Config window. Click on the Histogram button on the right. Then use the pulldown menu to select H/S Scope. There are a number of options to set up the H/S Scope:

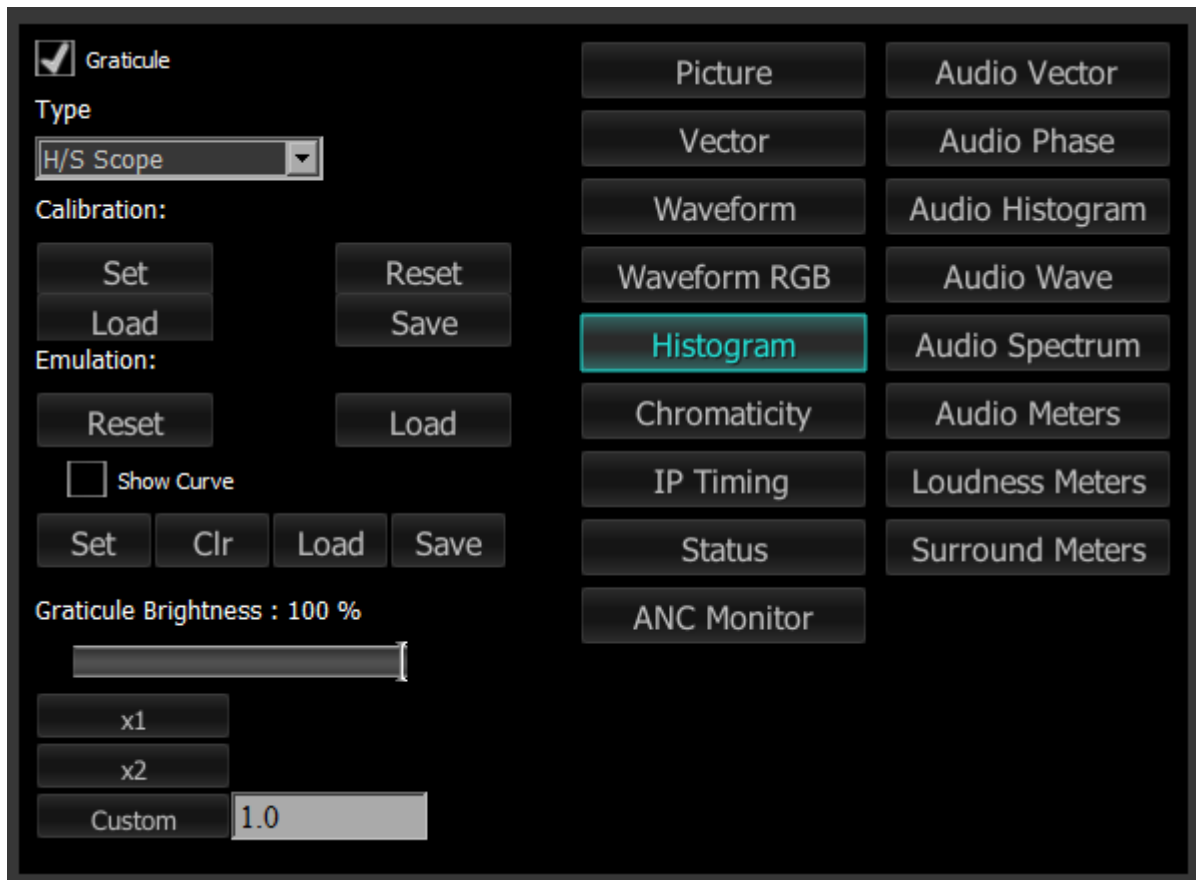

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the Graticule Brightness slider described below.

Calibration section – choices include:

- **Set** – given a camera and a DSC ChromaDuMonde color chart, click to calibrate the input so the hue and saturation levels are even across the spectrum. Creates a calibration settings file that may be saved into memory.
- **Load** – opens a browser which allows the user to browse to and load a saved calibration file.
- **Reset** – remove any calibration and display the signal unaltered, to show what the camera or device is seeing.
- **Save** – opens a save as window which allows the user to select a location and save the current calibration settings as a file.

Emulation section – choices include:

- **Reset** – reset the emulation values back to default.

- **Load** – load a calibration file, for a new camera to emulate the camera used to create the calibration file.

Show Curve section – choices include:

- **Set** – click to set the current curve into memory. With Show Curve selected, displays the curve as a white line at the top of the signal, for levels comparison. With the curve set, the user can then test other lights to see how the peaks and valleys of the curve line up with the signal.
- **Clear** – clear the current curve and return to default settings.
- **Load** – opens a browser which allows the user to browse for and select a saved curve file to display in the H/S Scope.
- **Save** – opens a save as window which allows the user to select a location and save the current curve settings as a file.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

H/S Scope Window

Here is the H/S Scope:

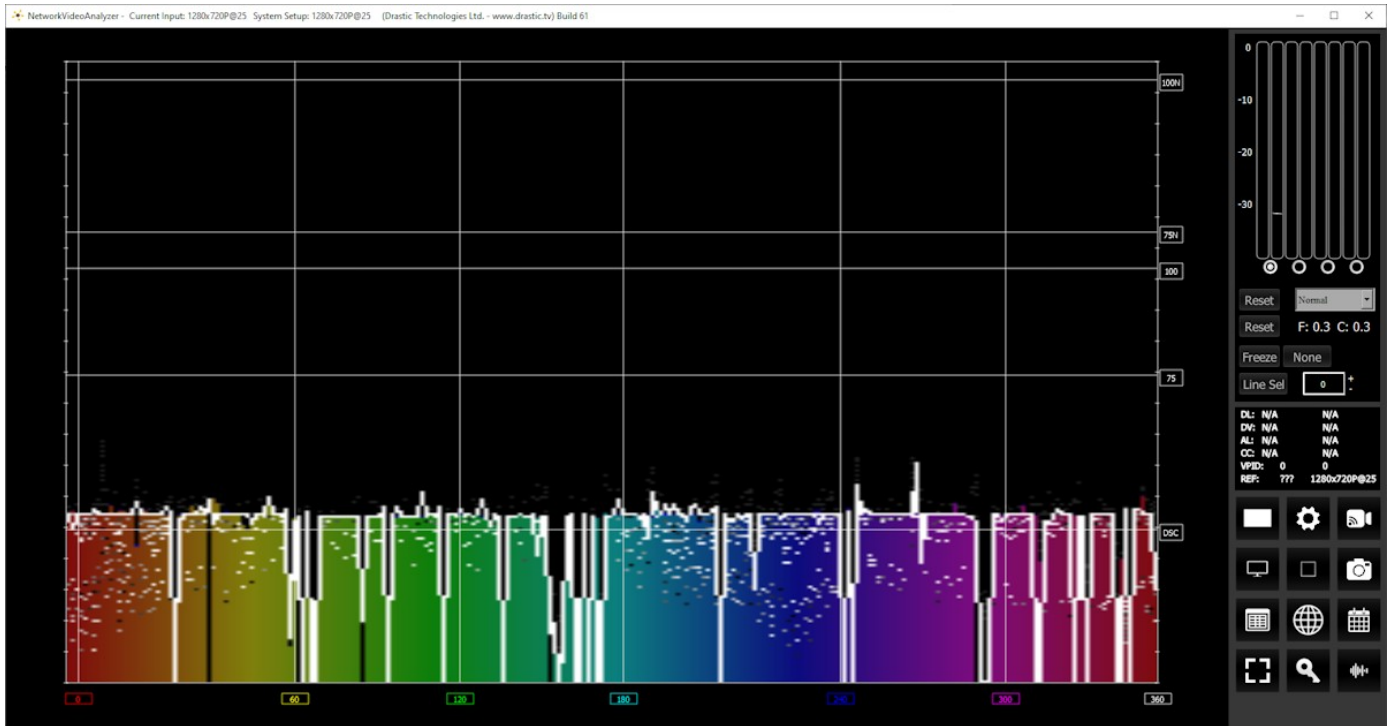

H/S Scope Histogram

H/S Scope – Designed for calibration of lighting or camera to a standard DSC ChromaDumonde chart. The target color level or saturation is calibrated to a single horizontal line in the chart. The color hue component is mapped horizontally, with standard 601, 709 or 2020 targets as vertical lines.

The Histogram view shows the distribution of red, green and blue within the signal as a series of discrete bars that make a continuous graph for each color. This display provides an overview of the tonal range of each color in the picture. Each bar is the count of the number of pixels for one of the 1024 possible colors. These totals are then auto ranged to fit within the graticule and represent the relationship between the shades of each color and between each other.

Each color has its own graph. The color's levels are represented from left to right, with the absolute left being 0 and the absolute right being 1024. The scale is presented as a percentage to allow for extremely bright or dark pictures to be analyzed without truncating.

The H/S (Hue/Saturation) Scope is designed to assist in calibrating lighting between cameras, or between different lighting setups. There is an instructional video located here:


<https://www.youtube.com/watch?v=or835LLlqVU>

and a similar one here:

https://www.youtube.com/watch?v=nHg-_yCxooU

H/S Scope Example

Here is an example where the H/S Scope reads the chroma signal response from a camera, to evaluate the Rosco DMG MIX LED fixture.

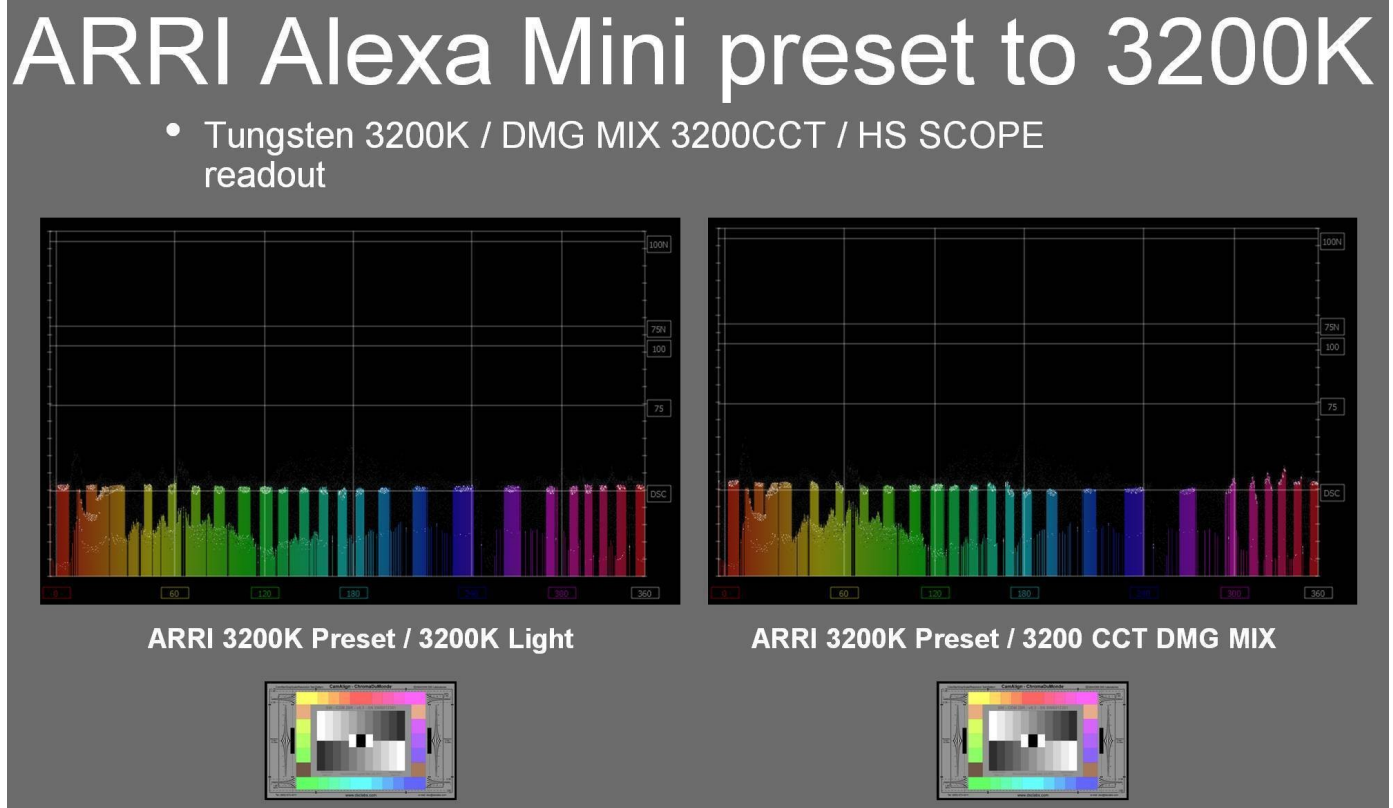

We used an ARRI and RED camera, preset to 3200K rec 709, for our tests, shooting a DSC ChromaDuMonde 24 + 4R chart. A Tungsten light source was the target reference for the Rosco DMG MIX to match on camera. This allowed the team to quantify their calibration work on the MIX. The results were encouraging as both on the RED and ARRI the on-camera chroma differences between the actual tungsten source and the MIX were very slight, based on the multiple points of the DSC chart. The H/S Scope is a good tool for evaluation and calibration for an LED source for on-camera use. Should adjustments to the spectrum be needed they can be adjusted in real time using the H/S Scope reference, thus getting camera accurate results.

Finally at the end of each Histogram setup, there are the following controls:

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size

x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.


Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Chromaticity

Chromaticity Setup

To set up the Chromaticity press the **Scope Config** button. This opens the Scope Config window. Click on the **Chromaticity** button on the right. There are a number of options to set up the Chromaticity display:

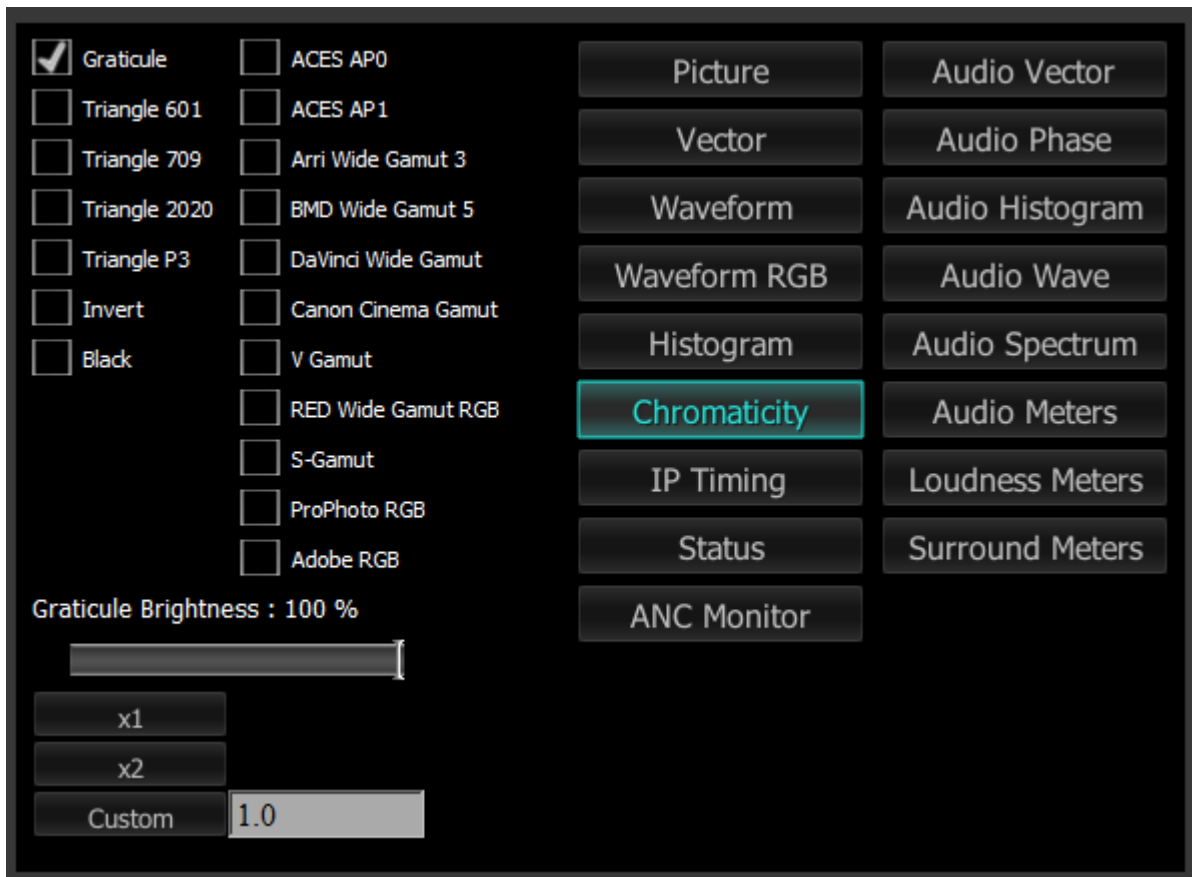

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Triangle 601 checkbox – when selected, displays the CCIR-601 (Rec. 601 or BT.601) triangle.

Triangle 709 checkbox – when selected, displays the Rec.709 (BT.709 or ITU 709) triangle.

Triangle 2020 checkbox – when selected, displays the BT.2020 (or Rec. 2020) triangle.

Triangle P3 checkbox – when selected, displays the P3 (DCI-P3 or DCI/P3) triangle.

Invert checkbox – when selected, displays the video signal over a black background instead of the Chromaticity hues background.

Black checkbox – when selected, displays the video as black. If unselected, the video will be displayed as white.

ACES AP0 checkbox - when selected, displays the ACES AP0 triangle. The ACES AP0 primaries form the smallest possible triangle which contains all the real colors. The result may be that a significant proportion of code values are “wasted” on unreal colors.

ACES AP1 checkbox - when selected, displays the ACES AP1 triangle. The ACES AP1 primaries are a compromise which code most colors likely to occur in images from real cameras using positive

values. Because even the most saturated ACEScc/ACEScct/ACEScg colors are still real, this means that the maths of grading operations works in a way which “feels” better to colorists.

Arri Wide Gamut 3 checkbox - when selected, displays the Arri Wide Gamut 3 triangle. Images encoded with Log C (C is for Cineon; the original Cineon log encoding is based on the density of color film negative) can be identified by their flat and desaturated nature. Whites and blacks are not extended to their maximum values. The reason for this: the Log C curve is a logarithmic encoding for images, the encoding has a grayscale characteristic similar to a scan from negative film. LogC3 images were based on the origins and requirements of the ALEV3 (the original ALEXA sensor).

BMD Wide Gamut 5 checkbox - when selected, displays the BMD Wide Gamut 5 triangle. Blackmagic Design specific triangle.

DaVinci Wide Gamut checkbox - when selected, displays the DaVinci Wide Gamut triangle. DaVinci specific triangle.

Canon Cinema Gamut checkbox - when selected, displays the Canon Cinema Gamut triangle. Canon created an expanded gamut color space they call DCI-P3+ using the same ~6300 K white point as DCI-P3. Otherwise, P3+ has no relation to DCI-P3 nor the Digital Cinema Initiative. Unlike the DCI-P3 color space, which defines an actual display technology, Canon's DCI-P3+ color space uses imaginary primaries which cannot be realized by any physical display technology.

V Gamut checkbox - when selected, displays the V Gamut triangle. This is the log curve and gamut used in Panasonic’s “Varicam” for utilization in recording and workflow composition. V-Log has characteristics similar to a log curve of a scan from negative film and is highly compatible with conventional film workflow.

RED Wide Gamut RGB checkbox - when selected, displays the RED Wide Gamut RGB triangle. REDWideGamutRGB is the new standardized colorspace option for RED footage. It can reproduce a much larger range of colors than REDcolor4, which is very useful for shots that have high saturation levels. However, it will look desaturated on a Rec709 monitor.

S-Gamut checkbox - when selected, displays the S-Gamut triangle. sRGB is a standard numerical encoding of colors, based on the RGB (red, green, blue) color model, for use on monitors, printers, and the internet. It is the current defined standard colorspace for the web, and it is usually the assumed colorspace for images that are neither tagged for a colorspace nor have an embedded color profile. The sRGB standard uses the same color primaries and white point as the ITU-R BT.709 standard for HDTV, but a different transfer function (or gamma) compatible with older CRT displays, and assumes a viewing environment closer to typical home and office viewing conditions.

ProPhoto RGB checkbox - when selected, displays the ProPhoto RGB triangle. The ProPhoto RGB color space, also known as ROMM RGB (Reference Output Medium Metric), is an output referred RGB color space developed by Kodak. It offers an especially large gamut designed for use with photographic output in mind. The ProPhoto RGB color space encompasses over 90% of possible surface colors in the CIE L*a*b* color space, and 100% of likely occurring real-world surface colors, making ProPhoto even larger than the Wide-gamut RGB color space.

Adobe RGB checkbox - when selected, displays the Adobe RGB triangle. Adobe RGB (1998) color space or opRGB is a color space developed by Adobe Inc. in 1998. It was designed to encompass most of the colors achievable on CMYK color printers, but by using RGB primary colors on a device such as a computer display. The Adobe RGB (1998) color space encompasses roughly 30% of the visible colors specified by the CIELAB color space – improving upon the gamut of the sRGB color space, primarily in cyan-green hues. It was subsequently standardized by the IEC as IEC 61966-2-5:1999 with a name opRGB (optional RGB color space) and is used in HDMI

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.


Chromaticity Window

Here is the Chromaticity window.

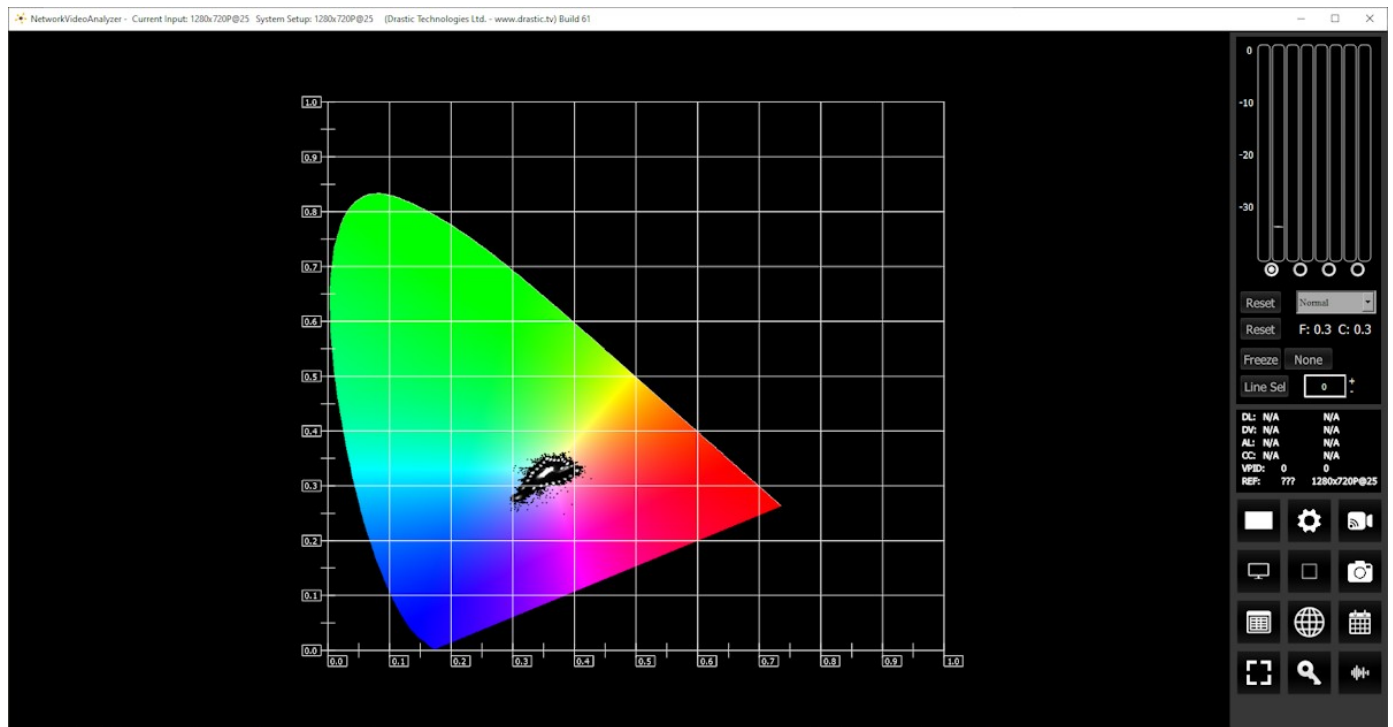


The Chromaticity scope provides a visual representation of the color in a video across all the colors of visible light. For a particular YCbCr range (BT.2020, P3, Rec.709, CCIR-601) a triangle can be superimposed. This will delineate the colors that fall within the acceptable range and those that are outside it. The color of the video within the CIE 1931 color display can be white, black, or the chromaticity hues background.

The display can also be inverted to use black as the background, and the colors to show the trace.

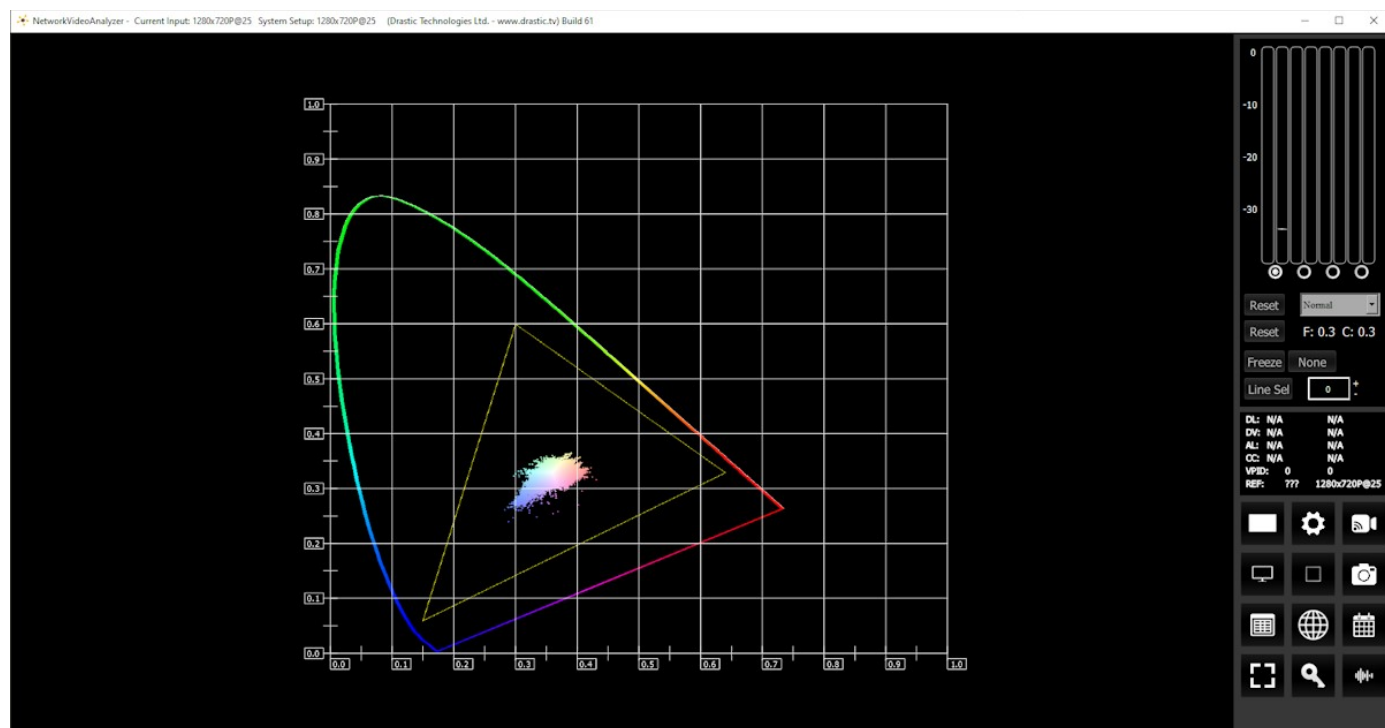

Here are some details regarding the Chromaticity Scope, including some of the commonly used gamut triangles that can be overlaid:

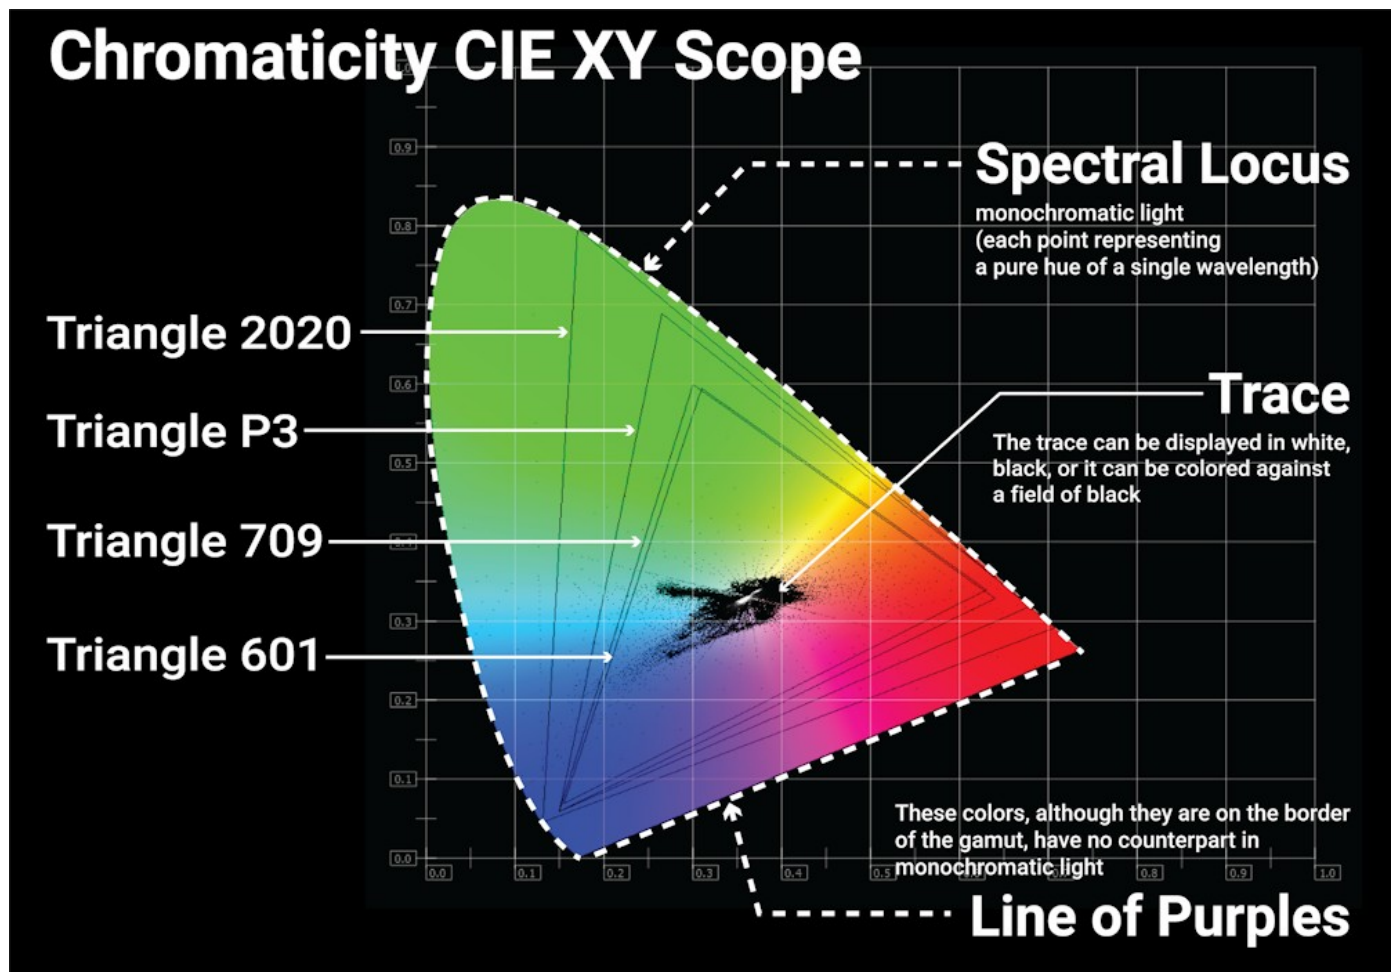

IP Timing Window

IP Timing Setup

To set up the IP Timing press the **Scope Config** button. This opens the Scope Config window. Click on the **IP Timing** button on the right. There are a number of options to set up the IP Timing display:



Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the IP Timing window.

IP Timing Window

Here is the IP Timing window.

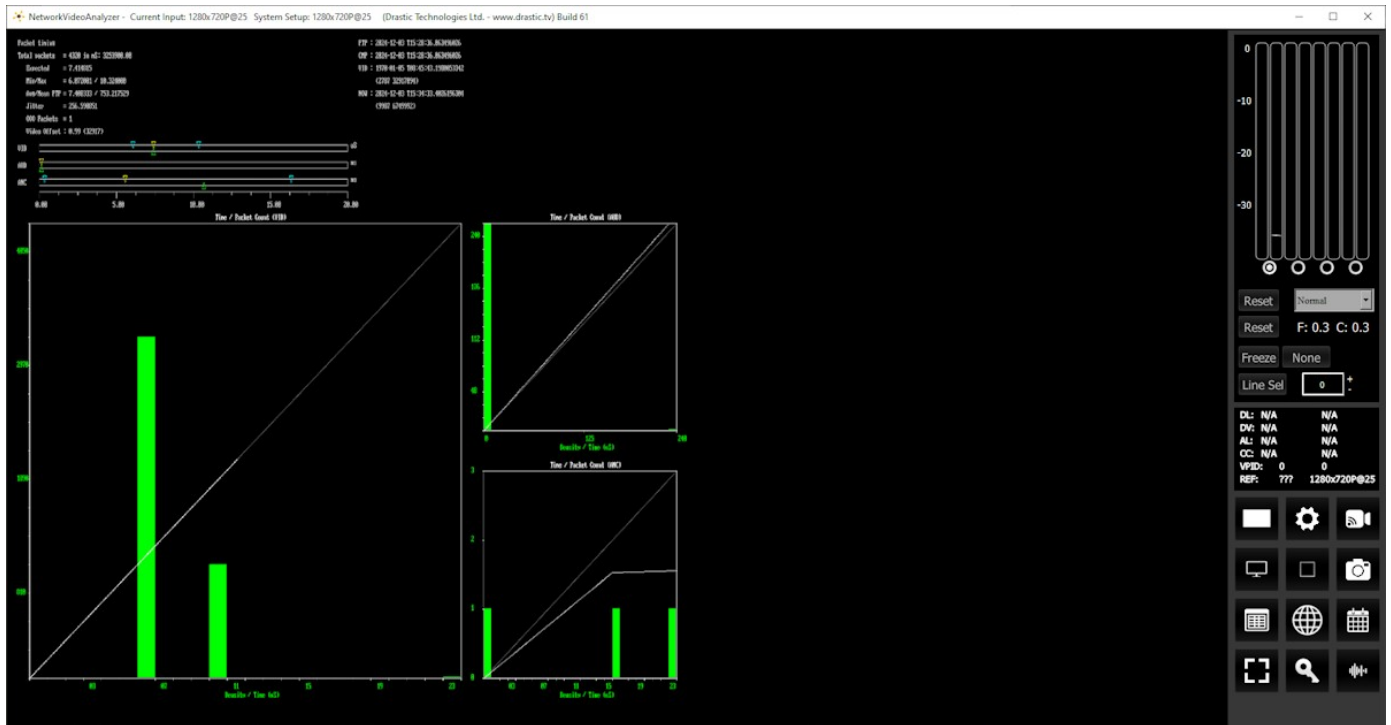


IP timing tracks the timing of the incoming SMPTE 2110 or 2022 packets on the network. The Min/Max/Avg/Mean of the distance between packets is calculated, as well as the expected value. Jitter and out of order packets are also tracked. A packet timing histogram is generated as well as a packet time vs ideal time line graph.

Status Window

Status Setup

To set up the Status press the **Scope Config** button. This opens the Scope Config window. Click on the **Status** button on the right. There are a number of options to set up the Status display:

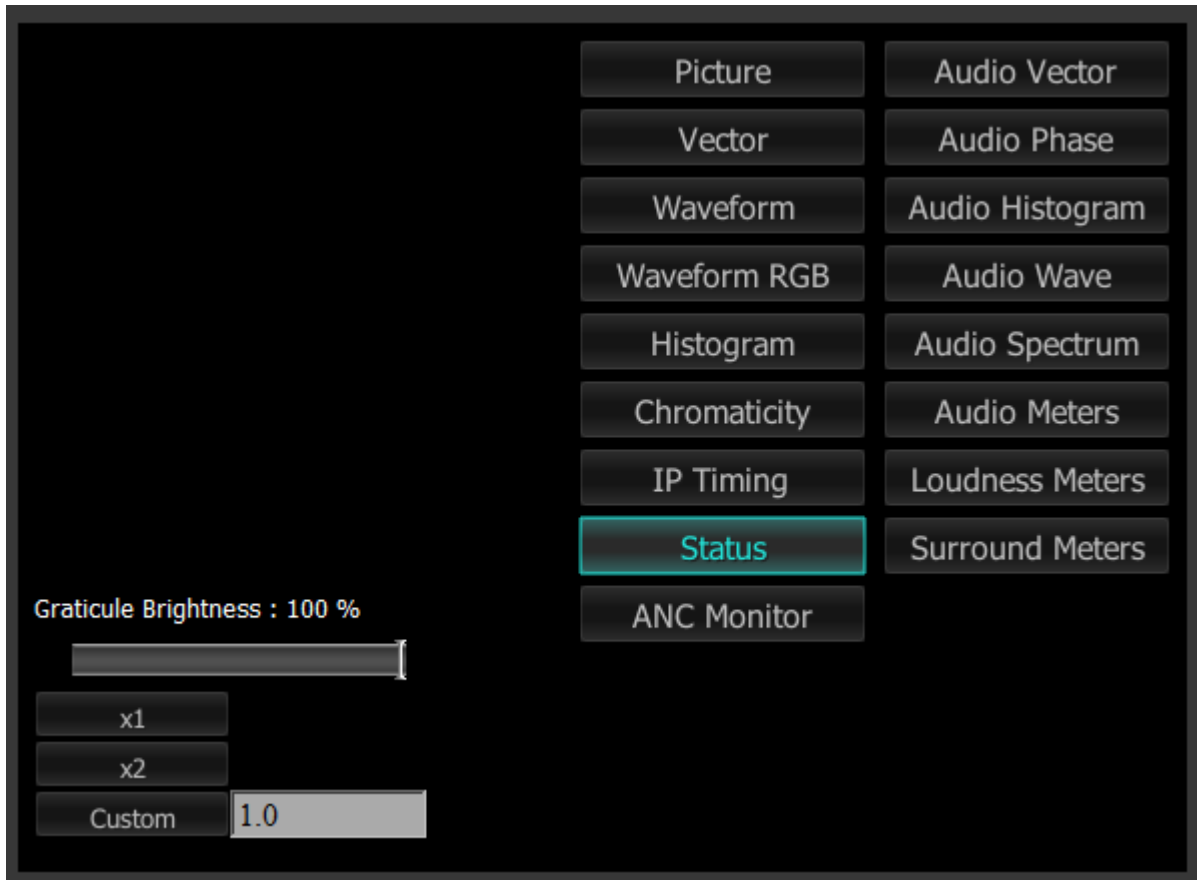

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness. As the Status display has no graticule, this control has no effect here.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Status Window

Here is the Status window.

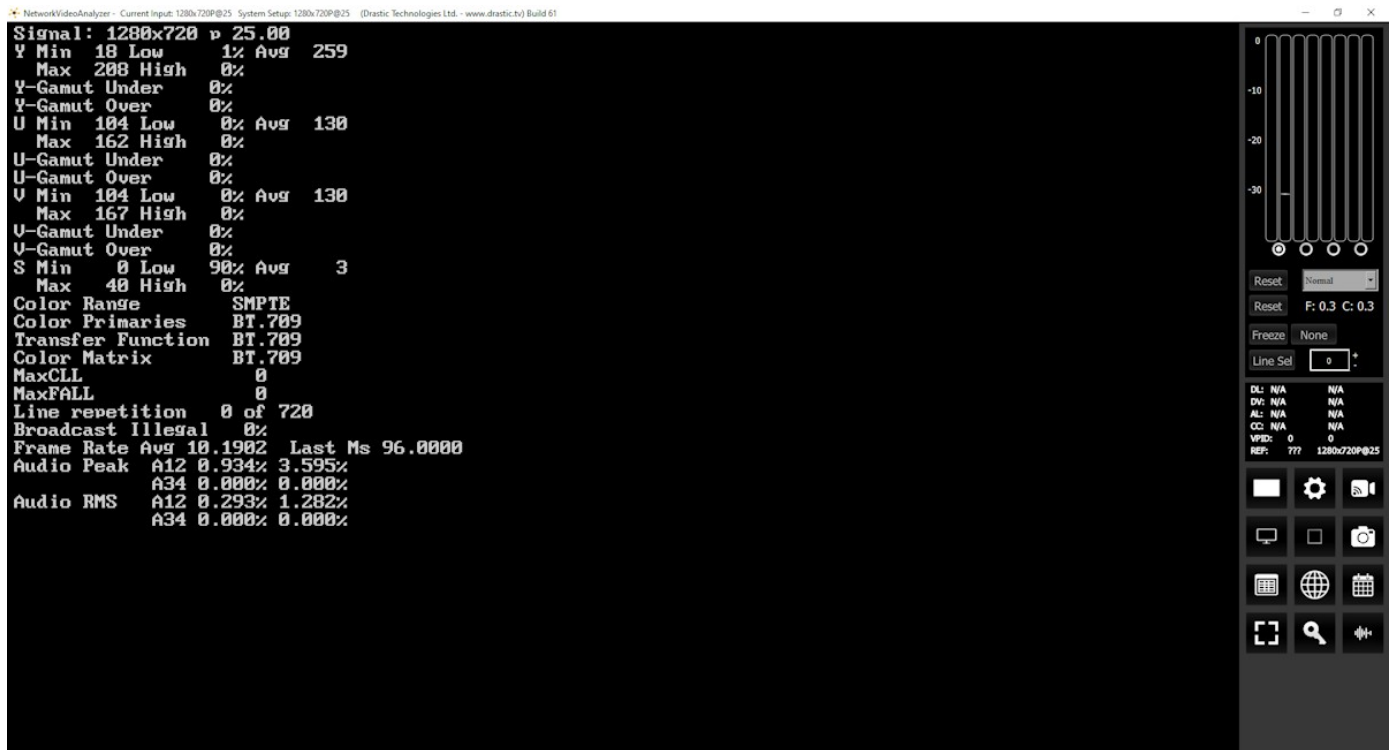

The Status window displays:

Signal: displays the current signal type

Y: The Y component. Displays Minimum and Maximum, Low and High, Average, Gamut Under, and Gamut Over values

U: The U component. Displays Minimum and Maximum, Low and High, Average, Gamut Under, and Gamut Over values

V: The V component. Displays Minimum and Maximum, Low and High, Average, Gamut Under, and Gamut Over values

S: Saturation. Displays Minimum and Maximum, Low and High, Average, Gamut Under, and Gamut Over values

Color Range: Full or SMPTE (Limited)

Color Primaries: BT 709 (HD), BT 470BG (PAL), SMPTE 170M (NTSC), BT 2020 (WCG)

Transfer Function: BT 709 (HD), SMPTE 170M (PAL/NTSC), SMPTE 2084 (HDR10/PQ), ARIB B67 (HLG)

Color Matrix: BT 709 (HD), BT 479BG (PAL), BT 601 (NTSC), BT 2020 (WCG)

MaxCLL: In HDR10 mode, Maximum Content Light Level

MaxFALL: In HDR10 mode, Maximum Frame – Average Light Level

Line repetition in number of lines over total possible lines

Broadcast illegal in percentage

Frame Rate: Displays Average, and Last Ms.


Audio Peak per channel pair

Audio RMS per channel pair

Anc Monitor Window

Anc Monitor Setup

To set up the Status press the **Scope Config** button. This opens the Scope Config window. Click on the **Anc Monitor** button on the right. There are a number of options to set up the Status display:

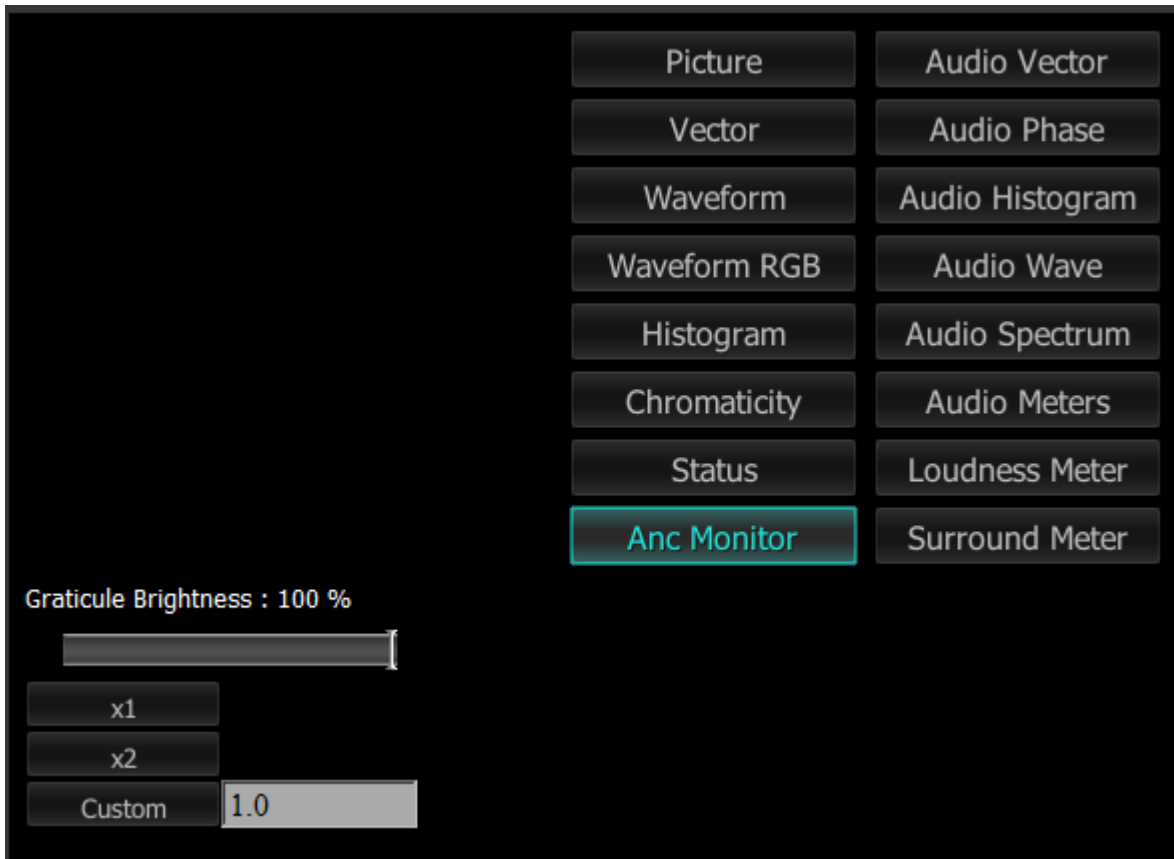

Graticule Brightness slider – this slider is present in all of the scopes. In the Status window there is no graticule, so this slider has no effect.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button or right clicking on the scope sets the display back to normal. Also, a mouse scroll wheel can be used to zoom in and out.

Pressing the x in the upper right corner will close the Scope Config window.

Anc Monitor Window

Here is the Anc Monitor window.

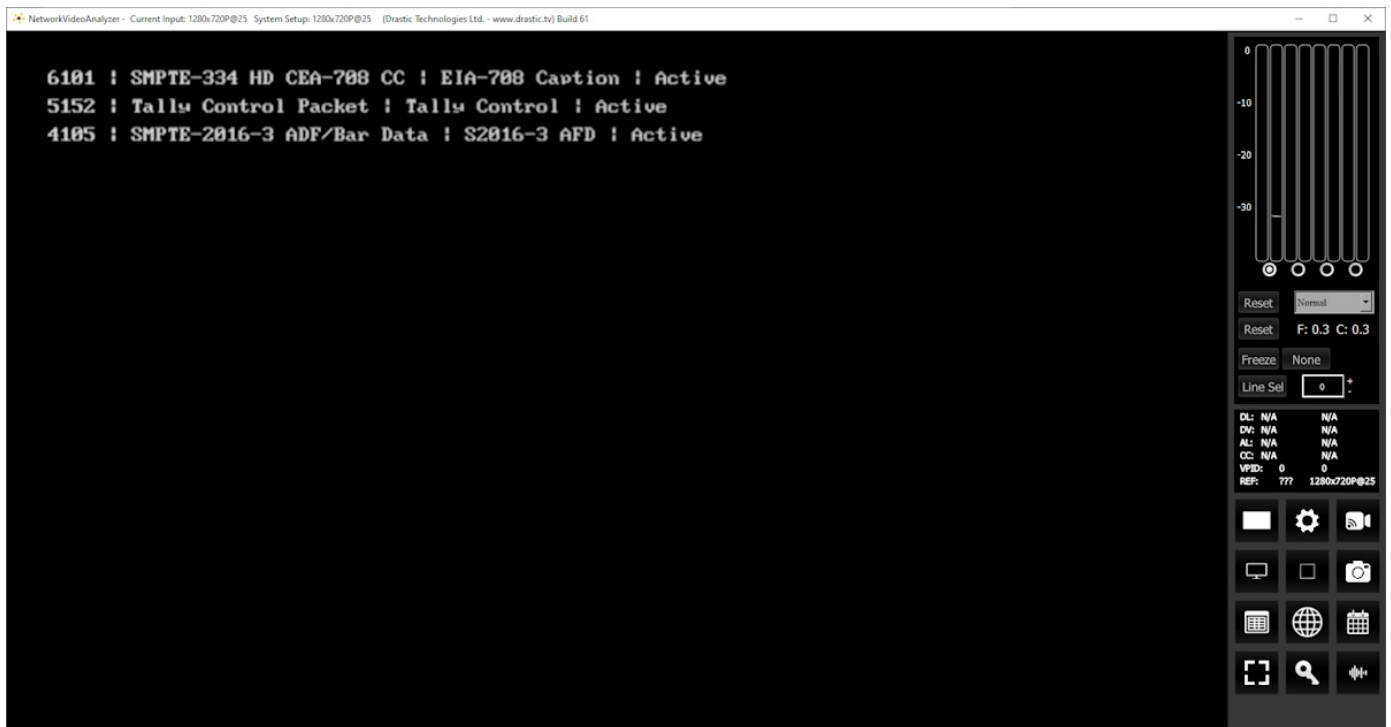

The Anc Monitor window displays each ancillary data stream present in the signal as a line of data. The data includes:

- Numerical ID – the number associated with the data type
- Name of the data type – the more detailed name of the data type
- A short descriptor for the data type
- Status – whether active, stopped, missing, etc.

Audio Vector

Audio Vector Setup

To set up the Audio Vectorscope press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Vector** button on the right. There are a number of options to set up the Audio Vectorscope display:



Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Lissajousxy checkbox – when selected, displays the relative phase of the selected audio pair in Lissajous XY mode.

Lissajous checkbox – when selected, displays the relative phase of the selected audio pair in Lissajous mode.

Polar checkbox – when selected, displays the relative phase of the selected audio pair in Polar mode.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size

x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.


Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Vector Window


There are 3 types of audio vectorscope displays available.

Lissajous XY mode

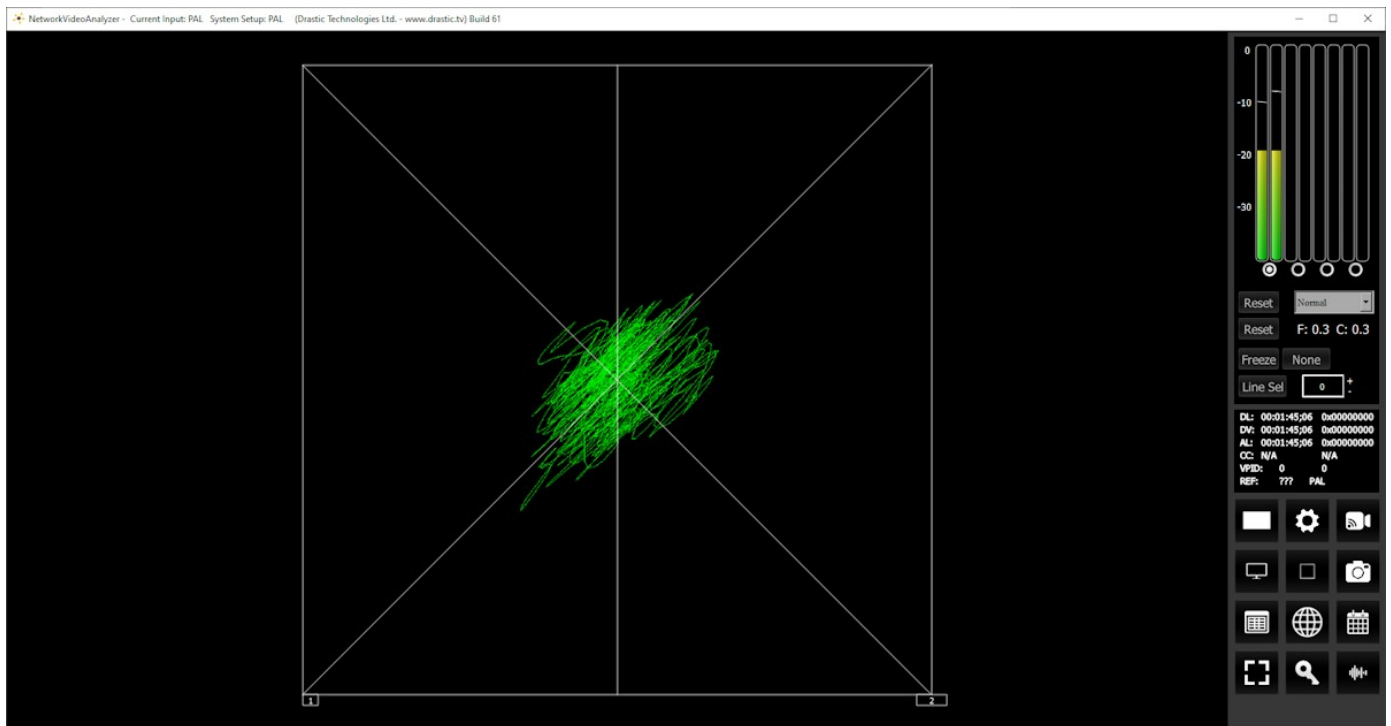


Lissajous XY mode centers the two audio channels along the X-Y axis (from the lower left corner to the upper right corner), and shows any difference between the channels as moving closer to vertical (left channel has more signal) or closer to horizontal (right channel has more signal).

Lissajous mode

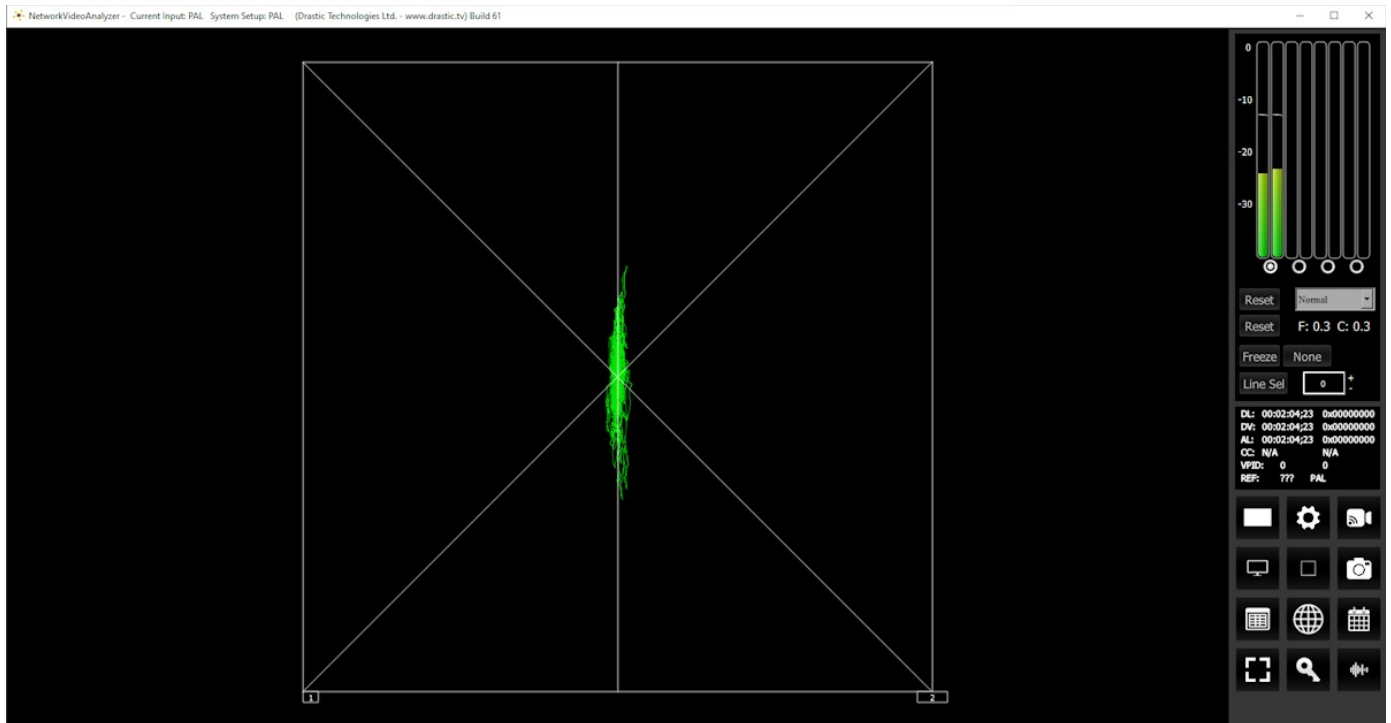

Lissajous mode centers the two audio channels along the vertical axis, and shows any difference between the channels as either angled to the left (left channel has more signal) or angled to the right (right channel has more signal).

Polar mode

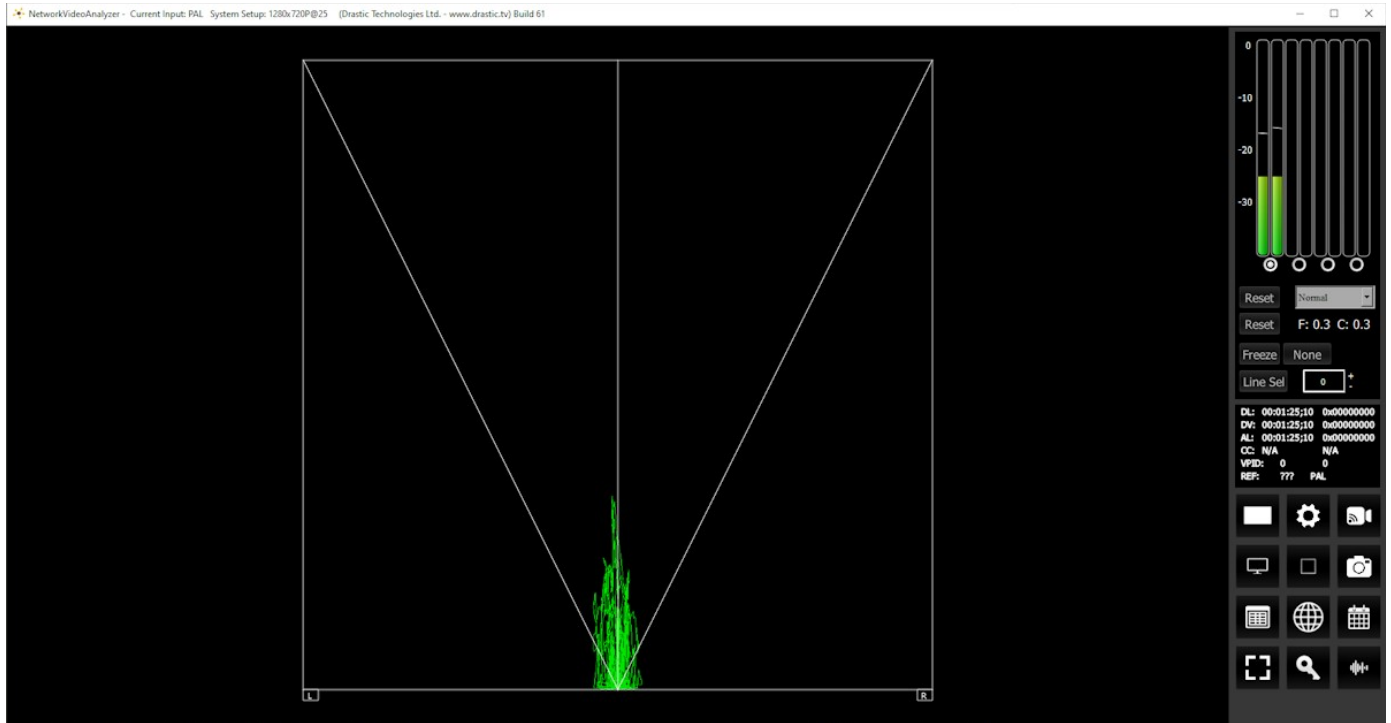

Polar mode centers the two audio channels along the vertical axis starting at the bottom center, and shows any difference between the channels as either angled to the left (left channel has more signal) or angled to the right (right channel has more signal). The audio vectorscope measures the difference between channels of a stereo pair. One channel drives the horizontal and the other the vertical deflection. This will show the relative phase of the two channels. The pair being monitored can be changed using the radio buttons under the audio meters at the top right.

Audio Phase

Audio Phase Setup

To set up the Audio Phase press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Phase** button on the right. There are a number of options to set up the Audio Phase display:



Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Phase Window

Here is the Audio Phase window.

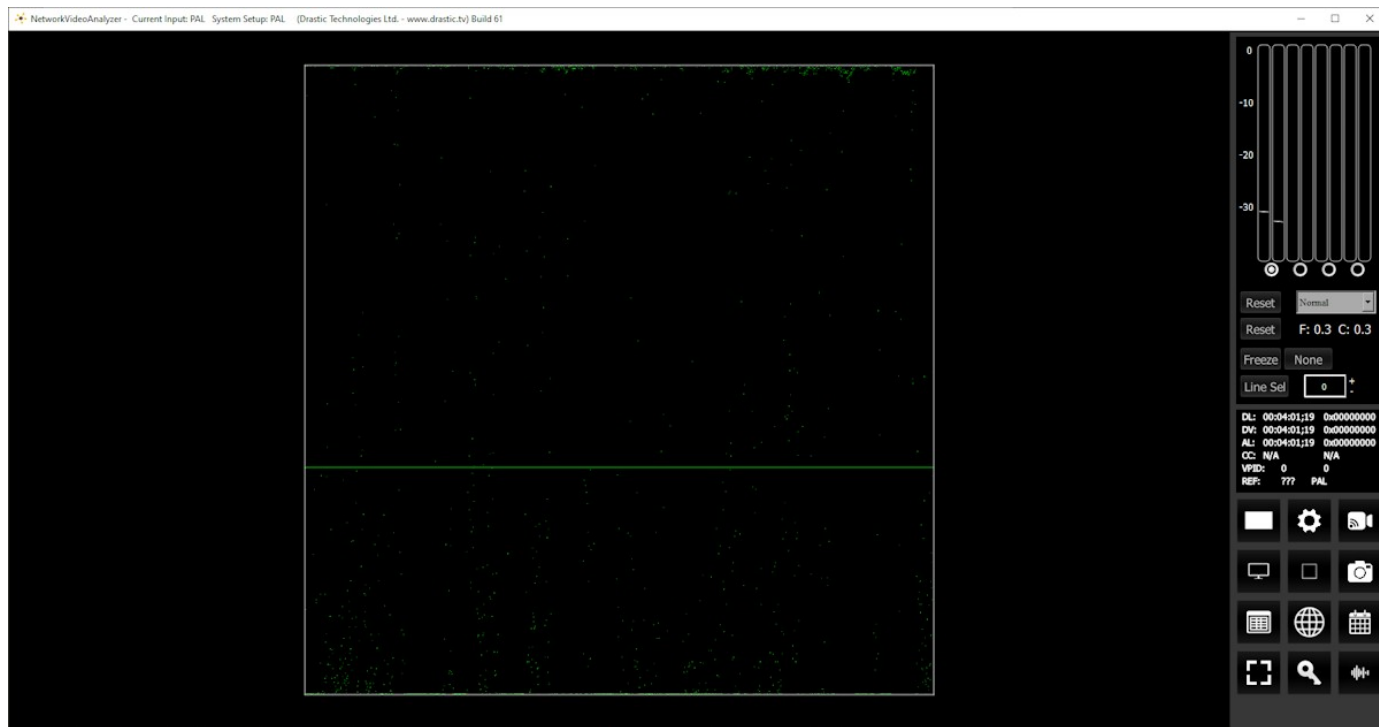


The audio phase meter shows the relative density of two audio channels and the relative loudness as a line moving towards the louder channel.

Audio Histogram

Audio Histogram Setup

To set up the Audio Histogram press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Histogram** button on the right. There are a number of options to set up the Audio Histogram display:

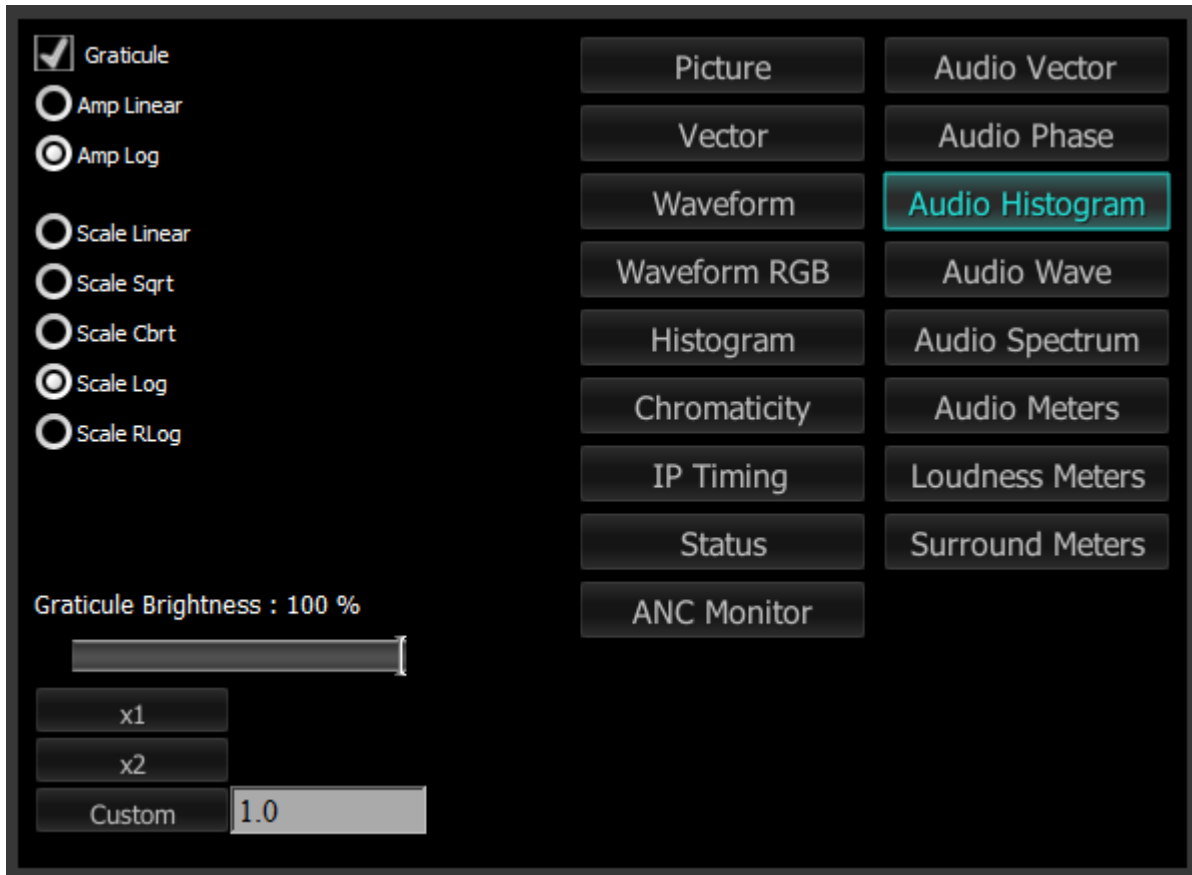

Graticule checkbox – when selected, the graticule is laid over the Audio Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Amp Linear selector – clicking in the Amp Linear checkbox sets the Amp to linear

Amp Log selector – clicking in the Amp Log checkbox sets the Amp to logarithmic

Scale Linear – clicking in the Scale Linear checkbox sets the scale to linear.

Scale Sqrt – clicking in the Scale Sqrt checkbox sets the scale to sqrt (square root).

Scale Cbrt – clicking in the Scale Cbrt checkbox sets the scale to cbrt (cubed root).

Scale Log – clicking in the Scale Log checkbox sets the scale to logarithmic.

Scale RLog – clicking in the Scale RLog checkbox sets the scale to R logarithmic (reverse logarithmic).

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Histogram Window

Here is the Audio Histogram window.

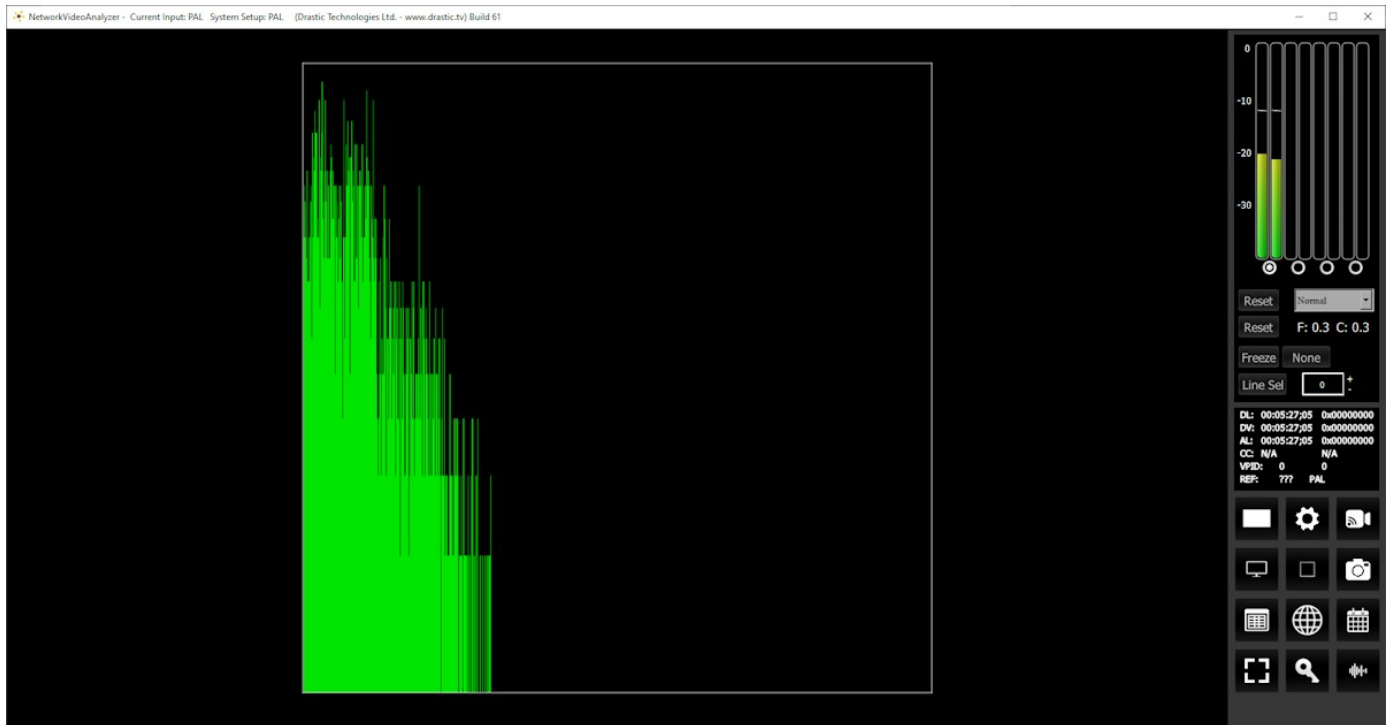


The audio histogram displays a bar chart of the levels of the components of an audio signal. This can be displayed as linear or logarithmic. The scale can be set as linear, square root, cube root, log or reverse log.

Audio Wave

Audio Wave Setup

To set up the Audio Wave press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Wave** button on the right. There are a number of options to set up the Audio Wave display:

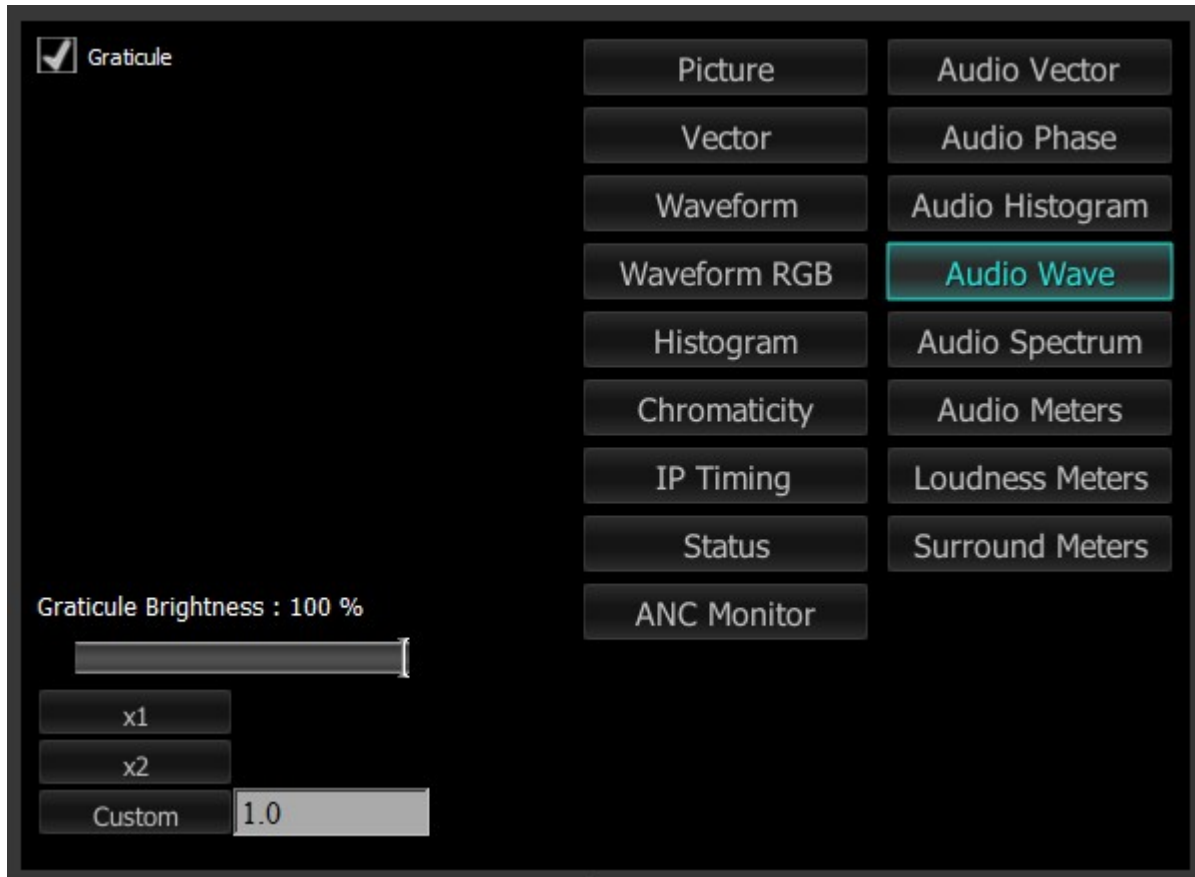

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button sets the display back to normal.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Wave Window

Here is the Audio Wave window.

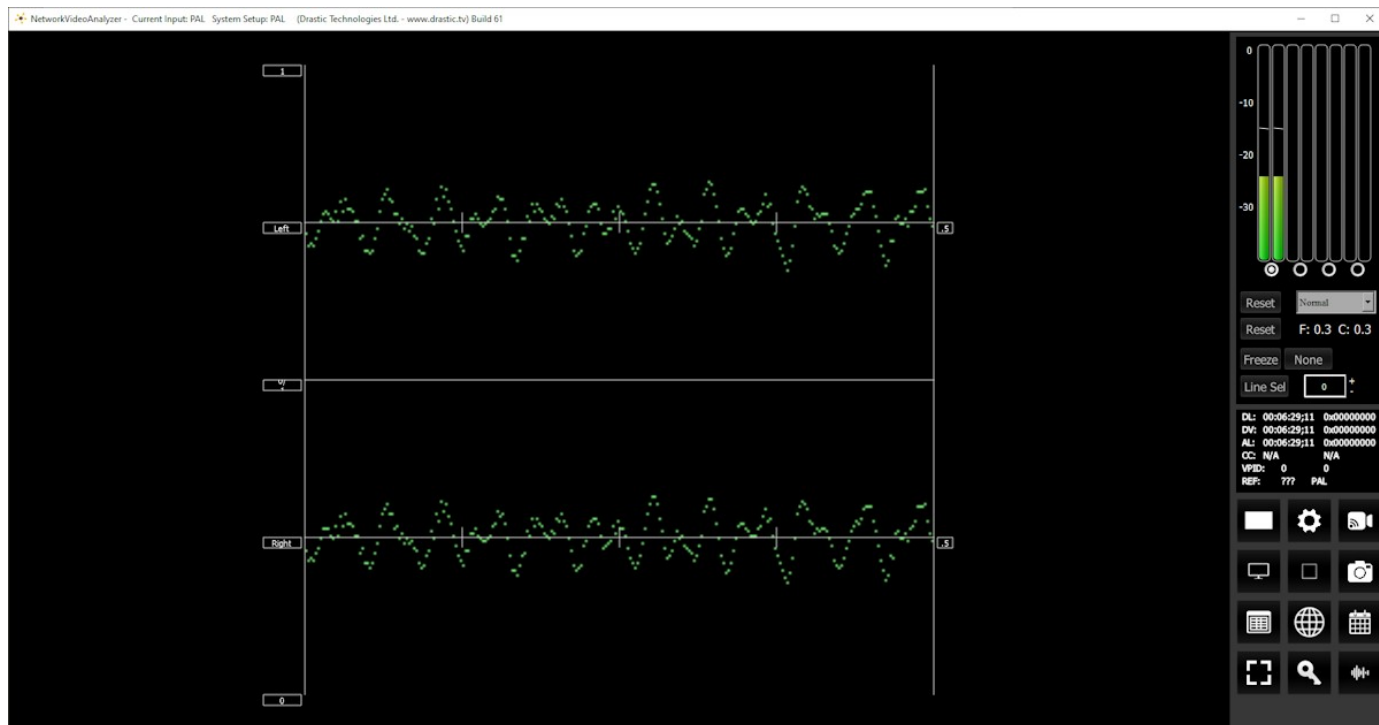


The audio waveform of any pair of channels can be displayed.

Audio Spectrum

Audio Spectrum Setup

To set up the Audio Spectrum press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Spectrum** button on the right. There are a number of options to set up the Audio Spectrum display:

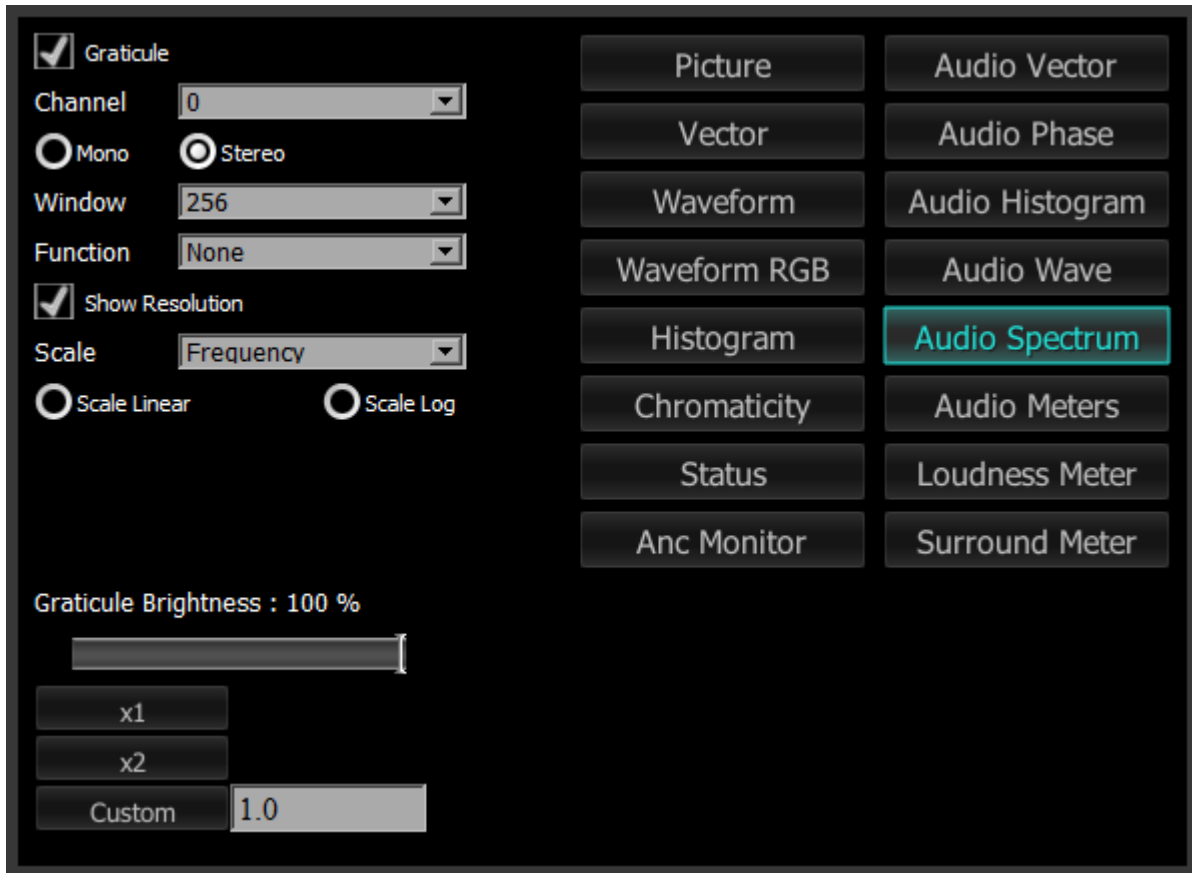

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Channel pulldown menu – lets the user select the first channel of the channel pair being monitored.

Mono / Stereo radio buttons – use these buttons to select between a mono (channel pair) or stereo (channel pair). Selecting one button de-selects the other.

Window pulldown – sets the number of lines, or resolution, of the spectrum bands. Select between 256, 512, 1024, or 2048.

Function pulldown – sets the type of audio spectrum windowing that will be used. Types include:

Hann - The function is named in honor of von Hann, who used the three-term weighted average smoothing technique on meteorological data. It is also known as **raised cosine**, because the zero-phase version, $w_0(n)$, is one lobe of an elevated cosine function. Smooth taper, moderate resolution.

Bartlett - Triangular, moderate taper. General use, low complexity.

Welch - Parabolic taper. Reducing spectral leakage, good for large windows

Blackman - Strong taper, high side-lobe suppression. High precision, lower spectral leakage, faster calculations with high side-lobe suppression.

Blackman-Harris - for low spectral leakage if you can afford a wider main lobe, the Blackman-Harris window is suitable.

Nuttall - for low spectral leakage if you can afford a wider main lobe, the Nuttall window is suitable.

Gaussian-2.5 - shaped according to a Gaussian function, providing smooth transitions. The Gaussian window is known for providing a good balance between main-lobe width (frequency resolution) and side-lobe height (spectral leakage).

Gaussian-3.5 - shaped according to a Gaussian function, providing smooth transitions. The Gaussian window is known for providing a good balance between main-lobe width (frequency resolution) and side-lobe height (spectral leakage).


Gaussian-4.5 - shaped according to a Gaussian function, providing smooth transitions. The Gaussian window is known for providing a good balance between main-lobe width (frequency resolution) and side-lobe height (spectral leakage).

Flat Top - designed to provide the least spectral distortion. It has very flat main lobes and significantly reduced side lobes, making it useful for applications requiring high precision in amplitude measurements.


Show Resolution checkbox – when selected, displays the resolution value above the scope.

Scale pulldown menu – select between Frequency, and Octave.


With **Frequency** selected, the graticule offers frequency markers along the bottom:

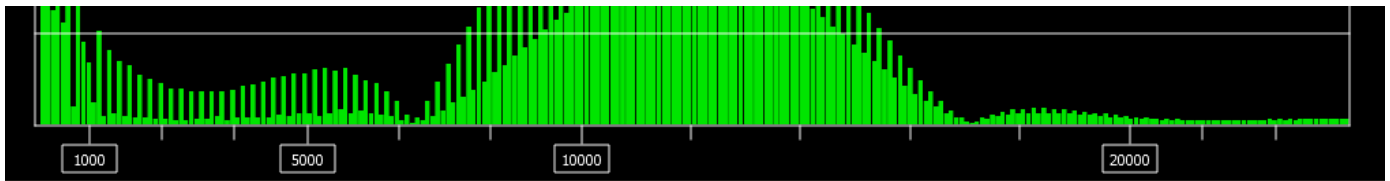

With **Octave** selected, the graticule offers a scale that shows where C is at each octave. For reference C4 is middle C on the piano.

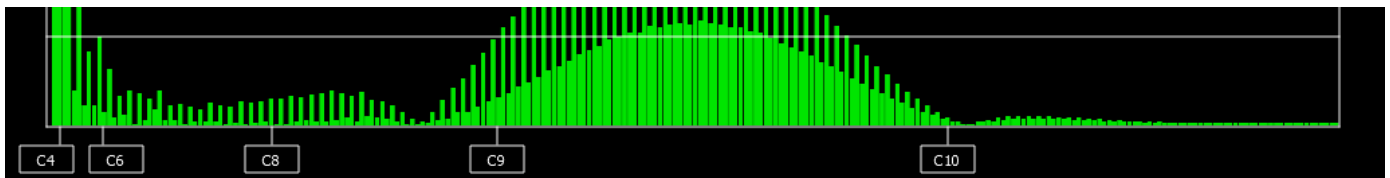

Scale **Linear** and **Log** buttons – with Linear selected (above), the scale shows each octave as doubling the last. With Log (below) selected, the octaves are more evenly spaced.

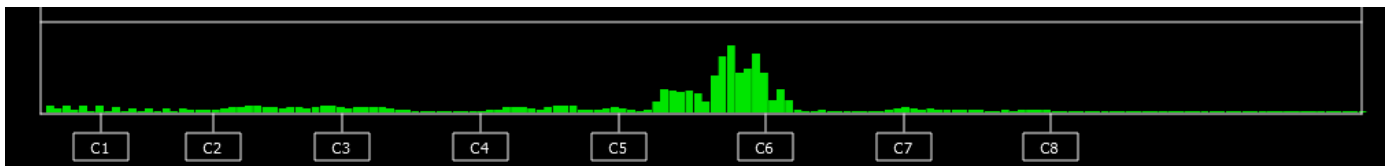

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size

x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.


Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button or right clicking on

the scope sets the display back to normal. Also, a mouse scroll wheel can be used to zoom in and out.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Spectrum Window

Here is the Audio Spectrum window.

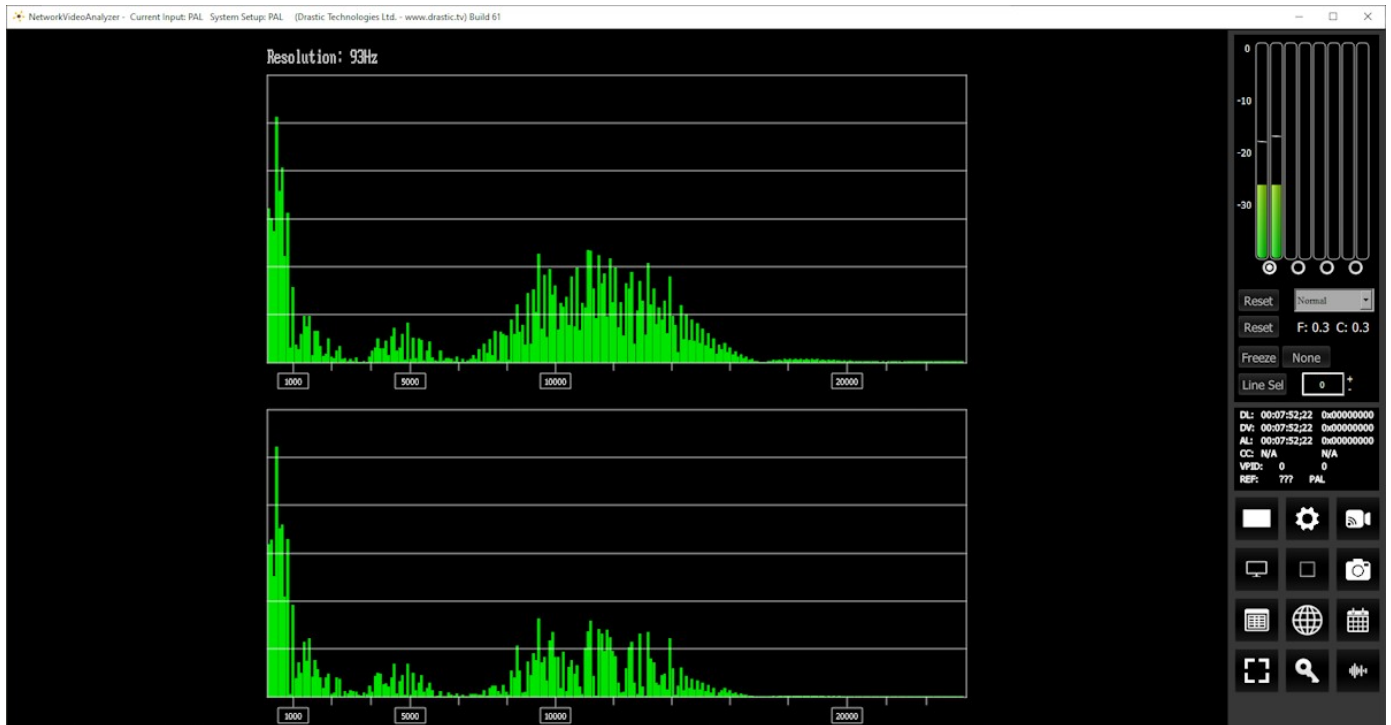


The audio spectrum of any pair of channels can be displayed. For stereo signals, left and right are shown stacked.

Audio Meters

Audio Meters Setup

To set up the Audio Meters press the **Scope Config** button. This opens the Scope Config window. Click on the **Audio Meters** button on the right. There are a number of options to set up the Audio Meters display:

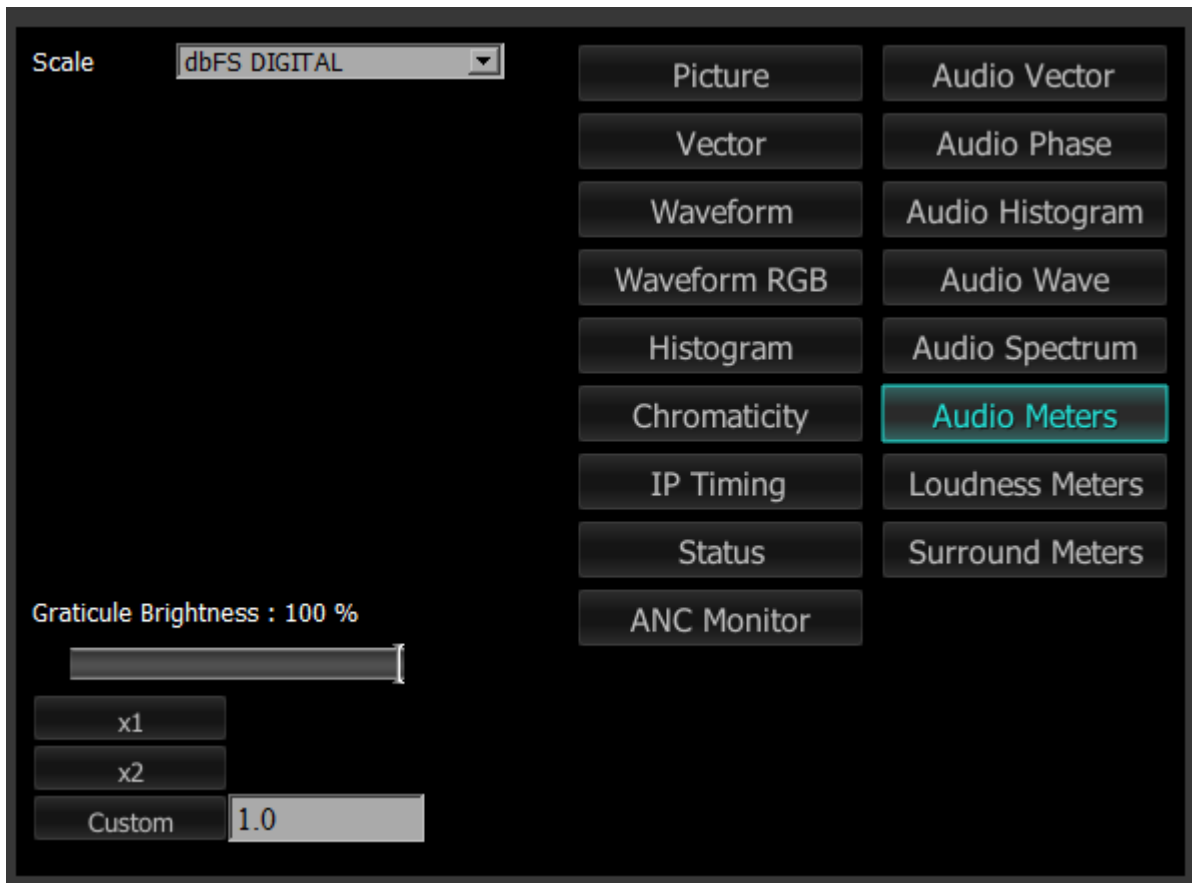

Scale pulldown menu – provides three types of audio scale: dbFS DIGITAL, SMPTE dbVU, and EBU dbVU. Here is a chart with the correspondences:

dbFS DIGITAL	SMPTE (dbVU)	EBU (dbVU)	
0	+20 (0 dbFS SMPTE)	+24	
-6	+14	+18	
-10	+10	+6	
-20	0	+4	(SMPTE Align) (Yellow tag)
-24	-4	0	(EBU Align) (Yellow tag)
-32	-12	-8	
-40	-20	-16	

-50	-30	-26	
-----	-----	-----	--

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button or right clicking on the scope sets the display back to normal. Also, a mouse scroll wheel can be used to zoom in and out.

Pressing the x in the upper right corner will close the Scope Config window.

Audio Meters Window

Here is the Audio Meters window.

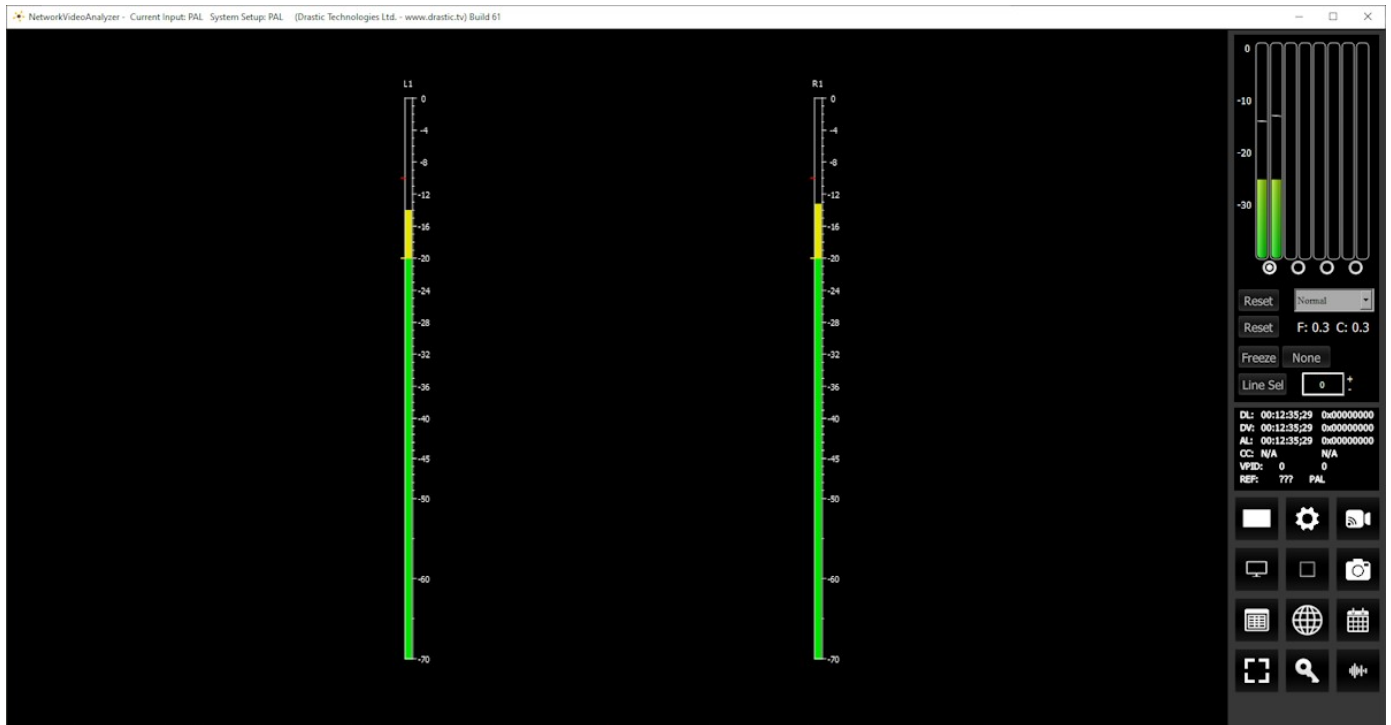

A set of up to 16 audio meters are displayed, depending on the capabilities of the system. Channels not being used are shown as muted.

Loudness Meter


Loudness Meter Setup

To set up the Loudness Meter press the **Scope Config** button. This opens the Scope Config window. Click on the **Loudness Meter** button on the right. There are a number of options to set up the Loudness Meter display:




Config button – opens the loudness configuration dialog.

With either of the loudness scales set, a Config button becomes available.



Pressing this will open the **Loudness Meter Config** dialog.

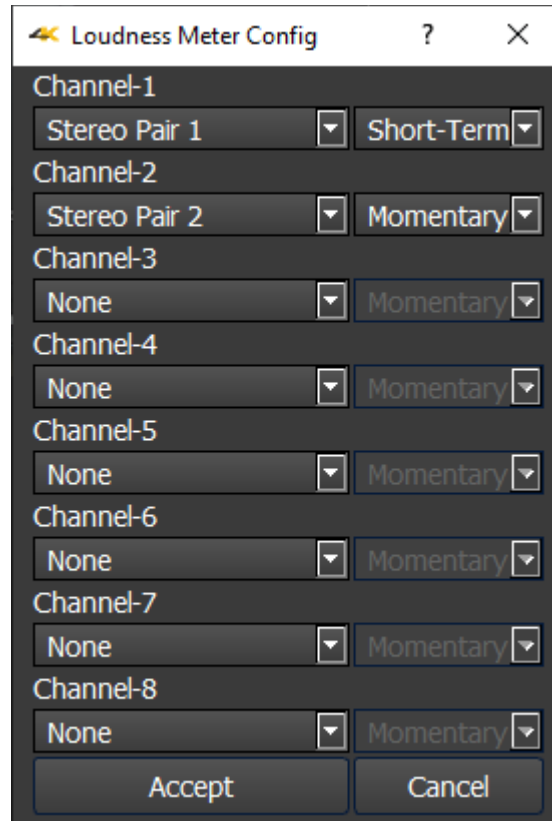

In this dialog there are a number of presets for monitoring differing audio input types. Presently these include:


- None
- 5.1 Surround
- 5.1-Protocols - L C R Ls Rs Lfe
- 5.1 Smppte - L R C Lfe Ls Rs
- 5.1-AAC - C L R Ls Rs Lfe
- 5.1-DTS - L R Ls Rs C Lfe
- Stereo Pair 1
- 7.1 Surround
- 7.1-Protocols - L C R Lss Rss Lsr Rsr Lfe
- 7.1-Smppte - L R C Lfe Lss Rss Lsr Rsr
- 7.1-EXT - L R C Lfe Lss Rss Lsr Rsr
- 7.1-Dolby - L C R Ls Rs Lfes Bsl Bsr
- Stereo Pair 2

The descriptions for the channels (abbreviated above) are as follows:

- L - Left
- R = Right
- C = Center
- Ls = Left Surround
- Rs = Right Surround

- Lfe = Low Frequency Effects
- Lss = Left Side Surround
- Rss = Right Side Surround
- Lsr = Left Rear Surround
- Rsr = Right Rear Surround
- Lfes = Low Frequency Effects
- Bsl = Back Surround Left
- Bsr = Back Surround Right

Each channel can be set up separately. Once an input type has been selected, the user can select between measurement options.

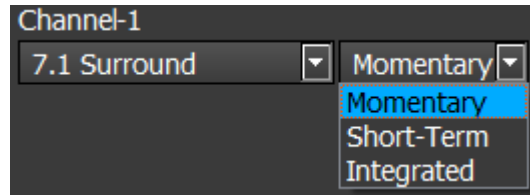

These include:

- **Momentary Loudness** - measures the loudness of the past 400 Milliseconds
- **Short-Term Loudness** - measures the loudness of the past 3 Seconds
- **Integrated Loudness** - (Also called Programme Loudness) indicates how loud the programme is on average, and is measured over entire duration of material

At the bottom of the Loudness Meter Config dialog, there is an **Accept** button to enable any changes you have made, and there is a **Cancel** button to exit the dialog without making any changes to the settings.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size

x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button or right clicking on the scope sets the display back to normal. Also, a mouse scroll wheel can be used to zoom in and out.

Pressing the x in the upper right corner will close the Scope Config window.

Loudness Meter Window

Here is the Loudness Meter window.




A set of up to 8 loudness meters (pairs) are displayed, depending on the capabilities of the system. Note that the Config must be set to one of the loudness settings for this set of meters to see any levels.

Surround Meter

Surround Meter Setup


To set up the Surround Meter press the **Scope Config** button. This opens the Scope Config window. Click on the **Surround Meter** button on the right. There are a number of options to set up the Surround Meter display:

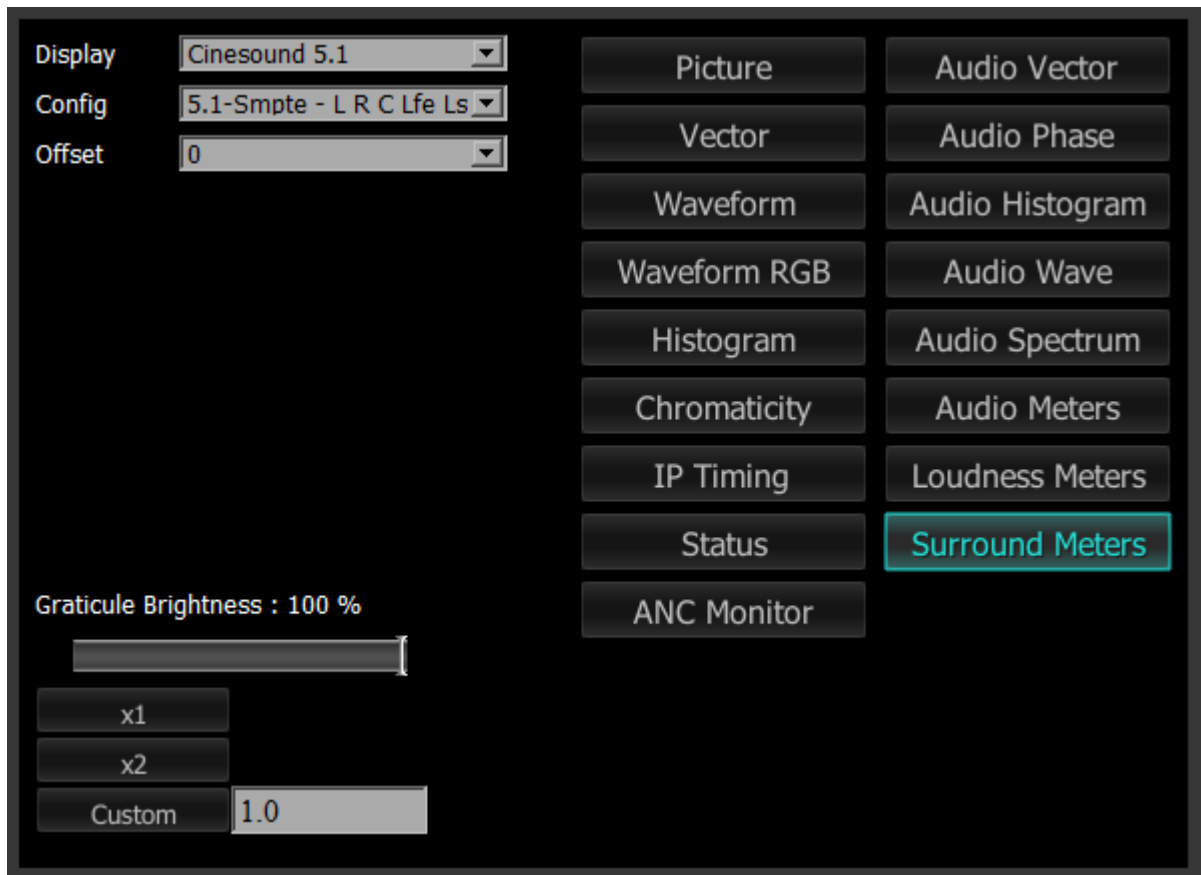

Display pulldown – select between Cinesound 5.1 of Cinesound 7.1.


Config pulldown – select the ordering of the channels per specific workflow, such as ProTools, SMPTE etc. The following setups are available:

With Cinesound 5.1 selected:

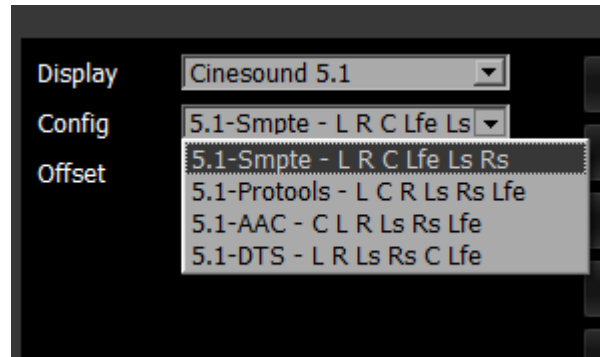

- 5.1 Smpte - L R C Lfe Ls Rs
- 5.1-Protocols - L C R Ls Rs Lfe
- 5.1-AAC - C L R Ls Rs Lfe
- 5.1-DTS - L R Ls Rs C Lfe

With Cinesound 7.1 selected:

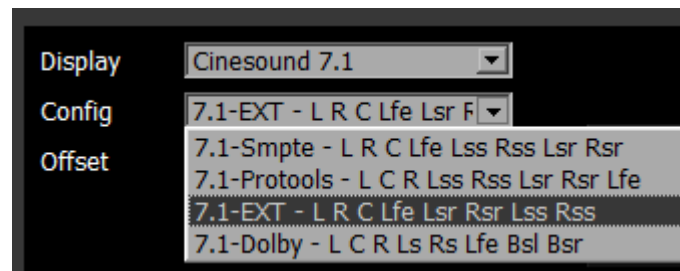

- 7.1-Smpte - L R C Lfe Lss Rss Lsr Rsr
- 7.1-Protocols - L C R Lss Rss Lsr Rsr Lfe
- 7.1-EXT - L R C Lfe Lss Rss Lsr Rsr
- 7.1-Dolby - L C R Ls Rs Lfe Bsl Bsr

The descriptions for the channels (abbreviated above) are as follows:

- L = Left
- R = Right
- C = Center
- Ls = Left Surround
- Rs = Right Surround
- Lfe = Low Frequency Effects
- Lss = Left Side Surround
- Rss = Right Side Surround
- Lsr = Left Surround Rear
- Rsr = Right Surround Rear
- Bsl = Back Surround Left
- Bsr = Back Surround Right

Offset pulldown – use the pulldown menu to rotate the channels, if necessary, to get the first channel of surround sound to line up with your source, or monitoring setup.

Graticule checkbox – when selected, the graticule is laid over the Histogram display. The brightness of the Graticule may be adjusted using the **Graticule Brightness** slider described below.

Graticule Brightness slider – moving the Graticule Brightness slider adjusts the brightness of the graticule overlay, 0% providing no display and 100% being maximum brightness.

x1 button – clicking this button sets the display to standard size


x2 button – clicking this display zooms in to set the display at 200%, or 2x normal display. Pressing the x1 button sets the display back to normal.

Custom button and field – The user may enter a custom enlargement value in the field, and press the Custom button to zoom in and see details up close. Pressing the x1 button or right clicking on the scope sets the display back to normal. Also, a mouse scroll wheel can be used to zoom in and out.

Pressing the x in the upper right corner will close the Scope Config window.

5.1 Surround Sound Window


The Surround Sound window has 4 modes for setting up 5.1 inputs.

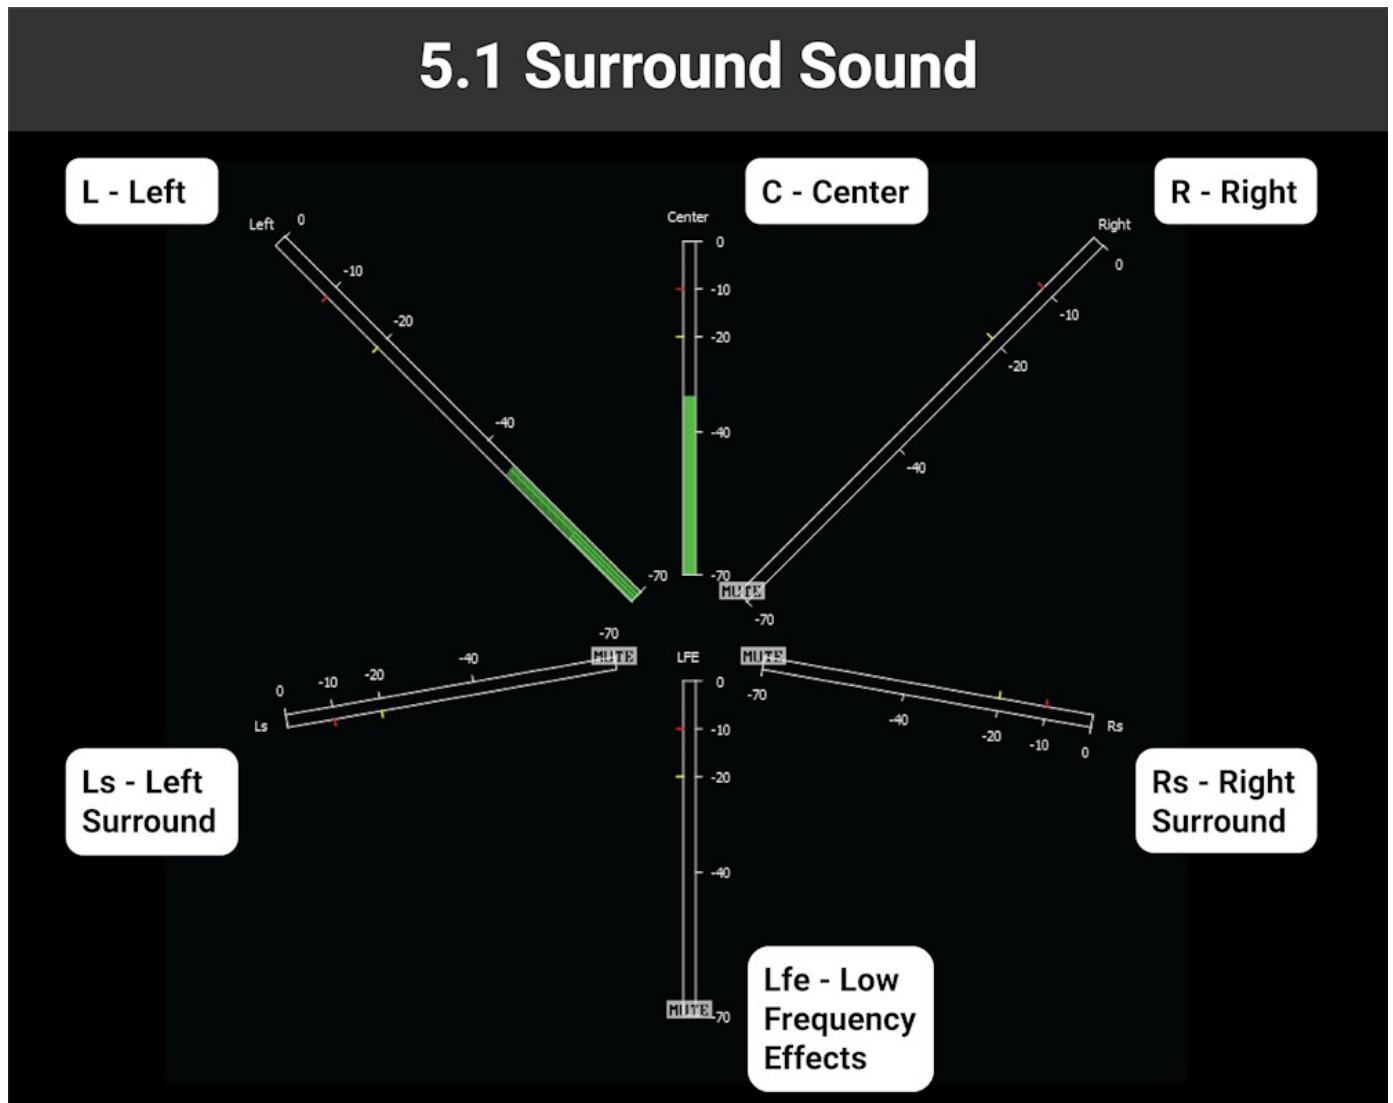

Smpte - L R C Lfe Ls Rs
Protools - L C R Ls Rs Lfe
AAC - C L R Ls Rs Lfe
DTS - L R Ls Rs C Lfe

7.1 Surround Sound Window

The Surround Sound window has 4 modes for setting up 7.1 inputs.

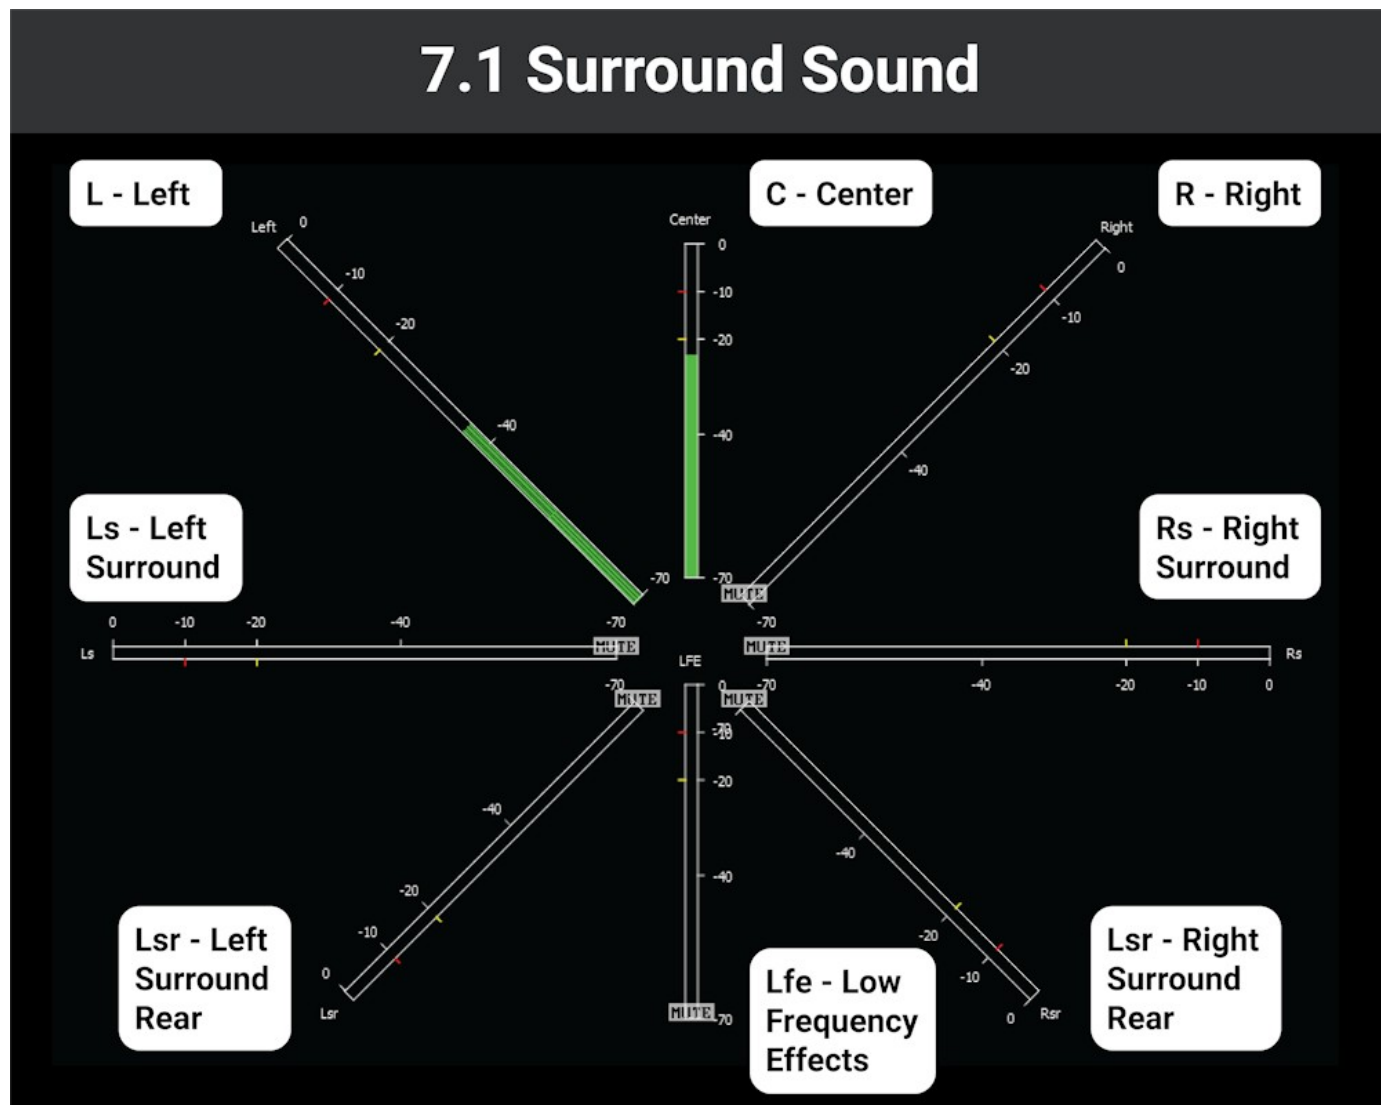

Smpte - L R C Lfe Lss Rss Lsr Rsr
Protools - L C R Lss Rss Lsr Rsr Lfe
EXT - L R C Lfe Lsr Rsr Lss Rss
Dolby - L C R Ls Rs Lfe Bsl Bsr



System Configuration button – Opens the System Configuration window, which allows the user to adjust settings for the video and audio I/O type, and to license the software.

System Configuration Window

Here is a look at the options in the System Configuration window.

ScopeDirect Internal (v8.0.61)

Video Input: No video Input

12G Type: Square division (SQD)

Video Format: NTSC CCIR-601

Color Format: YCbCr 4:2:2 8 Bit

Primaries: Rec 709 - Full RGB

Transfer: SDR 709/601

Picture Mode: No Up/Down Converter

Down Convert: No Monitor Setup

Output: Composite

Closed Caption: Disable

Audio Input: No Audio Input

Audio Scale: LUFS -23 EBU 9

Board Type: Adobe ScopeDirect

Board Select: Board 1

Preferred Scan: Auto

Active Region: X1: 0 Y1: 42 X2: 640 Y2: 522

☒ Auto Follow Input ☒ Scope VBlank

☒ Play Audio Computer Speakers

Audio Channels: ☒ 8

Audio Pairs: ☒ 1/2 ☐ 3/4 ☐ 5/6 ☐ 7/8

☒ Check for new versions on startup

Check For Updates License Done

The Settings window is designed to sense and reflect the capabilities of the board or stream the system is set up to view.

The top bar of the Config window displays the input setting, shows the version number, and offers an X to close the window.




When set to an NDI input, the IP Video setup button appears just below the top bar, and the 12G Type pulldown is removed. When set to another source, the IP Video Setup button disappears and the 12G Type pulldown reappears.


IP Video Setup



IP Video Setup – where an IP video source is being used, an IP Video Setup button will appear on the top section of the Configuration window. (the 12G Type pulldown will disappear though) It opens the **Open URL** window, which allows the user to select between available IP sources. The list will be populated with the most recent sources that have been selected.

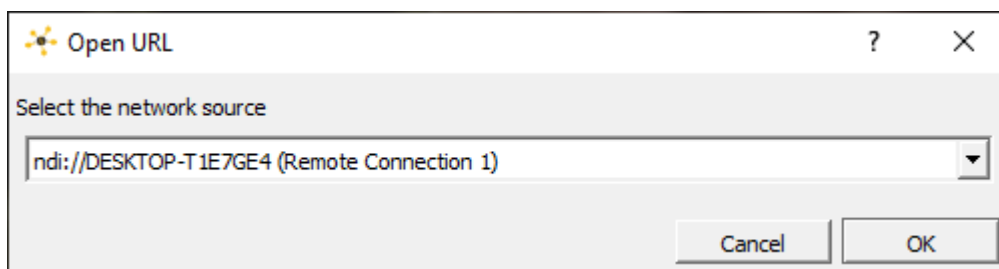


Video Input

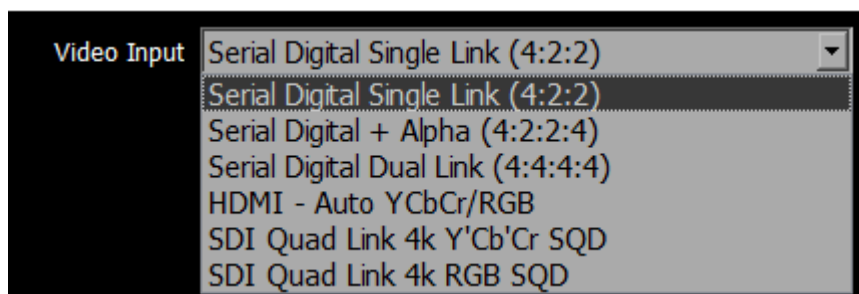

Video Input pulldown menu - allows the user to select between the HD-SDI, HDMI or analog inputs. In the case of dual link, 2 inputs are used. In the case of quad HD (3840 x 2160) and 4K (4096 x 2160), all four I/O ports of the 3D are in use, so the downconvert is HDMI and analog only. The user may be presented with a list similar to this:


- Serial Digital Single Link (4:2:2)
- Serial Quad Link 4K Y'Cb'Cr SQD
- Serial Quad Link 4K RGB SQD
- Serial Dual Link 4K Y'Cb'Cr SQD

12G Type




12G Format pulldown menu - displays the current setting, and allows the user to select between Square Division (SQD), or 2SI (two sample interleave) on some hardware. This pulldown may not be available if 2110Scope is set to an NDI video input.

Video Format



Video Format pulldown menu - displays the current setting, and allows the user to select between the signal formats supported by the I/O hardware. 2110Scope supports a wide range of signal formats from NTSC CCIR-601 to 4K 4096x2160 60fps.


Color Format



Color Format pulldown menu - allows the user to select the processing mode. In the case of single link, this can be 8 or 10 bit YCbCr or RGBA 8. For dual link it is normally YCbCr 10 or RGB 10. There user will be presented with a list similar to this:

- YCbCr 4:2:2 10 bit
- YCbCr 4:2:2 8 bit
- YCbCr Alternate
- RGBA 4:4:4:X 8 bit
- RGB 4:4:4 10 bit
- RGB 4:4:4 8 bit

Primaries



Primaries – the user will be presented with a list similar to this:

- Auto 2020 709 601
- CCIR 601 - SMPTE Range
- Rec 709 - SMPTE Range
- BT 2020 - SMPTE Range
- CCIR 601 - Full RGB
- Rec 709 - Full RGB
- BT 2020 - Full RGB
- DCI P3 (in 2020)
- Display P3 (in 2020)

Transfer



Transfer – adjust the Transfer Gamma setting. The user will be presented with a list similar to this:


- SDR 709/601
- PQ/HDR10
- HLG

Picture Mode




Picture Mode pulldown menu - allows the user to select how up/down conversion is done. All standard modes for up and down conversion are supported. Requires an up/down converter.

Down Convert

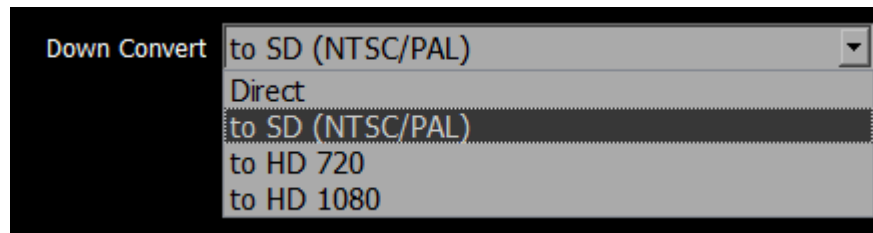

Down Convert pulldown menu - allows the user to select the output signal type. The output can match the input or be converted to another up or down signal format. Requires a Monitor setup.

Output



Output pulldown menu - allows the user to select between available analog output formats. In SD this can be Composite, S-video or Component. For HD, only component is supported. The user will be presented with a list similar to this:

- Composite - single wire output
- Component RGB – three wire RGB output
- Component YUV - Sony VTR three wire output
- Component YUV MII – Panasonic VTR three wire output
- Component YUV SMPTE – Standard SMPTE three wire output


Closed Caption



Closed Caption pulldown menu - allows the user to select which closed caption format is to be displayed, or to not display closed captions. The user will be presented with a list similar to this:


- Disable
- CC1/Subtitle (608)
- CC2 (608)
- CC3 (608)
- CC4 (608)
- Service1 (708)
- Service2 (708)
- Service3 (708)
- Service4 (708)
- OP-47

Audio Input



Audio Input pulldown menu - (hardware dependent) allows the user to select between the embedded audio tracks (HD-SDI or HDMI depending on input), or the AES/EBU audio inputs. On some hardware, analog audio inputs are also available.


Audio Scale



Audio Scale - change the audio meter modes between RMS, Loudness 9 and Loudness 18 modes. The user will be presented with a list similar to this:

- dBFS RMS
- dBu SMPTE RP155 (+24)
- dBu EBU R86 (+18)
- dBu EBU R86 (0)
- dBu EBU PPM
- dBu BBC PPM
- LUFS -23 EBU 9
- LKFS -24 US 9

Board Type




Board Type - select the type of board to use. The user may be presented with a list similar to this:


- Auto Select
- AJA
- AJA Shared
- Bluefish
- Blackmagic
- UltraScope

- Matrox
- DirectShow/UVC
- NDI
- Screen Capture
- Adobe ScopeDirect
- Avid ScopeDirect
- OpenFX ScopeDirect
- Assimilate ScopeDirect

Board Select



Board Select – allows the user to select which board or screen to use. Sometimes if there is more than one board in the system, or more than one channel in a board, the application may be looking at the wrong one. In fact, certain types of devices may appear to be out of order, depending on whether different boards have been used in the system. Clicking between boards can reset the selected board. 2110Scope will take a look at how the device identifies itself and populate the list with any devices seen in the system. Here is an example:

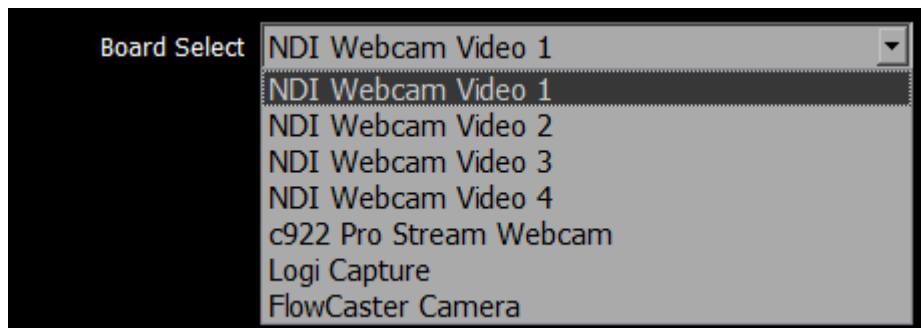

Preferred Scan



Preferred Scan – Select between available scan settings. The user may be presented with a list similar to this:

- Auto
- Interlaced (I)
- Segmented (psf)

Active Region




Active Region fields – allows the user to set the active region of the video signal. X1 sets the upper left pixel location, Y1 sets the lower left pixel location, X2 sets the upper right pixel location, Y2 sets the lower right pixel location.

Auto Follow Input



Auto Follow Input – if this checkbox is selected, whenever the input type is changed, the settings for 2110Scope are changed as well. If not checked, switching the input signal will not switch the settings.

Scope Vblank



Scope Vblank – by default, the waveform/vectorscopes do not use the vertical blanking area. If this is set, the vertical blank lines will be treated as active picture

Play Audio Computer Speakers



Play Audio Computer Speakers – when checked, pass audio through the computer speakers. Where the system has capable hardware, the audio may be monitored via the hardware's output, so in this case the user might uncheck the box to only use their external speakers for audio monitoring.

Audio Channels




Audio Channels – (hardware dependent) In systems that support 16 channel audio, the user would be able to select between 8 and 16 channel audio. Otherwise, only the 8 channel button would appear.

Audio Pairs




Audio Pairs – (hardware dependent) buttons allow the user to select the audio pair that will be monitored.

Check for New Versions on Startup




Check for new versions on startup checkbox – each time the system is started, check the current version of the build available on the Drastic website, in case the version you have installed is no longer current.

Check for Updates




Check For Updates button – click to check the current version of the build available on the Drastic website, in case the version you have installed is no longer current.

License



License button - Press the **License** button to open the licensing dialog.

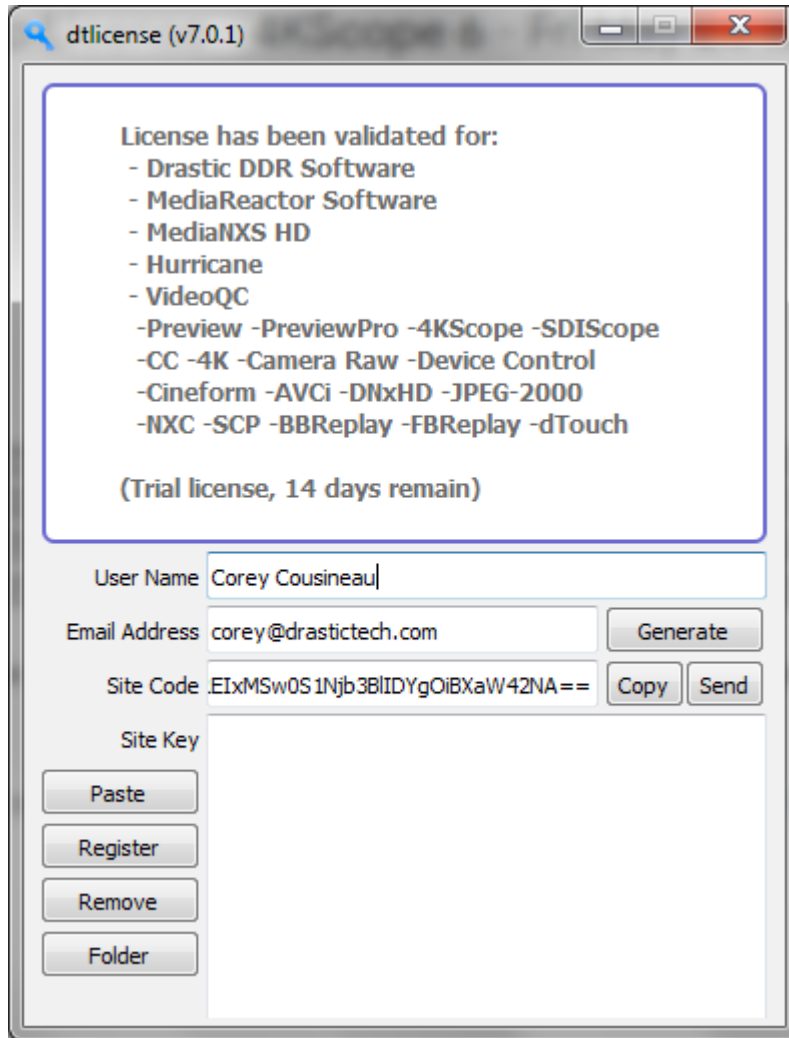

dtlicense (v7.0.1)

License has been validated for:

- Drastic DDR Software
- MediaReactor Software
- MediaNXS HD
- Hurricane
- VideoQC
- Preview -PreviewPro -4KScope -SDIScope
- CC -4K -Camera Raw -Device Control
- Cineform -AVCi -DNxHD -JPEG-2000
- NXC -SCP -BBReplay -FBReplay -dTouch

(Trial license, 14 days remain)

User Name: Corey Cousineau

Email Address: corey@drastictech.com

Site Code: EIXMSw0S1Njb3BlIDYgOiBXaW42NA==

Site Key:

Paste

Register

Remove

Folder

Generate

Copy

Send

The top field displays the current status of the license.

The **User Name** field allows the user to type in a first and last name during the licensing process.

The **Email Address** field allows the user to type in the email at which they would like to receive the site key for their license.

Once the name and address fields have been filled out, pressing the **Generate** button populates the **Site Code** field with a string of alphanumeric characters. This string is the Site Code.

The **Site Code** field is where the site code displayed during the licensing process. The user may select the site code and use Ctrl+C to copy it to the clipboard, or use the **Copy** button. The user will need to send the site code to Drastic Authorization to get a Site Key to enable the license.


If the system has been set up with email, pressing the **Send** button will open a new email to Drastic Authorization, with the site code in the body of the email.

Once a reply email containing the **Site Key** has been returned by Drastic Authorization, copy it, then

paste it into the Site Key field either using the **Paste** button or Ctrl+V. Once the Site Key has been pasted into the **Site Key** field, pressing the **Register** button registers the license. The system may need to be restarted for the change in license status to be updated. Pressing the x in the upper right corner will close the **License** window. Press the **Done** button to enable any changes, and close the **Settings** window.

Done button. Pressing the Done button in the System Configuration window closes the window and enables any changes that have been made.

Done



Done button. Pressing the Done button in the System Configuration window closes the window and enables any changes that have been made.

IP Setup



This button does one of two things when pressed, depending on what the IP input type is set to in the System Config window.

ST-2110 IP Setup - Video

When set to ST-2110 or ST-2022 sources, the IP Setup button opens the **IP Video Setup** window, which allows the user to set up how IP video is handled, and to specify the source, destination, and interface addresses for the Receiver, and the Sender. Clock source, master, and domain settings are present. Settings are maintained separately for video, audio, and ancillary data.

IP Video Setup

Channel: channel-0

☒ Override NMOS Settings ☐ NMOS Log to file NMOS Config

Type: SMPTE-2110

Video Format: 1080i 59.94fps (1920)

Audio Channels / μ s: 8 125

Receive: IPv4 ☐ lock all

☐ Source Address: 239 . 200 . 100 . 20 ☐ lock

☐ Source port: 50002 ☐ lock

☒ Destination Address: 239 . 200 . 100 . 20 ☐ lock

☒ Destination Port: 50002 ☐ lock

☐ Interface: 192 . 168 . 100 . 166 ☒ lock

Send / μ s: IPv4 125

☐ Source Address: 1 . 0 . 0 . 0 ☐ lock

☐ Source Port: 5000 ☐ lock

☒ Destination Address: 239 . 200 . 100 . 10 ☐ lock

☒ Destination Port: 5000 ☐ lock

☐ Interface: 192 . 168 . 100 . 166 ☒ lock

Clock Source: Internal

Clock Info: GMT Time

Clock Time: 2025-03-04 T13:57:23.267

☐ Clock Mac Address / ID: 0 Save Video SDP

Load File Save File Accept Cancel

Channel pulldown – select between channels.

Override NMOS Settings checkbox – select to automatically set up the configuration according to the source signal parameters.

Type pulldown menu - select between SMPTE-2110, SMPTE-2022, or TR-01.

Video Format pulldown menu - select between available video standards.

Audio Channels / μ s pulldown menu – allows the user to select the number of audio channels, and microseconds setting for audio packets. Audio in 2110/2022 is commonly split into packets of 125 microseconds or 1 millisecond, and this pulldown allows the user to set which one is used.

Receive pulldown menu / section – lets the user select the type of IP version used to receive IP video. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.

Send / μ s pulldown menu / section – lets the user select the type of IP version used to send IP video, and adjust the setting for packet size in microseconds. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.


Clock Source pulldown menu – select the clock source. Choices include Internal, H/W SMPTE 2059/PTP, S/W SMPTE 2059/PTP, or Free Run.

Clock Info field – displays information about the clock setting.

Clock Time field – displays the current time in YYYY-MM-DD-THH-MM-SS- μ s

Clock Mac Address / ID checkbox – click to activate the Mac Address boxes to the right, so you can enter the clock's Mac Address.

Save Video SDP button – **opens the Save Current Element** window, which allows the user to save all of the settings as a Session File (*.sdp) for later retrieval.

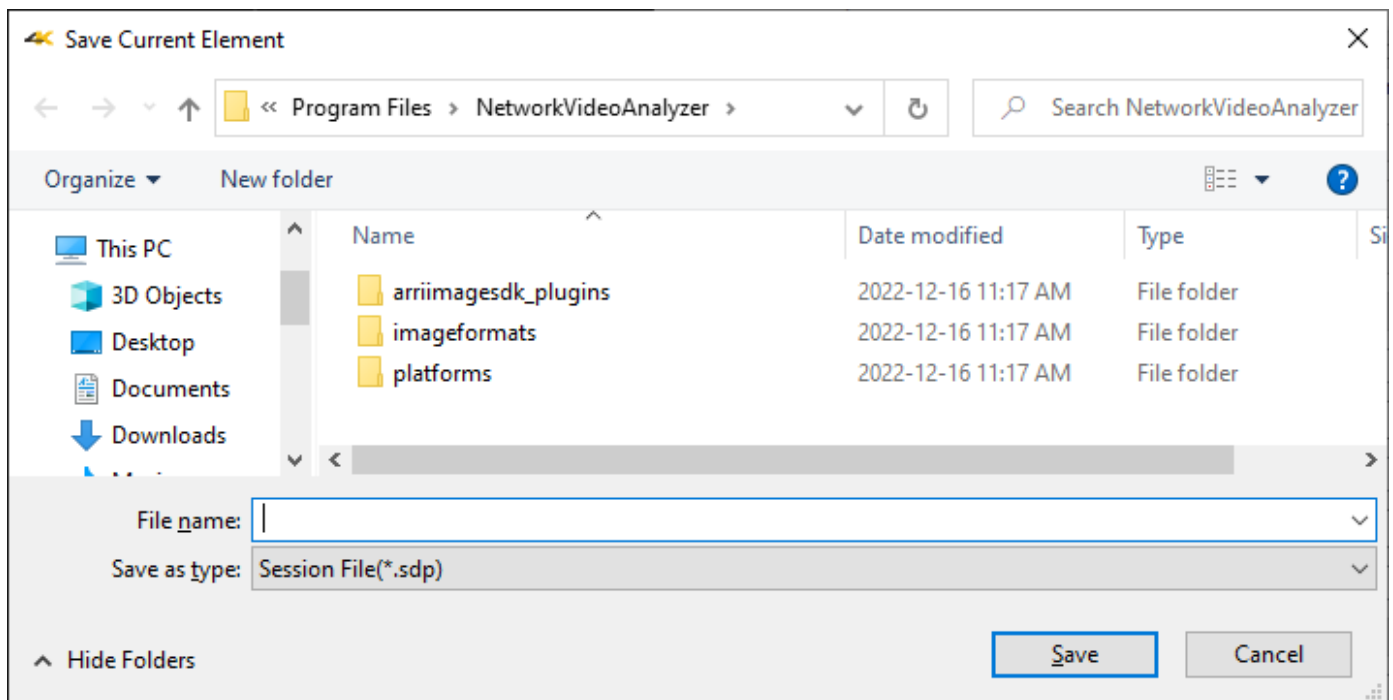

Load File button – opens the **Ini File** window, which allows the user to save all of the settings as an **Ini File** (*.ini) for later retrieval.

Save File button – opens the **Ini File** window, which allows the user to open an existing Ini File (*.ini) to use the settings again.

Accept button – press to accept all changes and close the IP Video Setup window.

Cancel button – press to close the IP Video Setup window without making any changes.

ST-2110 IP Setup - Audio

The screenshot shows the 'IP Video Setup' dialog box with the 'Audio' tab selected. The 'Channel' dropdown is set to 'channel-0'. The 'Override NMOS Settings' checkbox is checked. The 'NMOS Log to file' checkbox is unchecked. The 'NMOS Config' button is visible. The 'Type' dropdown is set to 'SMPTE-2110'. The 'Video Format' dropdown is set to '1080i 59.94fps (1920)'. The 'Audio Channels / μ s' dropdown is set to '8' and '125'. The 'Receive' dropdown is set to 'IPv4'. The 'lock all' checkbox is unchecked. The 'Source Address' field is '239 . 200 . 100 . 21' and the 'lock' checkbox is unchecked. The 'Source port' field is '50004' and the 'lock' checkbox is unchecked. The 'Destination Address' field is '239 . 200 . 100 . 21' and the 'lock' checkbox is unchecked. The 'Destination Port' field is '50004' and the 'lock' checkbox is unchecked. The 'Interface' field is '192 . 168 . 100 . 166' and the 'lock' checkbox is checked. The 'Send / μ s' dropdown is set to 'IPv4' and '125'. The 'Source Address' field is '1 . 0 . 0 . 0' and the 'lock' checkbox is unchecked. The 'Source Port' field is '5001' and the 'lock' checkbox is unchecked. The 'Destination Address' field is '239 . 200 . 100 . 10' and the 'lock' checkbox is unchecked. The 'Destination Port' field is '5001' and the 'lock' checkbox is unchecked. The 'Interface' field is '192 . 168 . 100 . 166' and the 'lock' checkbox is checked. The 'Clock Source' dropdown is set to 'Internal'. The 'Clock Info' field is 'GMT Time'. The 'Clock Time' field is '2025-03-04T13:58:34.947'. The 'Clock Mac Address / ID' field is '0'. The 'Audio Channel' section has a 'Use single flow' checkbox and eight radio buttons labeled 1 through 8. The 'Save Audio SDP' button is visible. The 'Load File', 'Save File', 'Accept', and 'Cancel' buttons are at the bottom.

Channel pulldown – select between channels.

Override NMOS Settings checkbox – select to automatically set up the configuration according to the source signal parameters.

Type pulldown menu - select between SMPTE-2110, SMPTE-2022, or TR-01.

Video Format pulldown menu - select between available video standards.

Audio Channels / μ s pulldown menu – allows the user to select the number of audio channels, and microseconds setting for audio packets. Audio in 2110/2022 is commonly split into packets of 125 microseconds or 1 millisecond, and this pulldown allows the user to set which one is used.

Receive pulldown menu / section – lets the user select the type of IP version used to receive IP video. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.

Send / μ s pulldown menu / section – lets the user select the type of IP version used to send IP video, and adjust the setting for packet size in microseconds. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.

Clock Source pulldown menu – select the clock source. Choices include Internal, H/W SMPTE 2059/PTP, S/W SMPTE 2059/PTP, or Free Run.

Clock Info field – displays information about the clock setting.

Clock Time field – displays the current time in YYYY-MM-DD-THH-MM-SS- μ s

Clock Mac Address / ID checkbox – click to activate the Mac Address boxes to the right, so you can enter the clock's Mac Address.

Audio Channel buttons – select specific channels, or Use Single Flow.

Save Audio SDP button – **opens the Save Current Element** window, which allows the user to save all of audio the settings as a Session File (*.sdp) for later retrieval.

Load File button – opens the **Ini File** window, which allows the user to save all of the settings as an **Ini File** (*.ini) for later retrieval.

Save File button – opens the **Ini File** window, which allows the user to open an existing Ini File (*.ini) to use the settings again.

Accept button – press to accept all changes and close the IP Video Setup window.

Cancel button – press to close the IP Video Setup window without making any changes.

ST-2110 IP Setup - Anc

The screenshot shows the 'IP Video Setup' dialog box with the 'Channel' dropdown set to 'channel-0'. The 'Override NMOS Settings' checkbox is checked, and the 'NMOS Log to file' checkbox is unchecked. The 'NMOS Config' button is visible. On the right, there are radio buttons for 'Video', 'Audio', and 'Anc', with 'Anc' selected. The main configuration area is divided into 'Receive' and 'Send' sections. The 'Receive' section has 'Type' set to 'SMPTE-2110', 'Video Format' to '1080i 59.94fps (1920)', 'Audio Channels / μ s' to '8' and '125', 'Receive' to 'IPv4', and 'lock all' unchecked. The 'Source Address' is '239 . 200 . 100 . 22', 'Source port' is '50006', 'Destination Address' is '239 . 200 . 100 . 22', 'Destination Port' is '50006', 'Interface' is '192 . 168 . 100 . 166', and 'lock' is checked. The 'Send' section has 'Send / μ s' set to 'IPv4' and '125', 'Source Address' is '1 . 0 . 0 . 0', 'Source Port' is '5002', 'Destination Address' is '239 . 200 . 100 . 10', 'Destination Port' is '5002', 'Interface' is '192 . 168 . 100 . 166', and 'lock' is checked. The 'Clock Source' is 'Internal', 'Clock Info' is 'GMT Time', 'Clock Time' is '2025-03-04 T14:01:54.987', and 'Clock Mac Address / ID' is '0'. The 'Save Anc SDP' button is at the bottom right. At the very bottom are 'Load File', 'Save File', 'Accept', and 'Cancel' buttons.

Channel pulldown – select between channels.

Override NMOS Settings checkbox – select to automatically set up the configuration according to the source signal parameters.

Type pulldown menu - select between SMPTE-2110, SMPTE-2022, or TR-01.

Video Format pulldown menu - select between available video standards.

Audio Channels / μ s pulldown menu – allows the user to select the number of audio channels, and microseconds setting for audio packets. Audio in 2110/2022 is commonly split into packets of 125 microseconds or 1 millisecond, and this pulldown allows the user to set which one is used.

Receive pulldown menu / section – lets the user select the type of IP version used to receive IP video. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.

Send / μ s pulldown menu / section – lets the user select the type of IP version used to send IP video, and adjust the setting for packet size in microseconds. Provides IP Address Settings for the **Source Address**, **Source Port**, **Destination Address**, **Destination Port**, and **Interface** are available. There is a **Lock** available for each setting, and a **Lock All** checkbox to set all the Receive addresses to the same address.

Clock Source pulldown menu – select the clock source. Choices include Internal, H/W SMPTE 2059/PTP, S/W SMPTE 2059/PTP, or Free Run.

Clock Info field – displays information about the clock setting.

Clock Time field – displays the current time in YYYY-MM-DD-THH-MM-SS- μ s

Clock Mac Address / ID checkbox – click to activate the Mac Address boxes to the right, so you can enter the clock's Mac Address.

Save Anc SDP button – **opens the Save Current Element** window, which allows the user to save all of the Anc settings as a Session File (*.sdp) for later retrieval.

Load File button – opens the **Ini File** window, which allows the user to save all of the settings as an **Ini File** (*.ini) for later retrieval.


Save File button – opens the **Ini File** window, which allows the user to open an existing Ini File (*.ini) to use the settings again.

Accept button – press to accept all changes and close the IP Video Setup window.


Cancel button – press to close the IP Video Setup window without making any changes.

ST-2110 IP Setup - NDI


When set to NDI video, the IP Setup button opens the **Open URL** window, which allows the user to select between available NDI video sources.

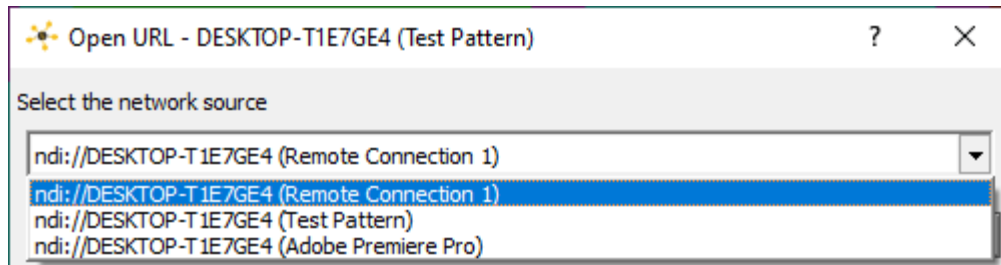

Display Modes

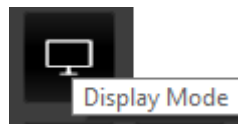

Display Mode button – opens the Monitor Settings window, which allows the user to select between available display modes.

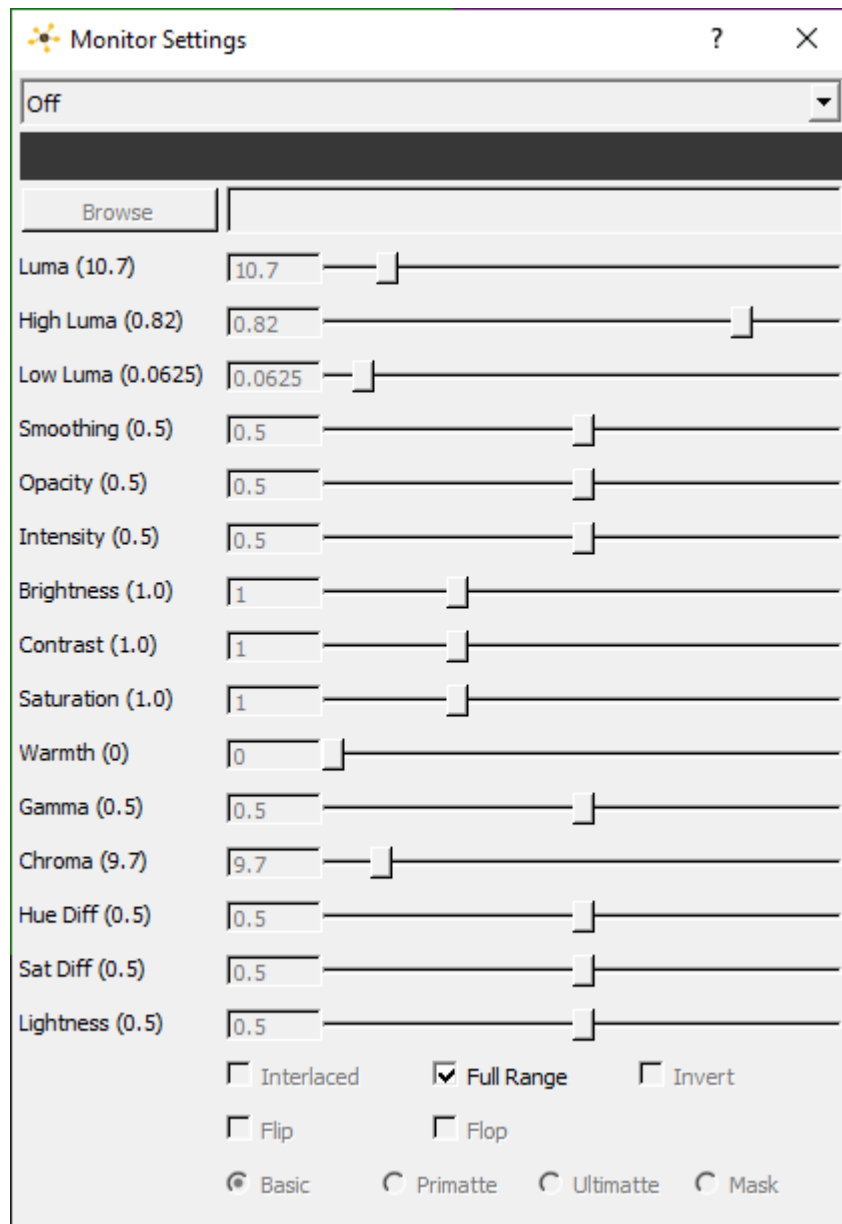

Monitor Settings window

The pulldown menu at the top allows the user to select between various display modes.

Display modes include:


Off

Display the signal normally. This is the default picture view.



Luma Only


Show only the Y or brightness of the picture. This display setting produces a black and white image, with no chroma.

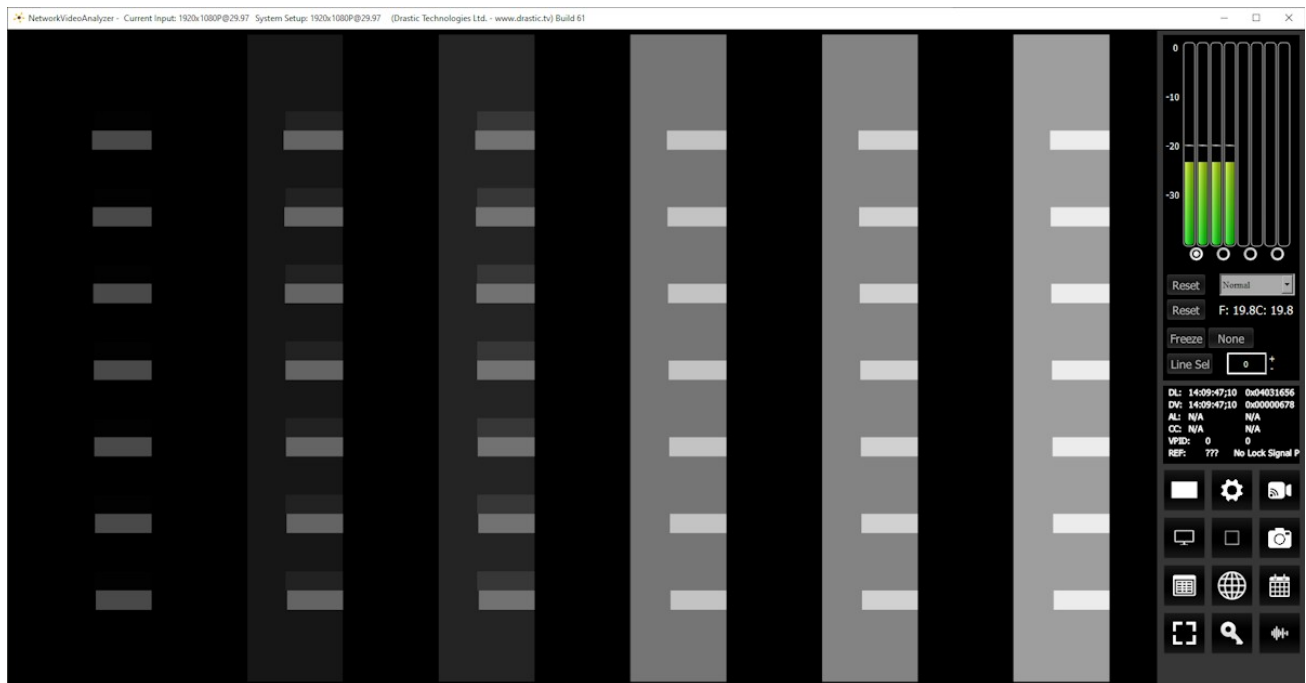

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range). Full Range lets you adjust how the signal is processed to the display and does not affect any of the graticules.

Red Only


Show only the red channel.

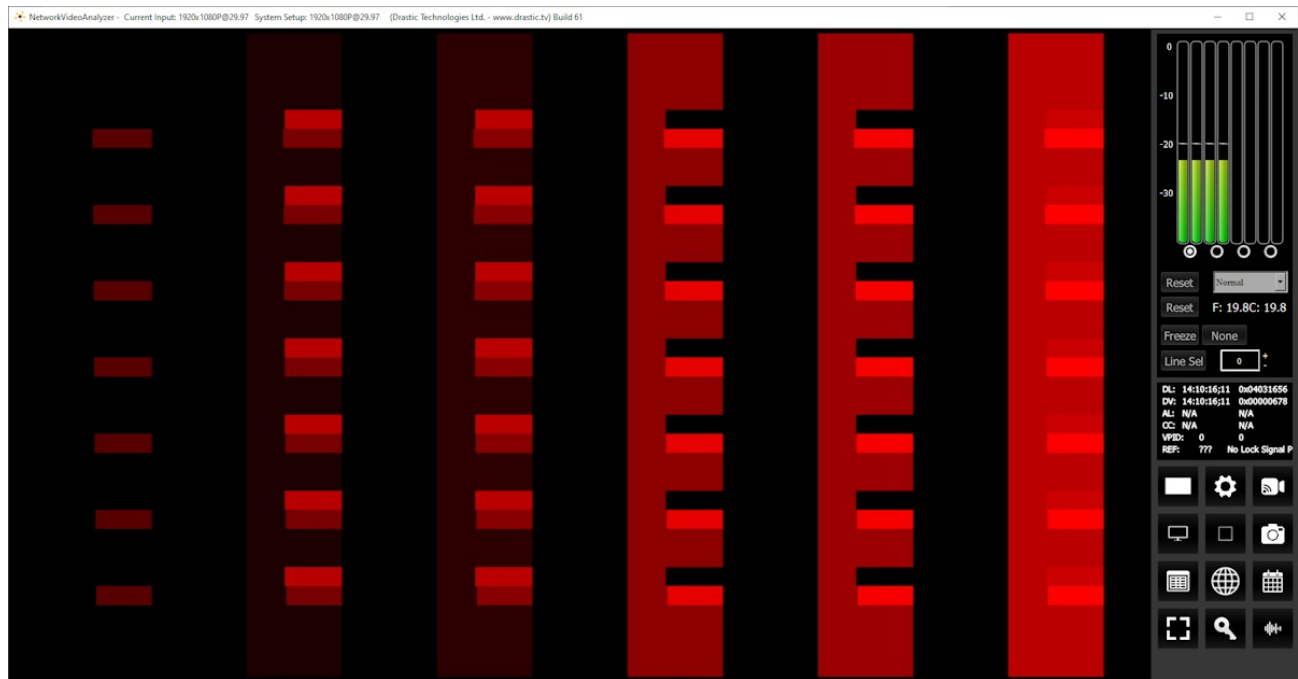

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range). Full Range lets you adjust how the signal is processed to the display and does not affect any of the graticules.

Green Only


Show only the green channel.

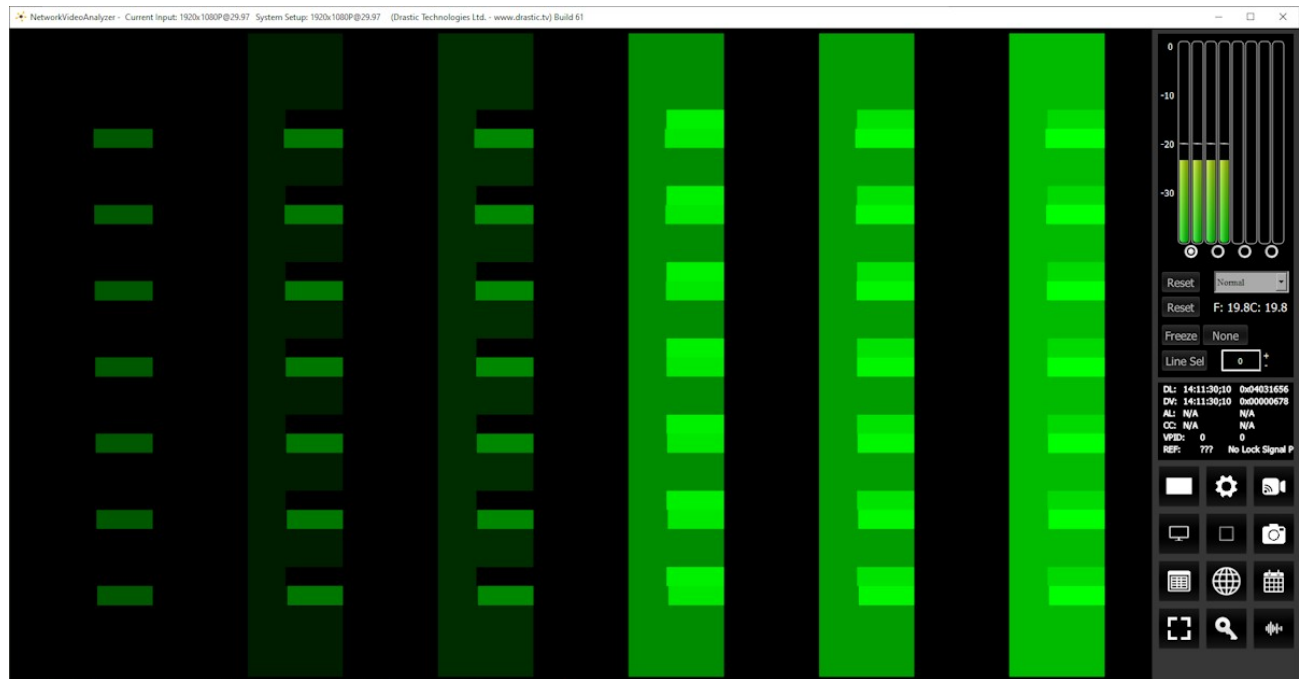

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range). Full Range lets you adjust how the signal is processed to the display and does not affect any of the graticules.

Blue Only


Show only the blue channel.

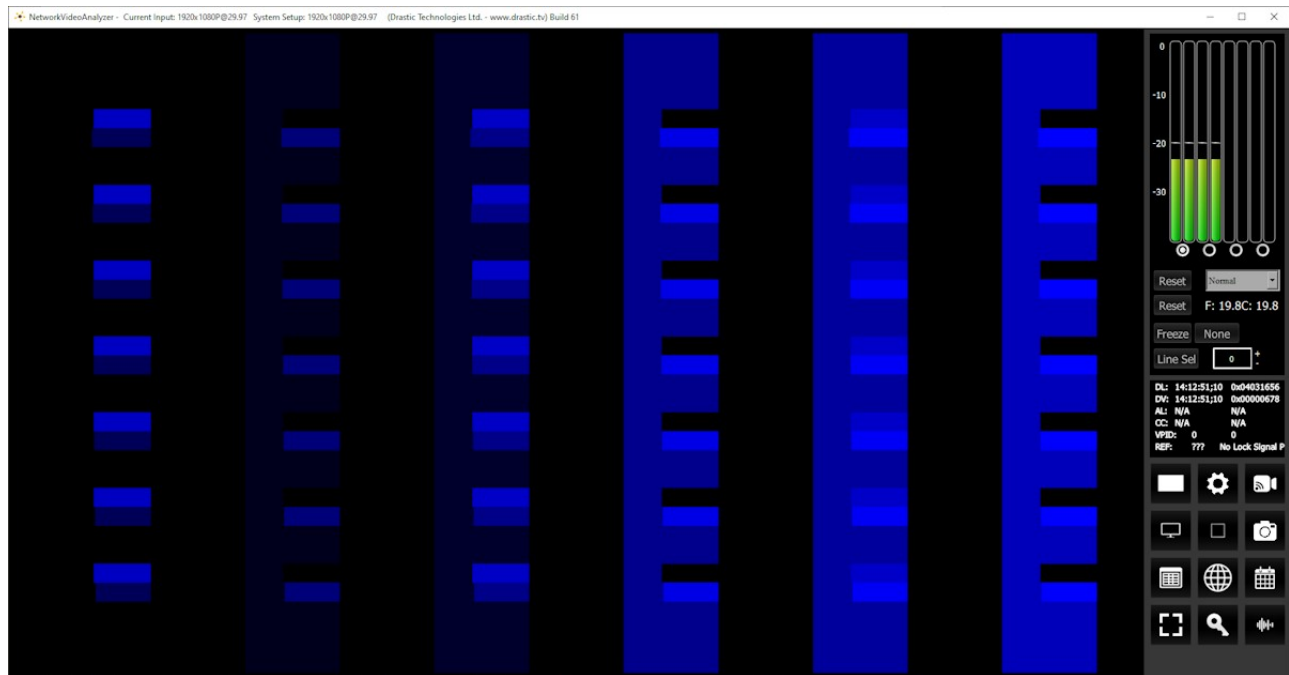

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Zebra Luma


Draw zebra bars where the luma is too high or too low.

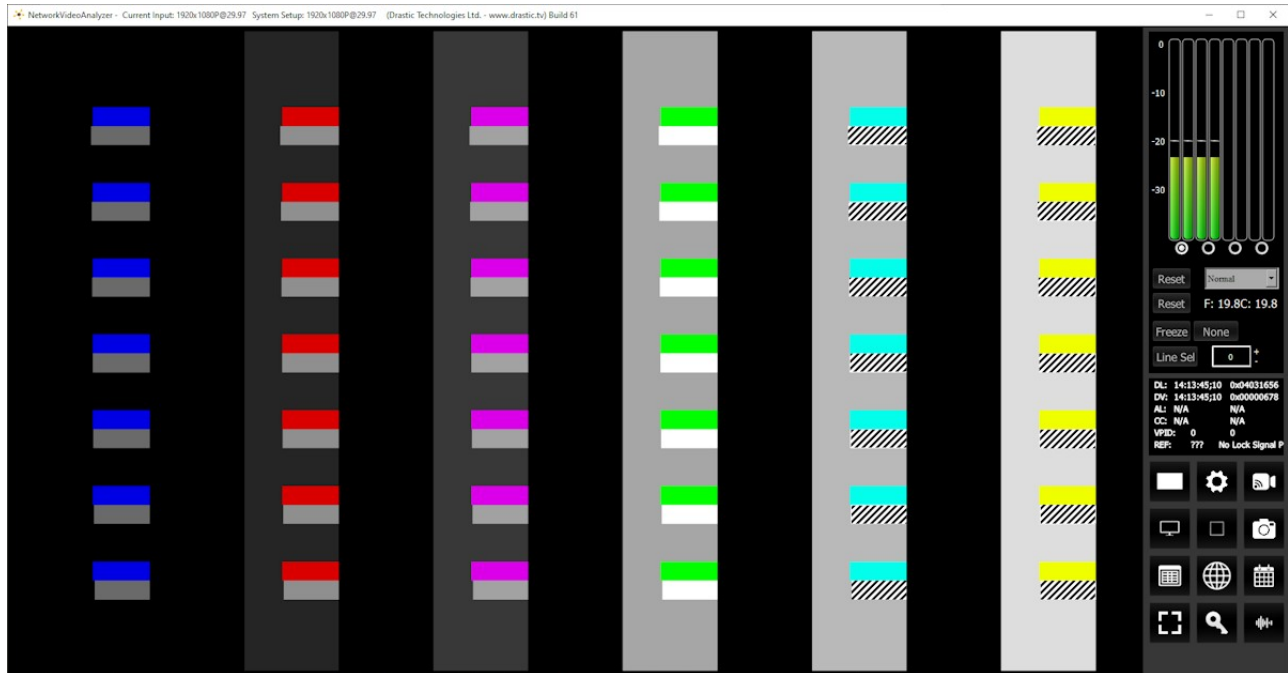

Activates the **Luma** slider, which allows the user to adjust the luma setting. When active, Luma can be adjusted by pulling the slider with the mouse, or using the left and right arrow buttons, in tenths. Click on the slider and use the < and > keys. The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Zebra Chroma


Draw zebra bars where the chroma is out of range.

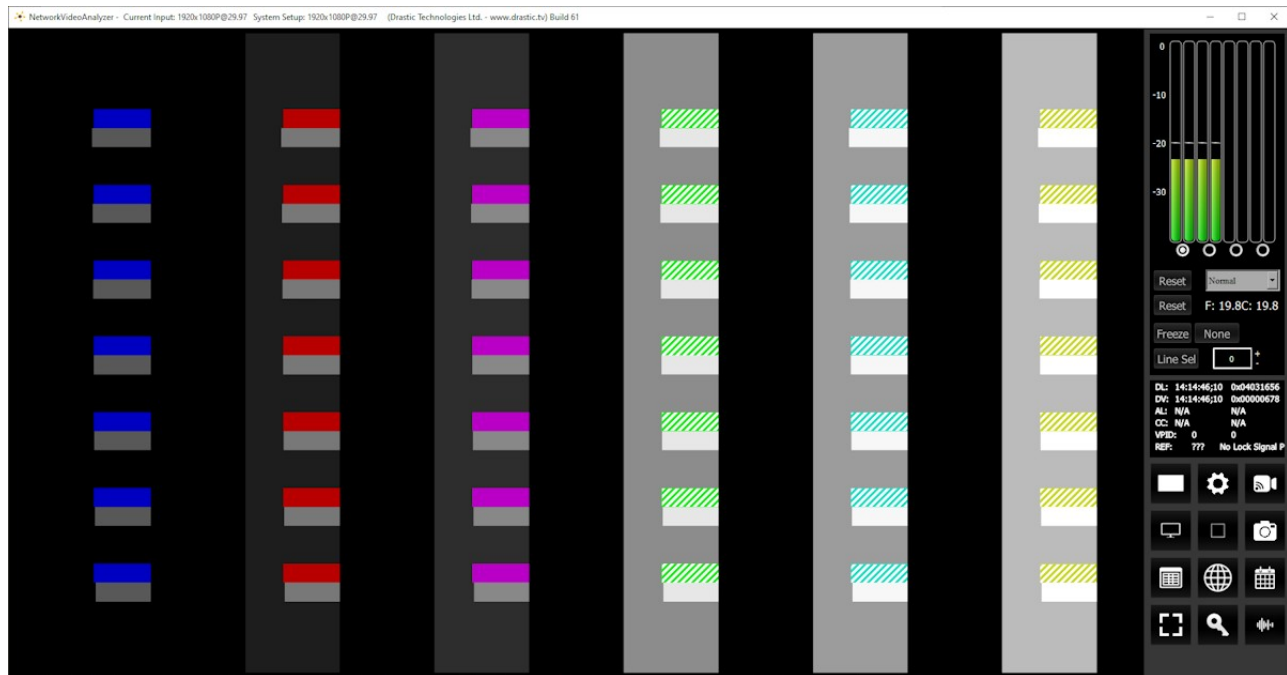

Activates the **Chroma** slider, which allows the user to adjust the chroma setting. When active, Chroma can be adjusted by pulling the slider with the mouse, or using the left and right arrow buttons, in tenths. Click on the slider and use the < and > keys. The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Clipping

Draw green anywhere the signal is too low, or red anywhere it is too high. If a signal is too low, the blacks will become muddy and lose detail. If it is too high, the whites will bleach out and lose detail.

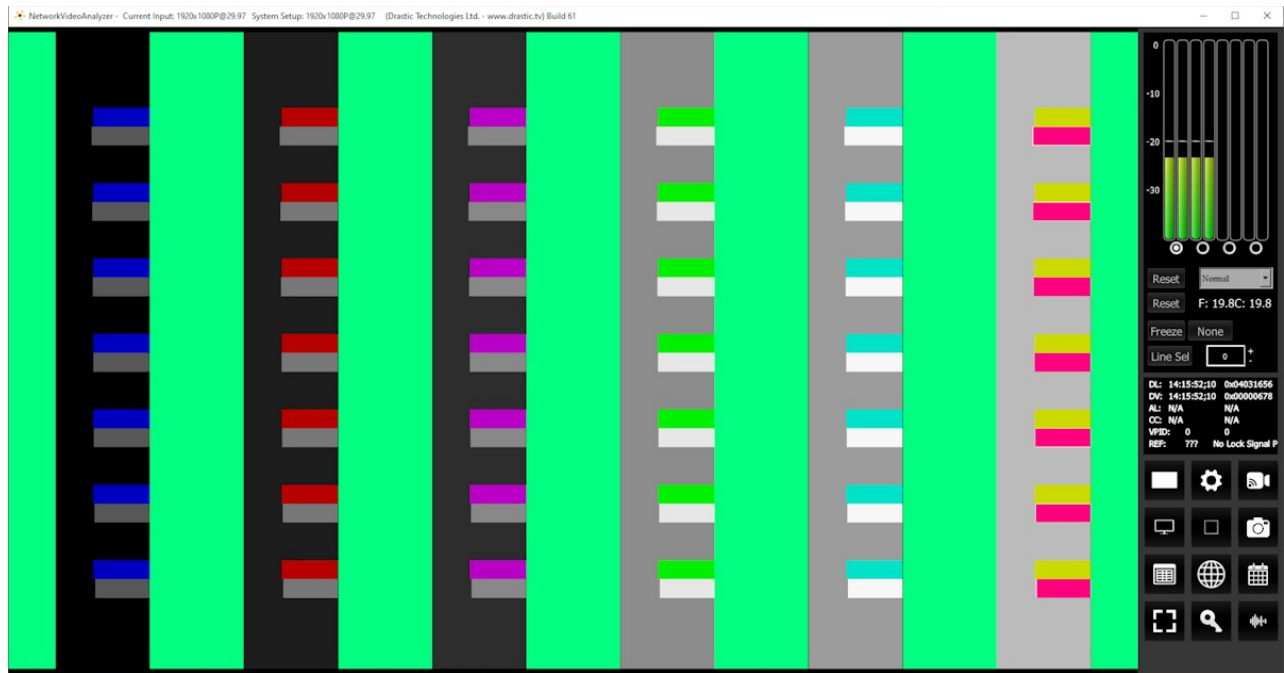


Activates the **Color Picker** (the bar just below the display mode pulldown menu), so the user can choose a primary (too low) color other than green. The secondary (too high) color is automatically generated to be a contrasting color to the primary color.

Activates the **High Luma** slider and the **Low Luma** slider, allowing the user to adjust these settings. When active, High Luma and Low Luma can be adjusted by pulling the slider with the mouse, or using the left and right arrow buttons, in tenths, but displays whole integers only. Click on the slider and use the < and > keys.

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Edge Difference


Highlight every edge in the picture, and turn the rest of the picture black.

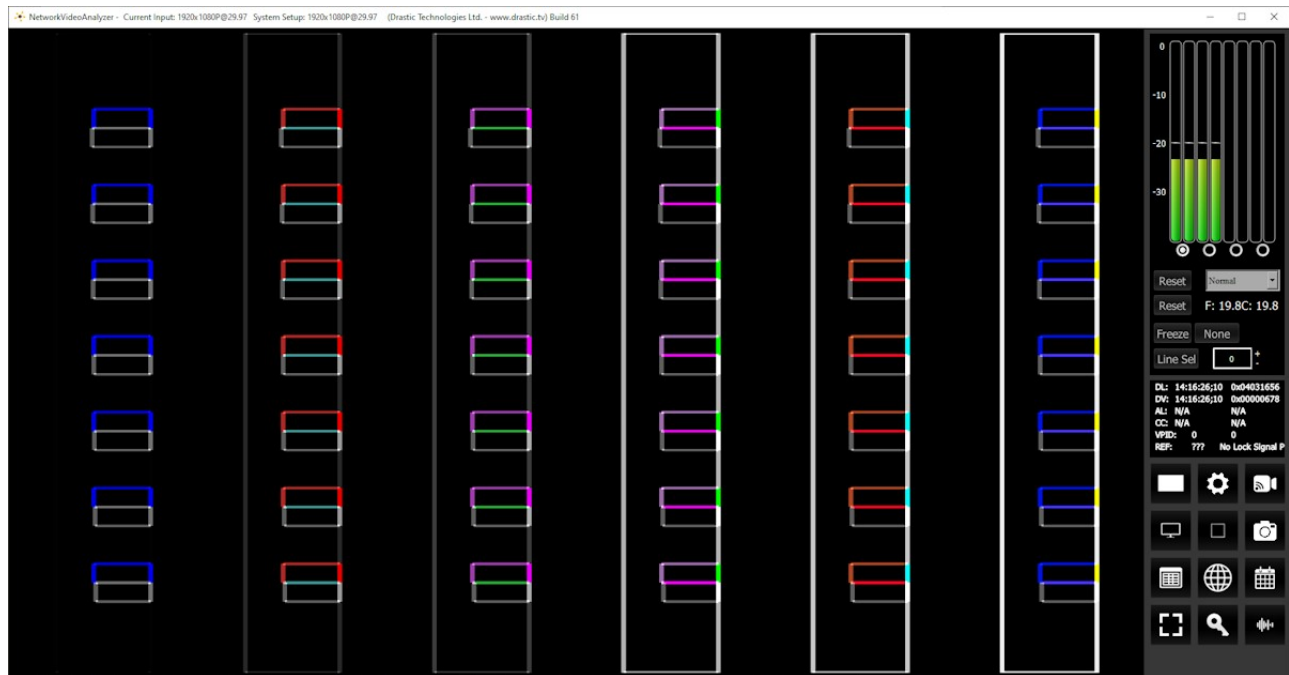

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Focus Assist


Paint areas of the image that are in focus with the selected color. This setting allows fine tuning of camera focus settings by making the in-focus areas obvious.

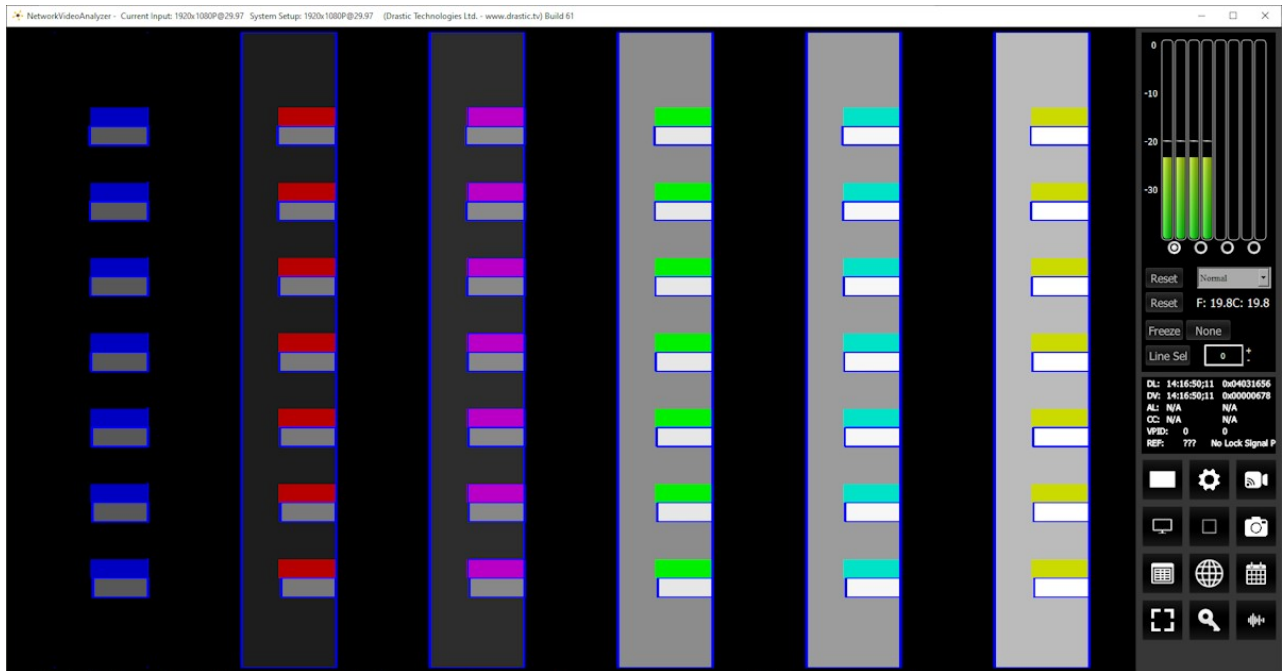

Activates the **Color Picker** (the bar just below the display mode pulldown menu), so the user can choose an appropriate color to contrast from the general hue of the picture. The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Calibrate

Allows the user to calibrate the display settings. Initially this will show the normal picture view. However, as you move the individual sliders, you can change the way the image is displayed.

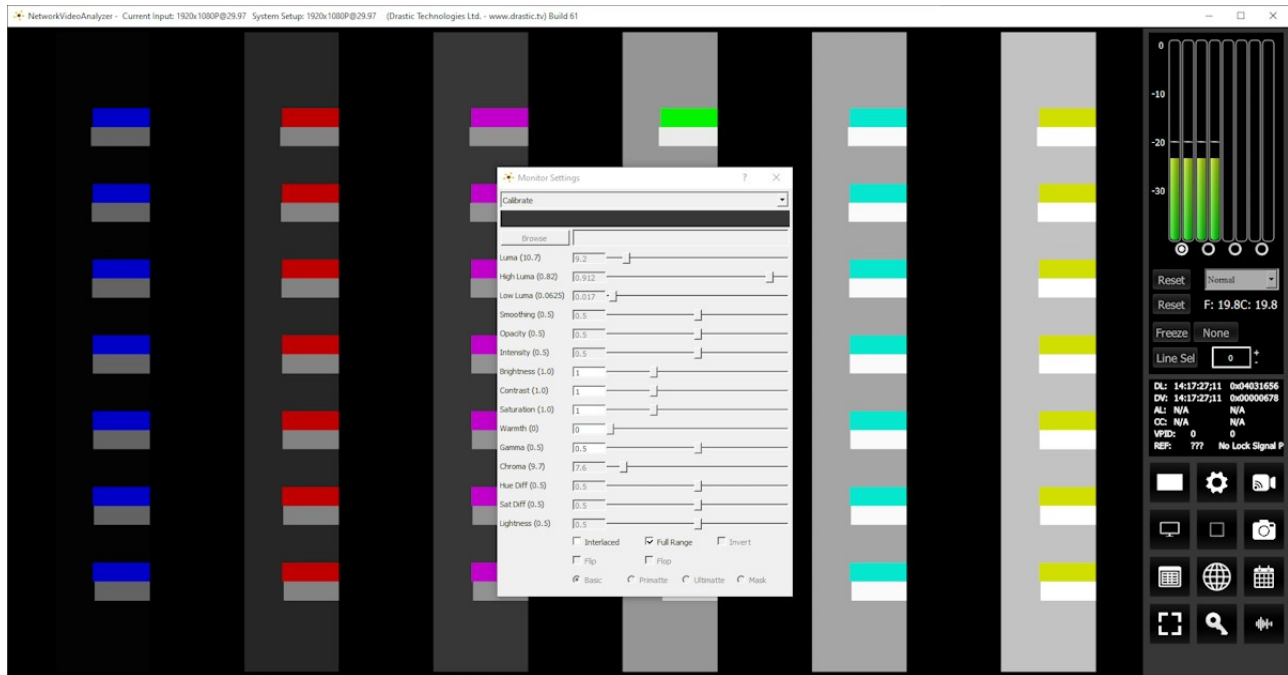

Activates the **Brightness**, **Contrast**, **Saturation**, **Warmth**, and **Gamma** sliders, allowing the user to adjust these settings. When active, Brightness, Contrast, Saturation, Warmth, and Gamma can be adjusted by pulling the sliders with the mouse, or using the left and right arrow buttons, in thousandths. Click on the slider and use the < and > keys.


Activates the **Interlaced** checkbox, which allows the user to specify interlaced (checked) or progressive (unchecked) standards to display.

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).


Flip Flop

Reverse the picture horizontally or vertically. Here is an example of the image in 'flipped' mode, or reversed from top to bottom.

Activates the **Flip** checkbox, which allows the user to reverse the image top to bottom.

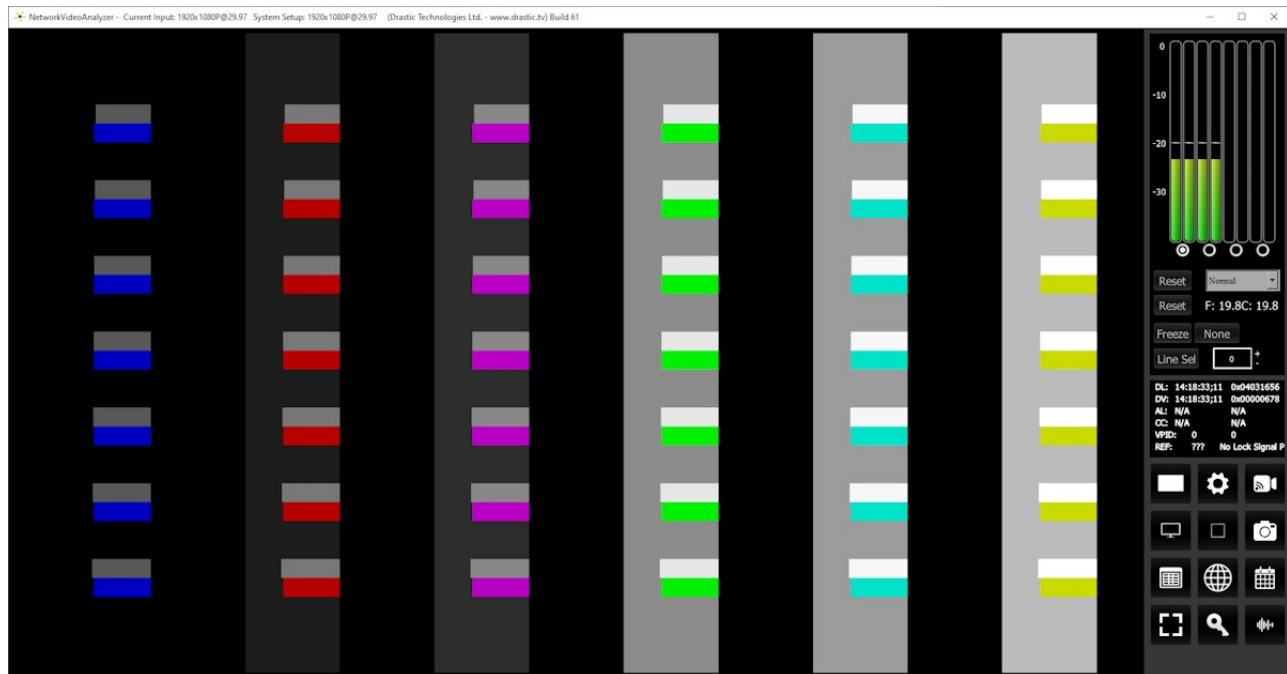


Activates the **Flop** checkbox, which allows the user to reverse the image left to right.

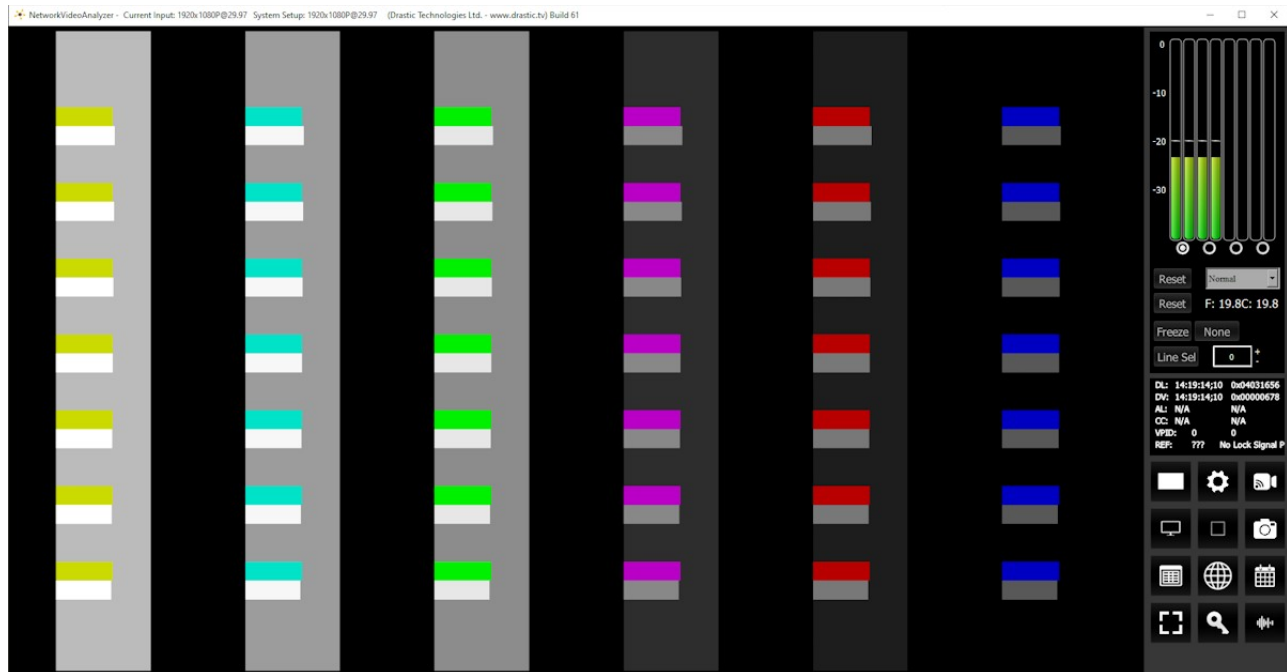


The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Note that the image can be both 'flipped' and 'flopped' at the same time.

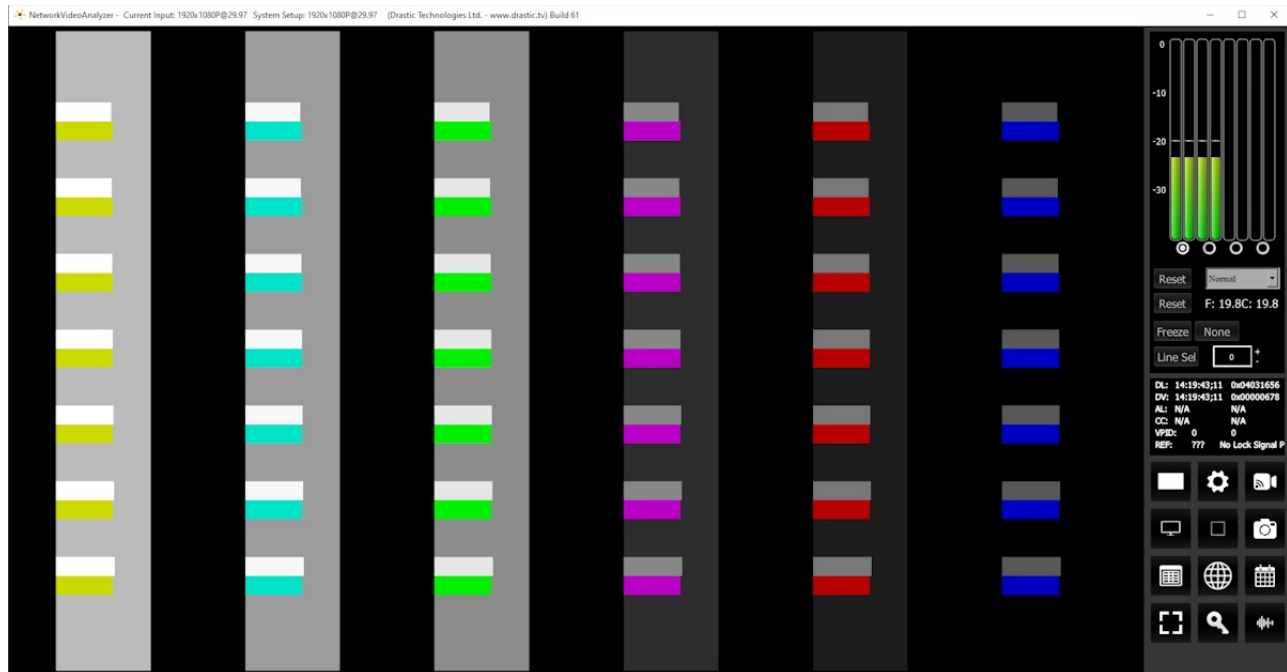

Show Alpha


Show the alpha component of an RGBA or YCbCr+A signal.

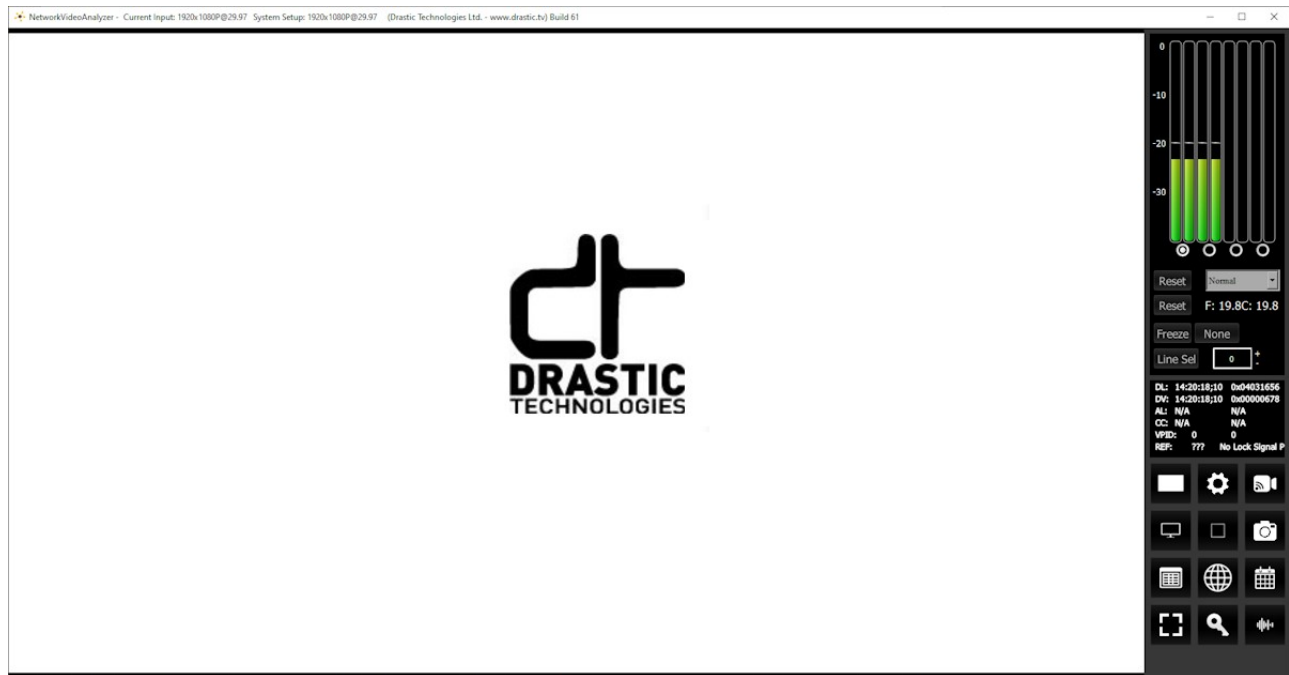

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Opacity

Mix the signal with a loaded still image for reference, using a checkerboard mix. This setting can be used to compare two images to match a camera position from an existing shot with a new camera, where additional shots are needed for a scene and a new camera needs to match its position.

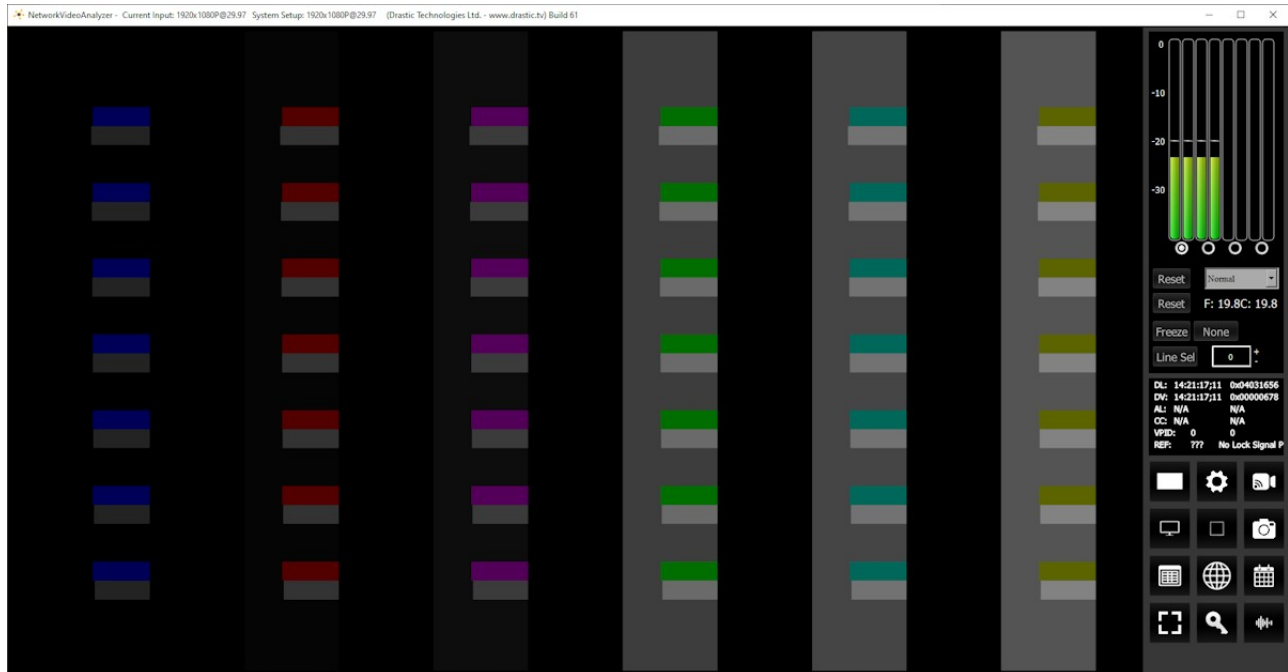


Activates the **Browse** button. This opens a standard browser, which allows the user to load a TGA/PNG/BMP/JPG/v210/YUV to use as the background to compare live video to the existing image.

Activates the **Opacity** slider, and the **Invert** checkbox, which allows the user to set the opacity level, and Invert the display.

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Luma Key

Show the video luma keyed over a checkerboard or image.

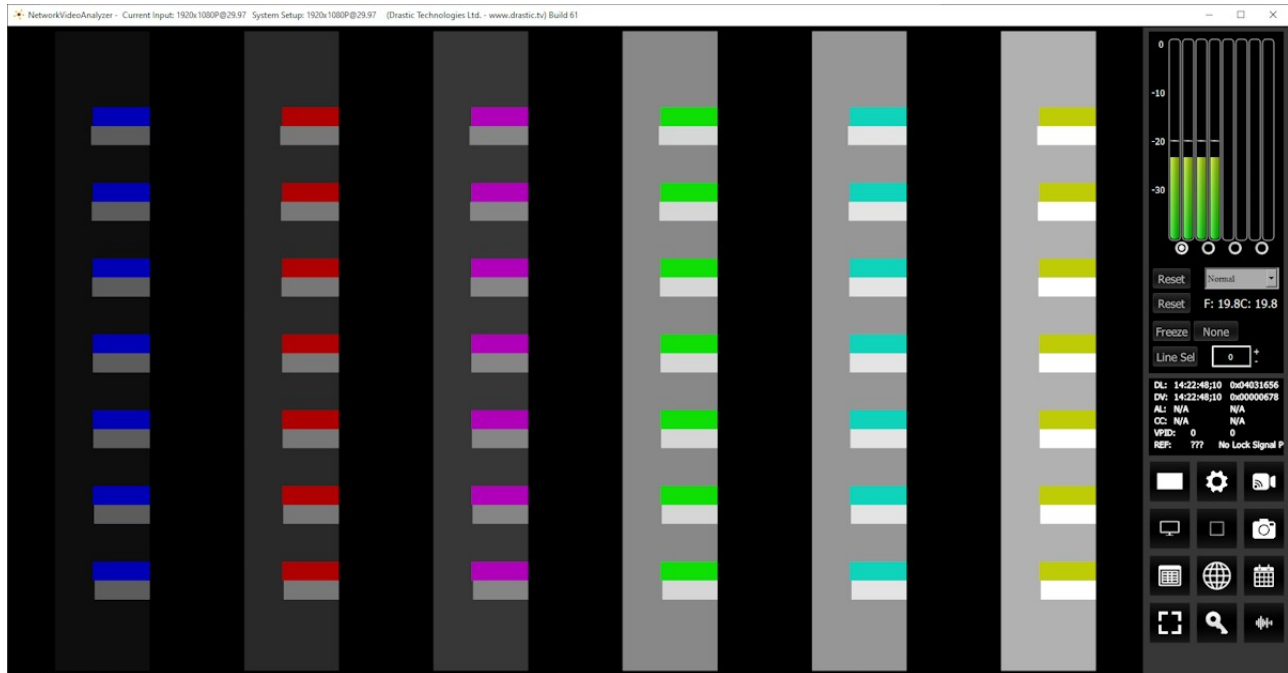

Activates the **Browse** button. This opens a standard browser, which allows the user to load a TGA/PNG/BMP/JPG/v210/YUV to use as the background for the luma key, instead of the checkerboard.

Activates the **High Luma** slider, so the user can adjust the high luma settings. When active, can be adjusted by pulling the slider, or using the left and right arrow buttons, in thousandths. Click on the slider and use the < and > keys.

Activates the **Low Luma** slider, so the user can adjust the low luma settings. When active, can be adjusted by pulling the slider, or using the left and right arrow buttons, in thousandths. Click on the slider and use the < and > keys.


Activates the **Smoothing** slider, so the user can adjust the smoothing settings. When active, can be adjusted by pulling the slider, or using the left and right arrow buttons, in thousandths. Click on the slider and use the < and > keys.

Activates the **Invert** checkbox. The user can check this box to Invert the key.

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Green Screen Key

Show the image green screen keyed over a checkerboard.

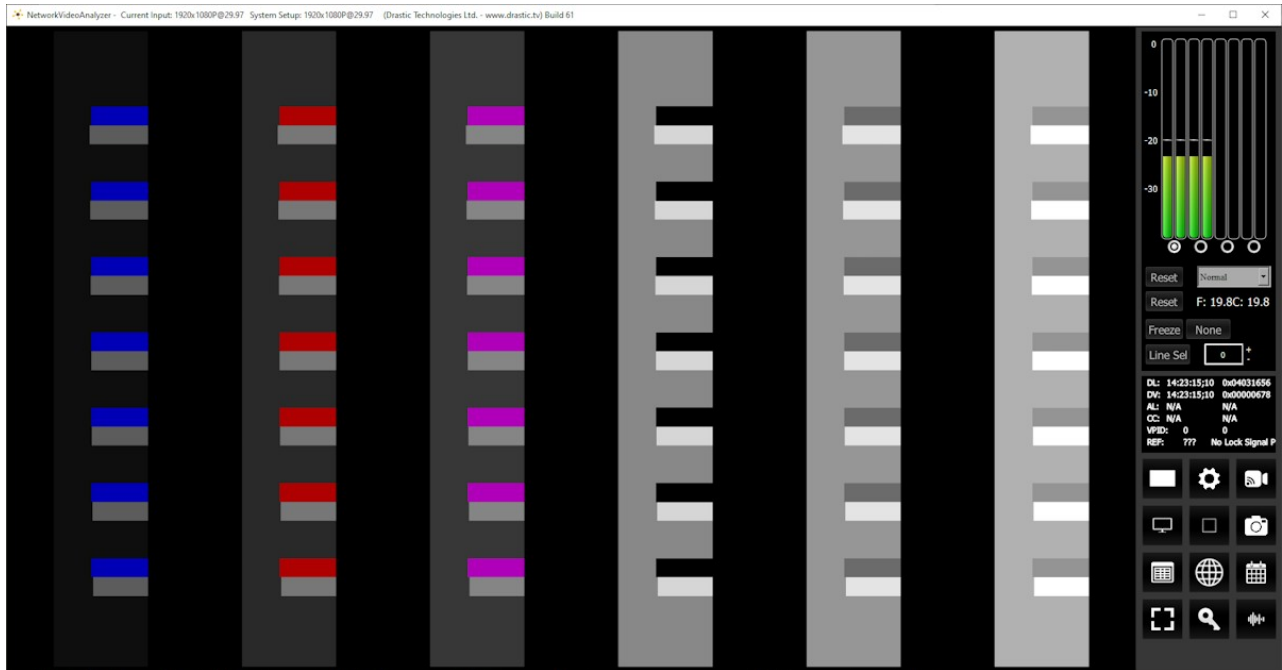


Activates the **Browse** button. This opens a standard browser, which allows the user to load a TGA/PNG/BMP/JPG/v210/YUV to use as the background for the green screen key, instead of the checkerboard.

Activates the **Invert** checkbox. The user can check this box to Invert the key.

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Chroma Key Despill

Chroma Keys are applied to pass through background for a particular color. Green screen and blue screen are specific chroma keys. The Despill applies a mix to the pixels at the edge of the color and any objects in the scene.

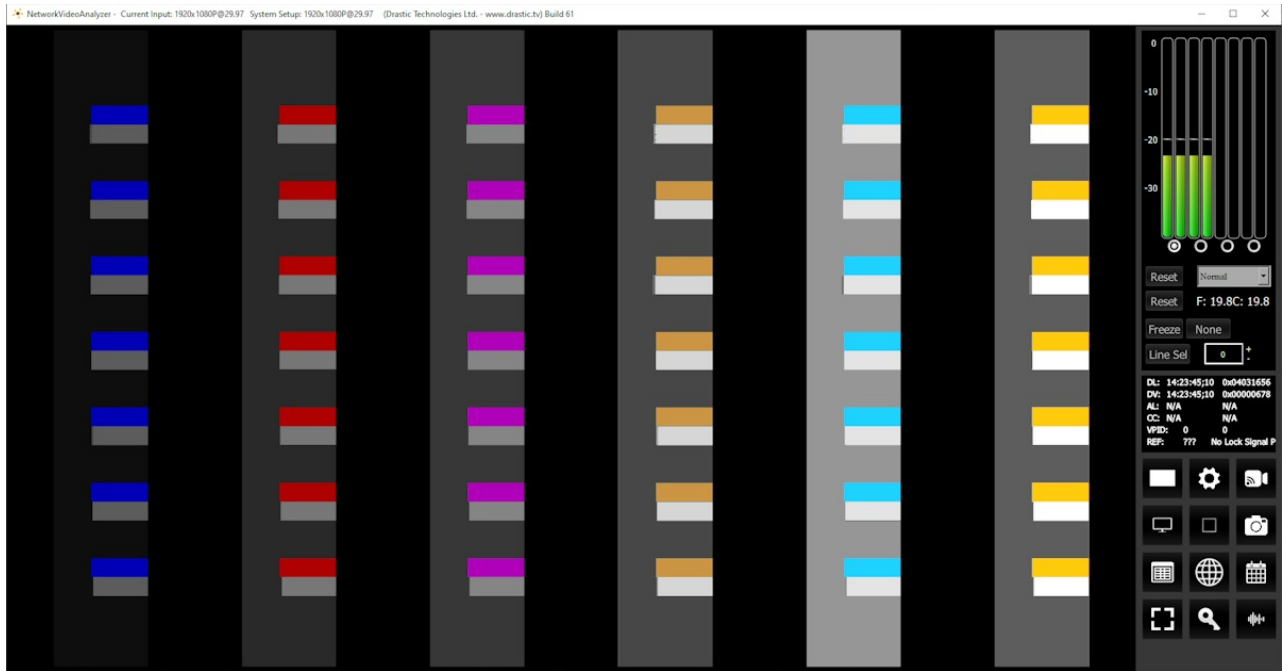

Activates the **Color Picker** (the bar just below the display mode pulldown menu), so the user can fine tune the green, or any color used for the chroma key.

Activates the **Browse** button. This opens a standard browser, which allows the user to load a TGA/PNG/BMP/JPG/v210/YUV to use as the background for the chroma key despill, instead of the checkerboard.


The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Activates the **Invert** checkbox. The user can check this box to Invert the key.

Activates the **Basic/Primatte/Ulimate/Mask** radio buttons, which are chroma key despill types/settings. The user may select between these 4 settings using the radio buttons – when one is selected, the rest are automatically deselected.

Chroma Key Simple

Show the image green screened over a checkerboard or image. Chroma Keys are applied to pass through background for a particular color. Green screen and blue screen are specific chroma keys. The Simple looks at each pixel.

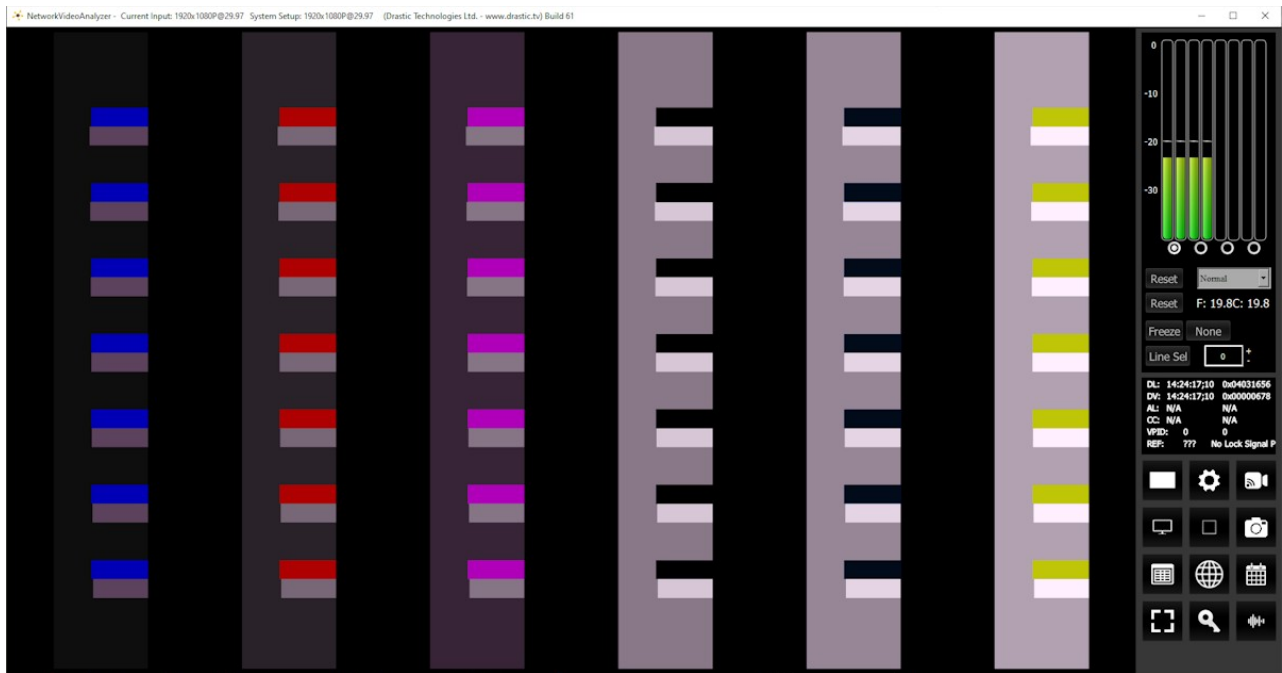

Activates the **Browse** button. This opens a standard browser, which allows the user to load a TGA/PNG/BMP/JPG/v210/YUV to use as the background for the chroma key, instead of the checkerboard.

Activates the **Color Picker** (the bar just below the display mode pulldown menu), so the user can fine tune the green, or any color used for the chroma key.


Activates the **Browse** button. This opens a standard browser, which allows the user to navigate to...

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Activates the **Invert** checkbox. The user can check this box to Invert the key.

False Colour

Show each exposure level as a color. Here is an example:

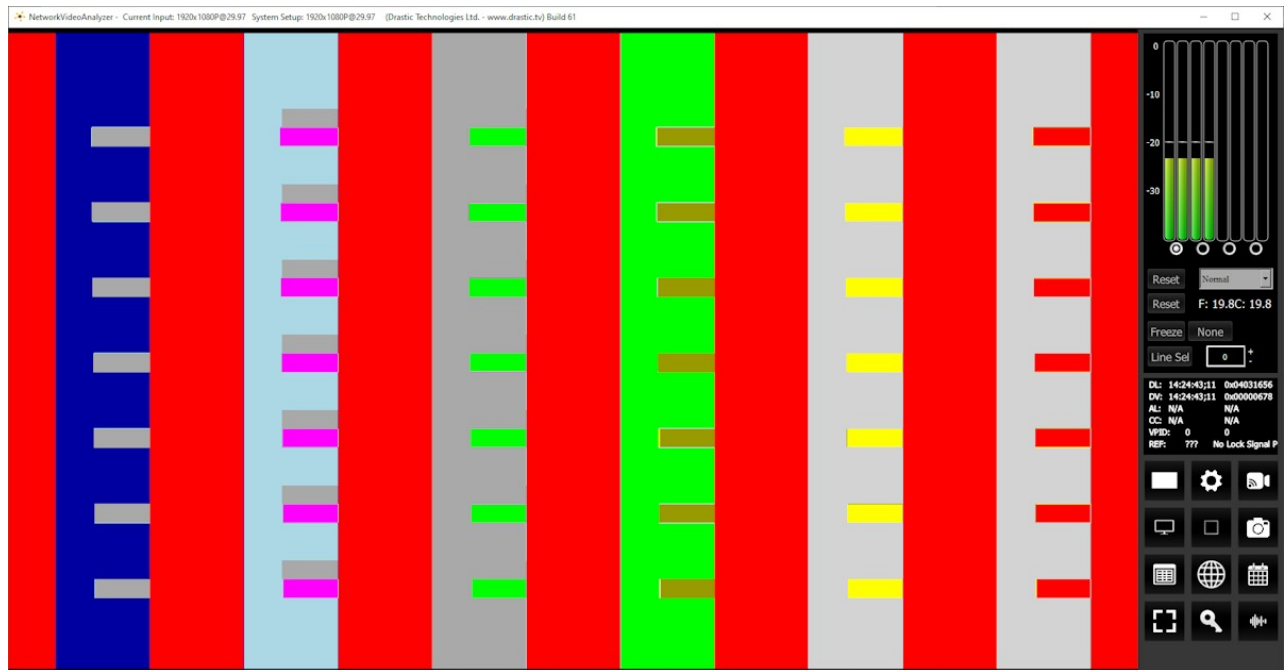

The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Here are the IRE Breakpoints in False Colour display mode:

0 to 1.65	Red	Too low
1.65 to 10	Blue	Underexposed
10 to 20	Light Blue	
20 to 42	Dark Grey	
42 to 48	Bright Purple	
48 to 52	Medium Grey	
52 to 58	Green	
58 to 78	Light Grey	Skin Tones
78 to 84	Dark Yellow	
84 to 94	Dark Yellow	
94 to 92	Orange	Overexposed
92 to 100	Red	Too High

The following controls on the **Monitor Settings** window are reserved for future development:

Intensity slider – reserved for future development.

Hue Diff slider – reserved for future development.

Sat Diff slider – reserved for future development.

Lightness slider – reserved for future development.

Neutral

Draw a color where the pixels are neutral. Here is an example:




The **Full Range** checkbox may be checked (use Full video range) or unchecked (use the standard SMPTE range).

Display Modes Keyboard Controls

The display modes can be set using keyboard commands rather than the Monitor Settings window. Please note, if the Monitor Settings window is open, these keyboard commands will be ignored.

- <ALT>-A** - Display mode alpha only
- <ALT>-B** - Display mode blue only
- <ALT>-C** - Display mode clipping
- <ALT>-D** - Display Mode flip flop
- <ALT>-E** - Display mode edges
- <ALT>-F** - Display mode focus assist
- <ALT>-G** - Display mode green only
- <ALT>-H** - Display mode HDR false color [shows greater than SDR and less than 64]
- <ALT>-I** - Display mode calibrate
- <ALT>-J** - Display mode luma key
- <ALT>-K** - Display mode chroma key simple
- <ALT>-L** - Display mode luma only
- <ALT>-M** - Display mode false color
- <ALT>-N** - Display mode none
- <ALT>-O** - Display mode opacity
- <ALT>-P** - Display mode chroma key despill
- <ALT>-R** - Display mode red only
- <ALT>-S** - Display mode green screen
- <ALT>-T** - Display mode neutral
- <ALT>-V** - Display mode buffer weighted *[not implemented]*
- <ALT>-W** - Display mode weighted RGB *[not implemented]*
- <ALT>-X** - Display mode edge difference
- <ALT>-Y** - Display mode zebra chroma
- <ALT>-Z** - Display mode zebra luma

Manual



Manual button – opens up this manual for quick reference. Depending on the version of software you have installed, this may not be the most up to date manual that exists.


The latest versions of Drastic documentation can generally be found here:

<https://www.drastic.tv/support-59/supportdocumentation>

Capture Image



Frame Grab button – provides options for capturing a frame of video for reference. Images are saved in C:\Users\<your computer>\Pictures\Network Video Analyzer. Opens the following dialog:

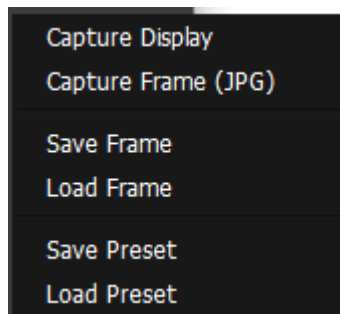

Capture Display – Capture the interface with the current video and scopes to an image

Capture Frame JPG - by selecting this option or using <CTRL>-1, a JPG image can be captured to your Pictures/Network Video Analyzer/ directory in 8 bit YCbCr mode for easy reading and documentation. 10% and 50% JPG scaled versions can also be captured with <CTR>-5 and <CTRL>-9.

Save Frame - The incoming image can be captured as a raw (YUV, V210, RGB10) image in full, bit perfect images to your Pictures/Network Video Analyzer/ directory by selecting this option or by pressing <CTRL>-0. These can be read with videoQC or converted with MediaReactor.

Save Images Keyboard Commands

Save JPG Images

<CTRL>-1 Capture a full size JPG image (in 8 bit YCbCr only)
<CTRL>-2 Capture a 50% size JPG image (in 8 bit YCbCr only)
<CTRL>-3 Capture a 25% size JPG image (in 8 bit YCbCr only)
<CTRL>-4 Capture a 10% size JPG image (in 8 bit YCbCr only)
<CTRL>-5 Capture a full size JPG image (in 8 bit YCbCr only)
<CTRL>-6 Capture a full size JPG image (in 8 bit YCbCr only)
<CTRL>-7 Capture a full size JPG image (in 8 bit YCbCr only)
<CTRL>-8 Capture a full size JPG image (in 8 bit YCbCr only)

Save Raw Images

<CTRL>-9
<CTRL>-0 Capture uncompressed frames as YUV (8 bit), v210 (10 bit), RGB10 (10 bit)
These are headerless frames, with only the raw data in them. They can be viewed or read in Drastic software like videoQC, DTMediaRead, Net-X-Code Server, etc. Please contact Drastic for the bit format of these files.

Saved Frames Location - Frames are saved at C:\Users\username\OneDrive\Pictures\4KScope directory.

Load Frame – opens a browser pointed at your Pictures/Network Video Analyzer/ directory so you can load a frame you have saved.


Save Preset – opens a browser, which allows the user to save the current layout in a location of their choice, as a preset for similar workflows.

Load Preset – opens a browser, which allows the user to locate and load existing presets.

Data View



Data View button – populates the Display section with the Data view.

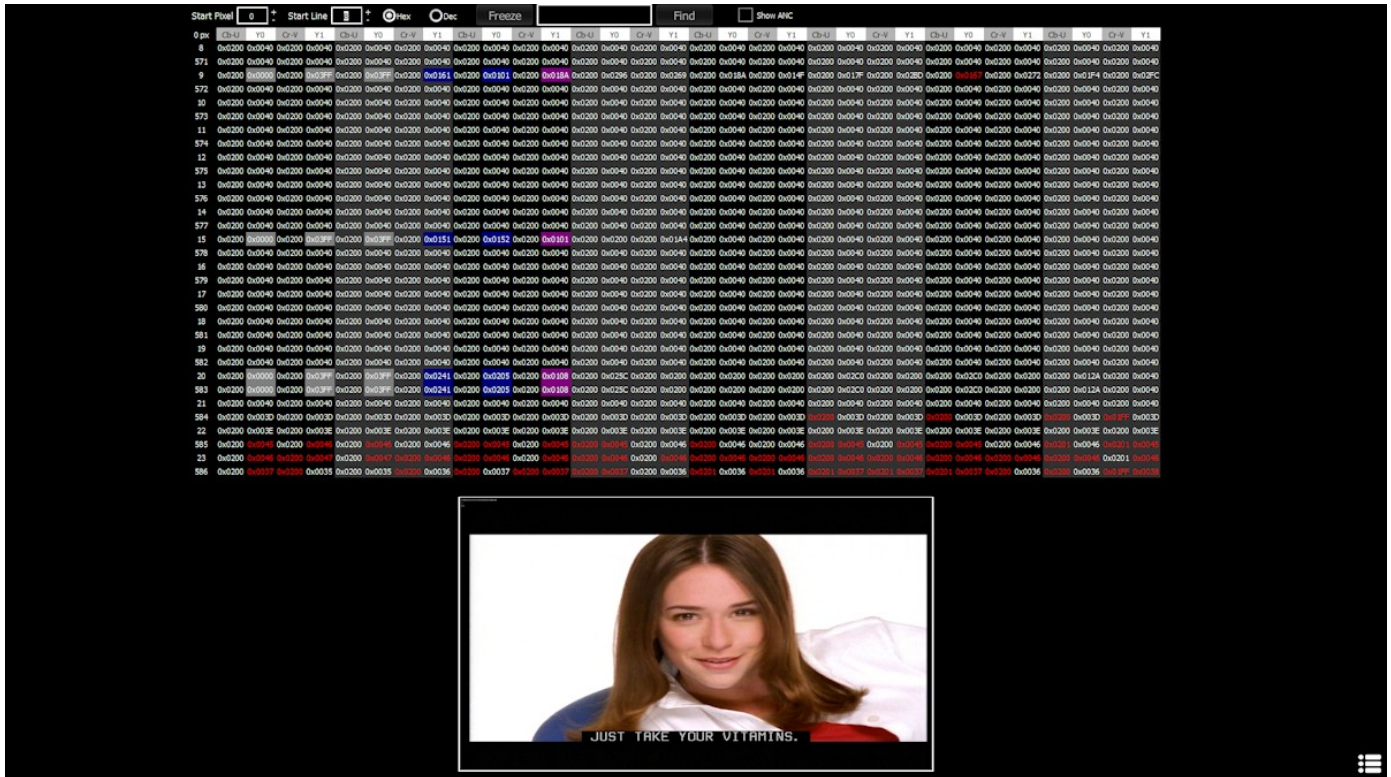

At the top of the data view the following controls are offered:



Start Pixel field and +/- buttons – displays the current start pixel. The user may click in this box to enter a new start pixel, or use the +/- buttons to increment the start pixel up or down by single pixels.

Start Line field and +/- buttons – displays the current start line. The user may click in this box to enter a new start line, or use the +/- buttons to increment the start line up or down by single lines.

Hex/Dec buttons – select between hexadecimal or decimal values to display.

Freeze button – freeze the current frame of video for closer inspection.

Find field and button – enter a hexadecimal value into the field and press the Find button, and the data view will highlight any instances of this value it finds.

Color Coded Values display

Valid ANC data in the signal starts with the values 0x0000, 0x03FF, 0x03FF (in the luma or a chroma channel, so every second value), followed by the DID and sDID value denoting the ANC type, followed by the size of the data.

These are color coded, with the following values and their color schemes:

Start Values - white on gray

DID/sDID Values - white on blue

Size Values - white on magenta.

	Name	DID/sDID	Activity	Status	Location
1	EIA-708 Caption	61/1	Active	Ok	Field 1 / Line 11
2	Tally Control	51/52	Active		Field 1 / Line 22
3	S2016-3 AFD	41/5	Active	14x9 Center	Field 1 / Line 32

6101 : SMPTE-334 HD CEA-708 CC : EIA-708 Caption : Active
5152 : Tally Control Packet : Tally Control : Active
4105 : SMPTE-2016-3 AFD/Bar Data : S2016-3 AFD : Active

577	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
15	0x0200	0x0000	0x0200	0x03FF	0x0200	0x03FF	0x0200	0x0151	0x0200	0x0152	0x0200	0x0101	0x0200
578	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
16	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
579	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
17	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
580	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
18	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
581	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
19	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
582	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200
20	0x0200	0x0000	0x0200	0x03FF	0x0200	0x03FF	0x0200	0x0241	0x0200	0x0205	0x0200	0x0108	0x0200
583	0x0200	0x0000	0x0200	0x03FF	0x0200	0x03FF	0x0200	0x0241	0x0200	0x0205	0x0200	0x0108	0x0200
21	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200	0x0040	0x0200

Start Values
White on Gray

DID/sDID
White on Blue

Size
White on Magenta

Show ANC checkbox – selecting this checkbox will display any valid ancillary data found

The Data view allows access to the raw pixel values being monitored on the HDMI or SDI input. Raw values are captured and displayed with no manipulation by the software. This mode is perfect for checking vertical blank signaling and metadata, as well as picture issues like inner line sync markers or out of range colors. Pixel starts can be selected, along with lines, in the edit boxes above the data area.


[illegible]

Location column – location within the video frame

Real time values display – displays per pixel details for the selected data

149

The Data View picture inset also provides real time per pixel data when you hover over any area of the image with the mouse. It displays the location of the specific pixel you are looking at, and shows the RGB values.

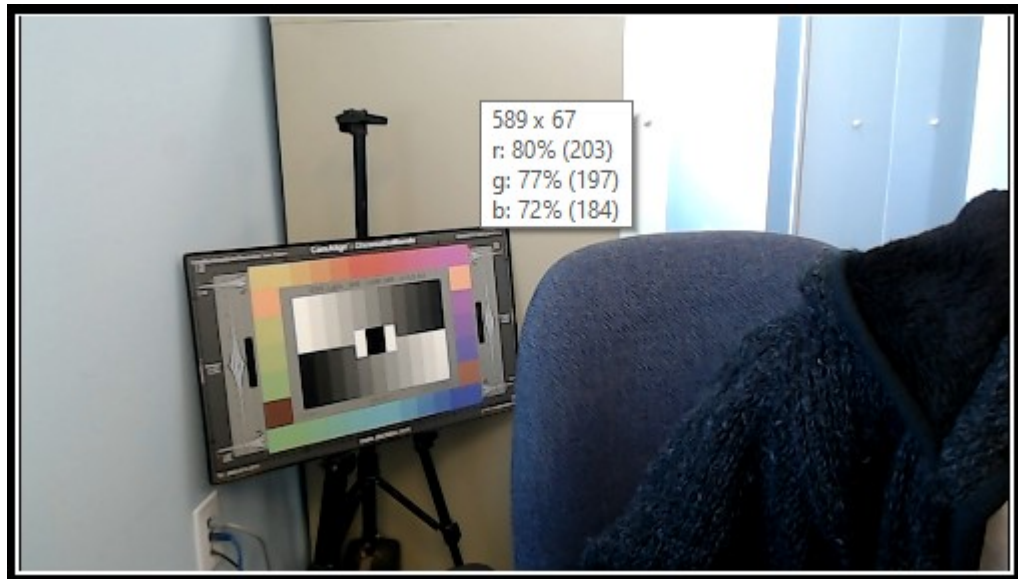

The region of pixels that data view analyzes can be set by the user by clicking the **Start Pixel**, or the **Start Line** checkbox, and changing the value. Note, areas outside the active picture region cannot be selected since they will not provide a useful measurement.

Start Pixel	624	+	Start Line	222	+	
624 px	Cb-U	Y0	Cr-V	Y1	Cb-U	Y0
222	0x0083	0x00A3	0x007D	0x00A3	0x0083	0x00A3
223	0x0083	0x00A3	0x007D	0x00A3	0x0083	0x00A3
224	0x0083	0x00A3	0x007D	0x00A3	0x0083	0x00A3
225	0x0083	0x00A3	0x007D	0x00A3	0x0083	0x00A3
226	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
227	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
228	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
229	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
230	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
231	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2
232	0x0083	0x00A2	0x007D	0x00A2	0x0083	0x00A2

The Data View can be set to display either hexadecimal, or decimal values for each pixel:

Hex View									
Start Pixel <input type="text" value="333"/>		Start Line <input type="text" value="222"/>		<input checked="" type="radio"/> Hex		<input type="radio"/> Dec			
332 px	Cb-U	Y0	Cr-V	Y1	Cb-U	Y0	Cr-V	Y1	Cb-U
222	0x0072	0x0077	0x0068	0x0078	0x0071	0x0078	0x0068	0x0078	0x0073
223	0x0072	0x0077	0x0068	0x0077	0x0071	0x0077	0x0068	0x0077	0x0072
224	0x0072	0x0075	0x0068	0x0075	0x0071	0x0075	0x0068	0x0075	0x0072
225	0x0072	0x0074	0x0068	0x0073	0x0071	0x0073	0x0068	0x0073	0x0072
226	0x0072	0x0073	0x0066	0x0073	0x0071	0x0073	0x0066	0x0073	0x0072
227	0x0072	0x0073	0x0066	0x0073	0x0071	0x0072	0x0066	0x0072	0x0072
228	0x0072	0x0073	0x0066	0x0072	0x0071	0x0072	0x0066	0x0072	0x0072
229	0x0072	0x0072	0x0066	0x0072	0x0071	0x0072	0x0066	0x0072	0x0072

Dec View									
Start Pixel <input type="text" value="333"/>		Start Line <input type="text" value="222"/>		<input type="radio"/> Hex		<input checked="" type="radio"/> Dec			
332 px	Cb-U	Y0	Cr-V	Y1	Cb-U	Y0	Cr-V	Y1	Cb-U
222	0115	0119	0103	0119	0115	0120	0103	0120	0115
223	0115	0118	0104	0118	0115	0119	0104	0119	0115
224	0115	0117	0104	0117	0115	0117	0104	0117	0115
225	0115	0116	0104	0116	0115	0116	0104	0116	0115
226	0114	0117	0103	0116	0114	0116	0103	0116	0115
227	0114	0116	0103	0116	0114	0116	0103	0115	0115
228	0114	0115	0103	0115	0114	0114	0103	0114	0115
229	0114	0115	0102	0114	0114	0113	0102	0113	0115

Hexadecimal values are shown above on the left, and the decimal values on the right.

Web Page




Globe button – opens up the web page for 4KScope. This feature requires UwAmp Wamp Server be installed. There is more information about UwAmp, including download links, here:
<https://www.uwamp.com/en/?page=download>

The web page lets the user set up and view scopes remotely.

2110Scope Web Interface


2110Scope software features a web interface, so the user can remotely set up the scopes and view their signal through the scopes on a web page.

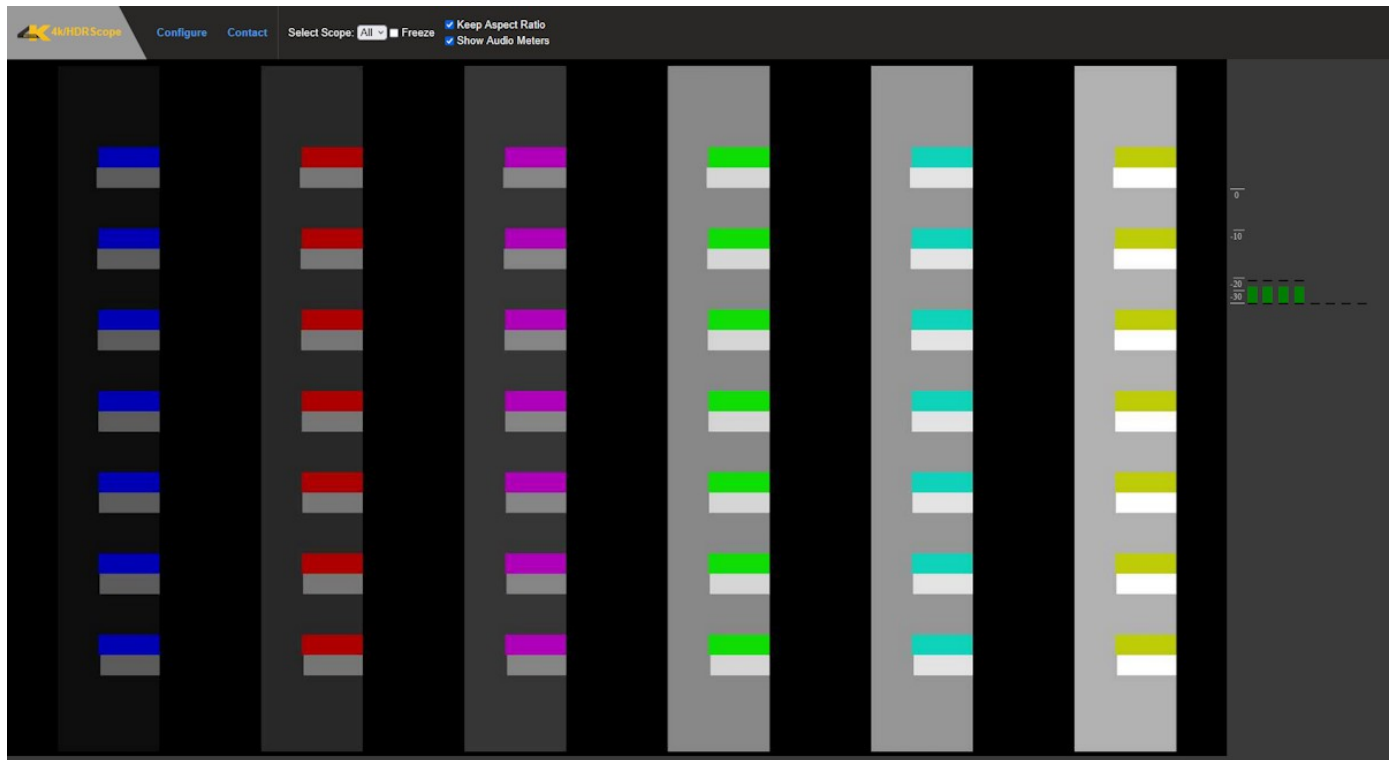

The user can set:

- How many scopes are displayed (1, 2, 4, or 6)
- Where each scope is placed in a multiple scope layout
- How the scope is displayed
- Which overlays are displayed

The main menu offers the following options:

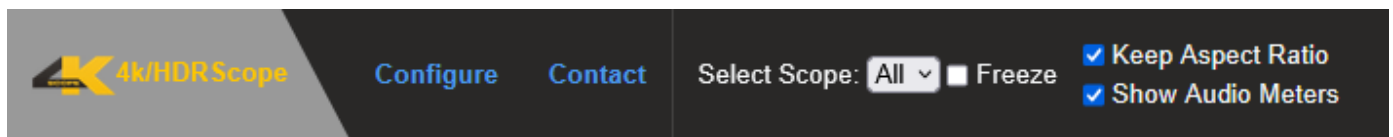


4KScope Logo - open the main menu

Configure

Pressing the Configure button opens the configuration page, where the user can set up how many scopes are displayed, and how they are displayed.

At the top there is a pulldown menu to select which layout to use. The options are:

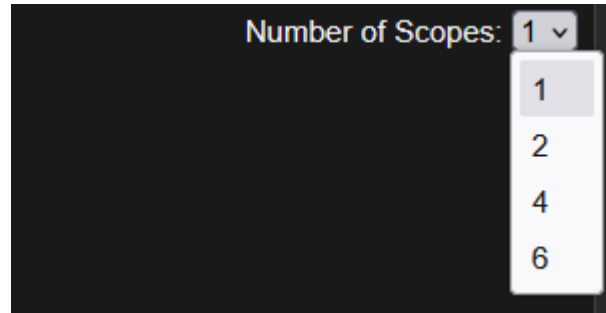

- 1 – Use a single scope
- 2 – Two scopes, side by side
- 4 – 4 scopes in a 2 x 2 grid
- 6 – Two rows of three scopes

Below the layout selector there are buttons to select between the available scopes for display. Currently this selection includes Picture, Vector, Waveform RGB, Waveform, Histogram (YCbCr, RGB, HSV, Luma, H/S), Chromaticity, ANC Monitor, Status, Audio Vector, Audio Phase, Audio Histogram, Audio Wave, Audio Meter, and Audio Surround Meters.


Keep Aspect Ratio checkbox – select to constrain any image scaling to maintain the aspect ratio of the input signal

Show Audio Meters checkbox – select to display audio levels in the audio meters to the right of the scopes

Home - open the 2110Scope main menu

Picture

Setting a scope to display the Picture view provides the following options:

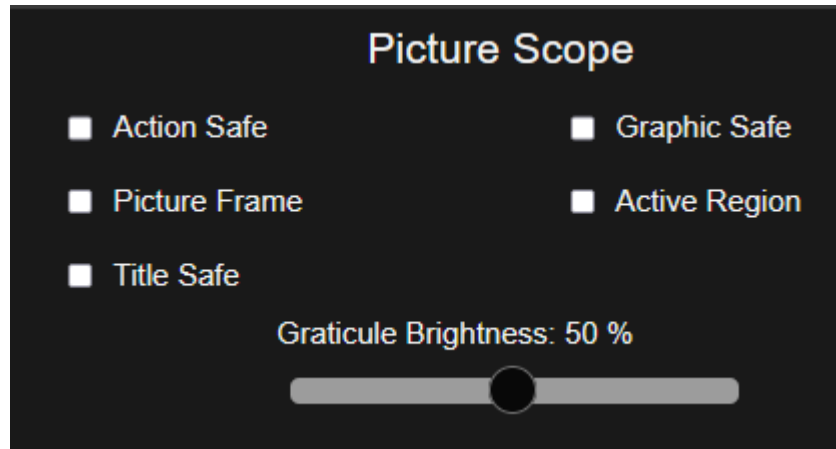

Action Safe checkbox – select to display the Action Safe rectangle over the picture

Graphic Safe checkbox – select to display the Graphic Safe rectangle over the picture

Picture Frame checkbox – select to display the Picture Frame rectangle over the picture


Active Region checkbox – select to display the Active Region rectangle over the picture

Title Safe checkbox – select to display the Title Safe rectangle over the picture

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Vector

Setting a scope to display the Vector view provides the following options:

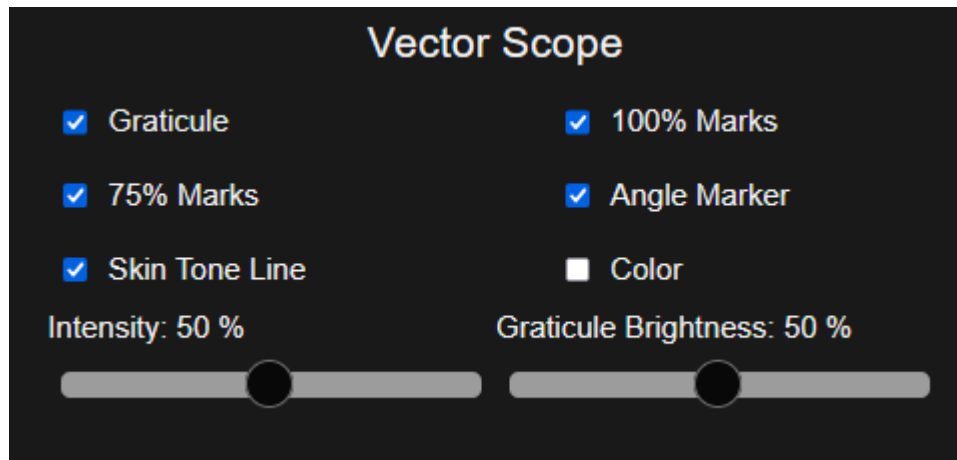

Graticule checkbox – select to display the graticule over the vectorscope

100% Marks checkbox – select to display the 100% Marks

75% Marks checkbox – select to display the 75% Marks

Angle Marker checkbox – select to display the Angle Marker

Skin Tone Line checkbox – select to display the Skin Tone Line


Color checkbox – select to display the signal in color

Intensity slider – use the slider to adjust how intense the vector display will be. Pull to the left reduces the intensity, and pull to the right makes it more intense.

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Waveform RGB

Setting a scope to display the Waveform RGB view provides the following options:

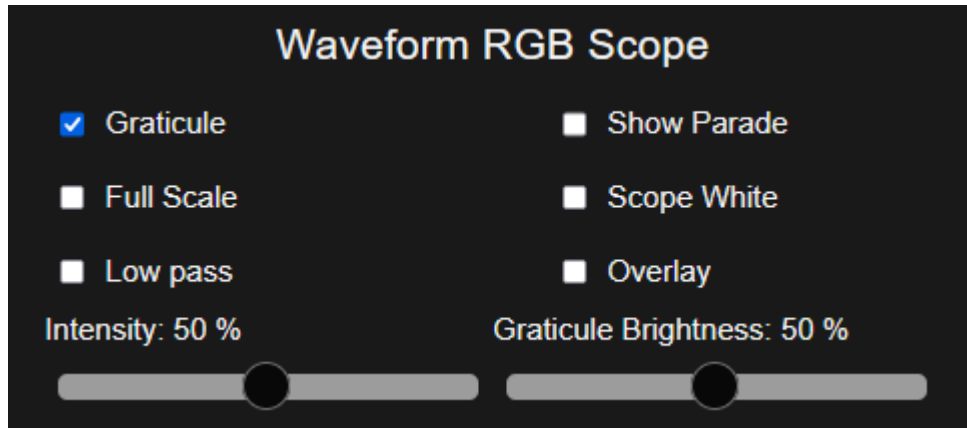

Graticule checkbox – select to display the graticule over the vectorscope

Show Parade checkbox – select to display the R, G, and B from left to right. When not selected, the display is stacked top to bottom.

Full Scale checkbox – when selected, use the full luminance range. RGB, by default, will be sRGB. The range of each color will be from 16 to 240 (in 8 bit), so the scale will place white at 240 and black at 16 in normal scale. If in full scale, white will be placed at 255 and black at 0.

Scope White checkbox – select to display the signal in white

Low Pass checkbox – select to smooth the scope with a 1/3 filter to remove single pixel anomalies.


Overlay checkbox – select to display the overlay, or composite scope (only available in HDRScope and Network Video Analyzer)

Intensity slider – use the slider to adjust how intense the vector display will be. Pull to the left reduces the intensity, and pull to the right makes it more intense.

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Waveform YCbCr

Setting a scope to display the Waveform YCbCr view provides the following options:

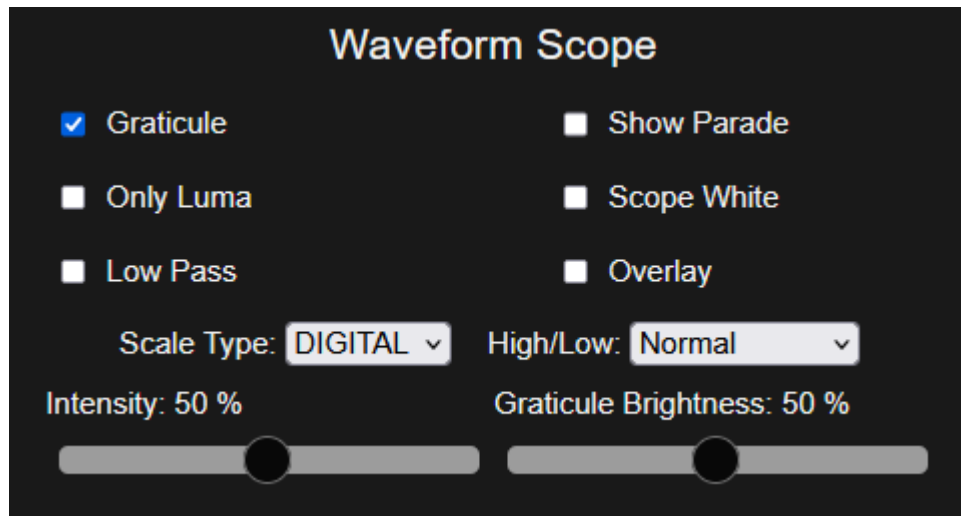

Graticule checkbox – select to display the graticule over the vectorscope

Show Parade checkbox – select to display the Y, Cb, and Cr from left to right. When not selected, the display is stacked top to bottom.

Only Luma checkbox – select to display only the luminance in the signal

Scope White checkbox – select to display the signal in white

Low Pass checkbox – select to smooth the scope with a 1/3 filter to remove single pixel anomalies.

Overlay checkbox – select to display the overlay, or composite scope (only available in HDRScope and Network Video Analyzer)

Scale Type pulldown – select between available scale types. Choices include Digital, MV, and IRE.

High/Low pulldown – displays only the highs and lows of the signal so the user can more closely examine whites and blacks. 2X and 3x zooms are available.

Intensity slider – use the slider to adjust how intense the vector display will be. Pull to the left reduces the intensity, and pull to the right makes it more intense.

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Histogram


Setting a scope to display the Histogram view provides the following options:

Type pulldown – select between available histogram types.

There are five Histograms available in the histogram panel: the YCbCr Histogram, RGB Histogram, HSV Histogram, Luma Histogram, and the H/S Scope.

Histogram YCbCr

With the YCbCr Histogram selected in the pulldown menu, the following controls are available:

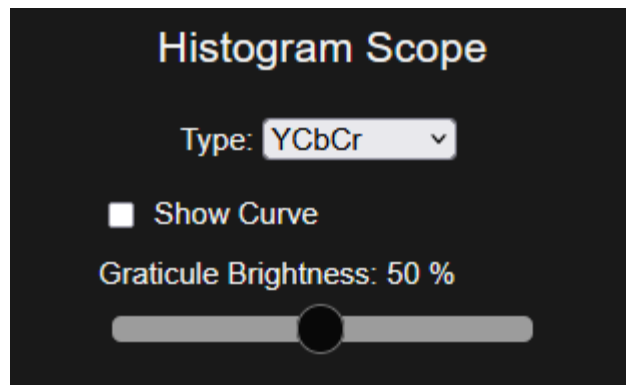


Show Curve checkbox – only used in the H/S Scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Histogram RGB

With the RGB Histogram selected in the pulldown menu, the following controls are available:

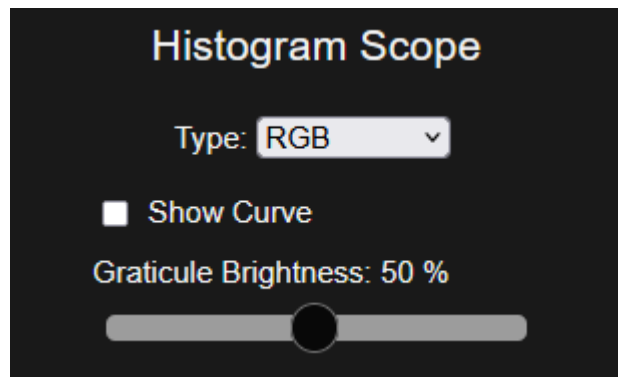


Show Curve checkbox – only used in the H/S Scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Histogram HSV

With the HSV Histogram selected in the pulldown menu, the following controls are available:

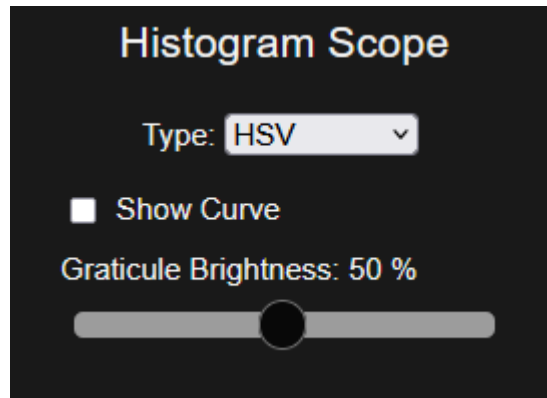


Show Curve checkbox – only used in the H/S Scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Histogram Luma

With the Luma Histogram selected in the pulldown menu, the following controls are available:

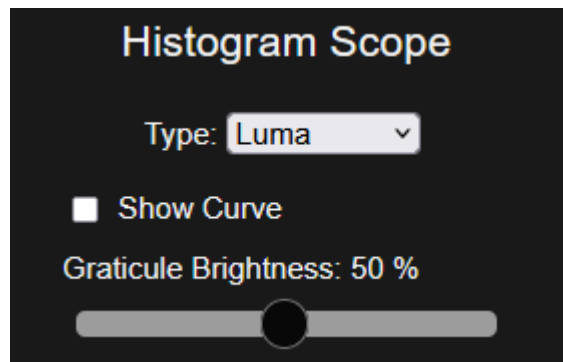


Show Curve checkbox – only used in the H/S Scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Histogram H/S Scope

With the H/S Scope Histogram selected in the pulldown menu, the following controls are available:

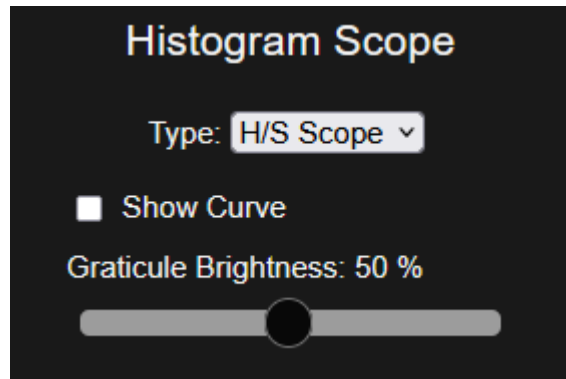


Show Curve checkbox – select to show the curve

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Chromaticity

Setting a scope to display the Chromaticity view provides the following options:

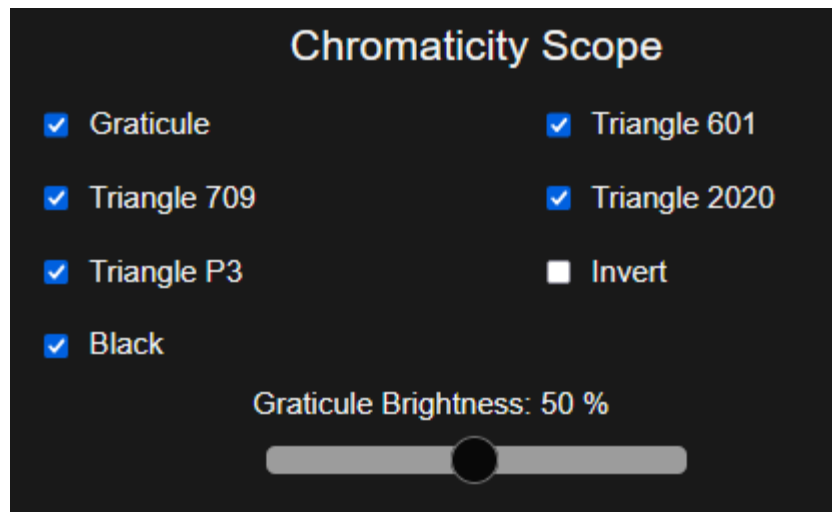

Graticule checkbox – select to display the graticule over the chromaticity scope

Triangle 601 checkbox – select to display the 601 triangle

Triangle 709 checkbox – select to display the 709 triangle

Triangle 2020 checkbox – select to display the 2020 triangle

Triangle P3 checkbox – select to display the P3 triangle


Invert checkbox – select to display the signal in color, and the chromaticity triangle in black

Black checkbox – select to display the signal in black

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.


ANC Monitor

Setting a scope to display the ANC Monitor view does not provide any setup options. It does allow the user to select the ANC monitor.

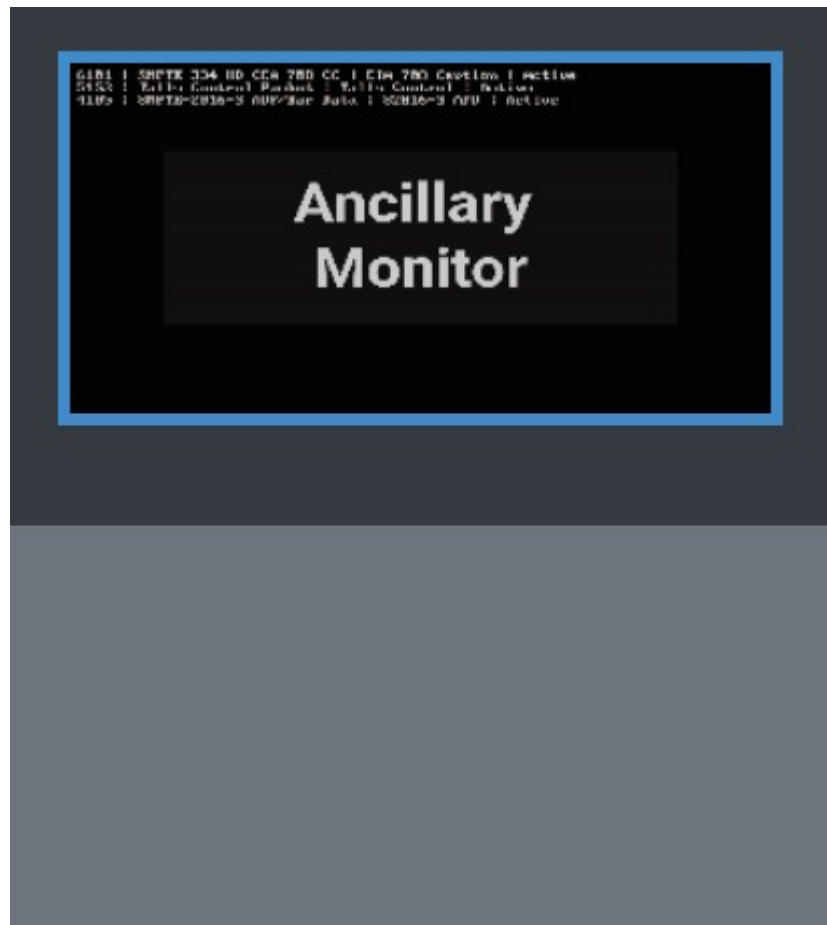

Status


Setting a scope to display the Status view provides the following options:

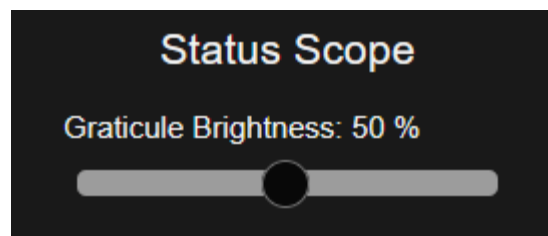

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Vector Scope

Setting a scope to display the Audio Vector Scope view provides the following options:

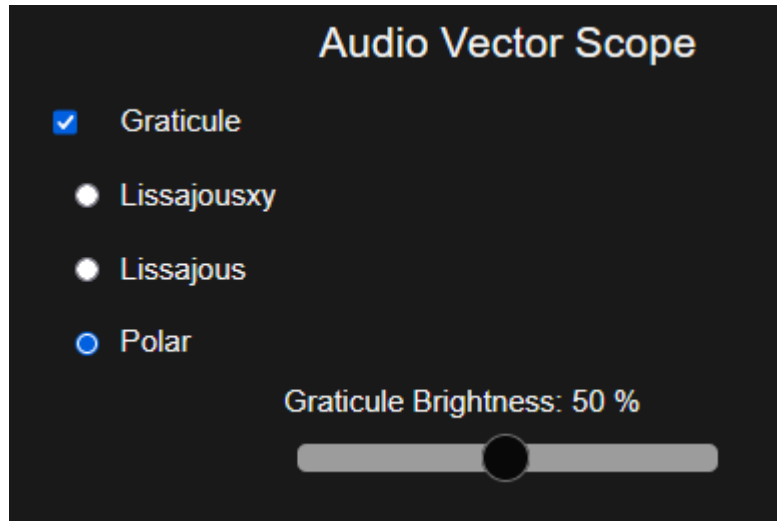

Graticule checkbox – select to display the graticule over the audio vectorscope

Lissajousxy checkbox – select to set the audio vectorscope to Lissajousxy mode


Lissajous checkbox – select to set the audio vectorscope to Lissajous mode

Polar checkbox – select to set the audio vectorscope to Polar mode

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Phase Scope

Setting a scope to display the Audio Phase Scope view provides the following options:

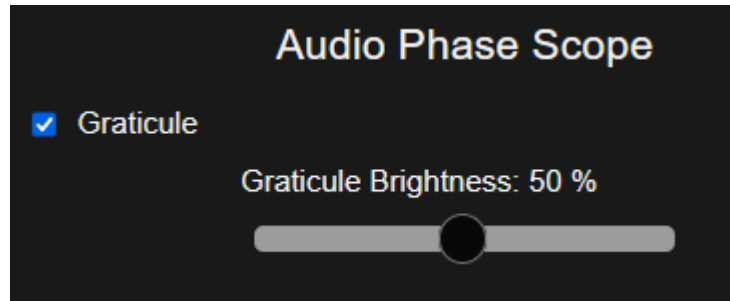


Graticule checkbox – select to display the graticule over the audio phase scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Histogram Scope

Setting a scope to display the Audio Histogram Scope view provides the following options:

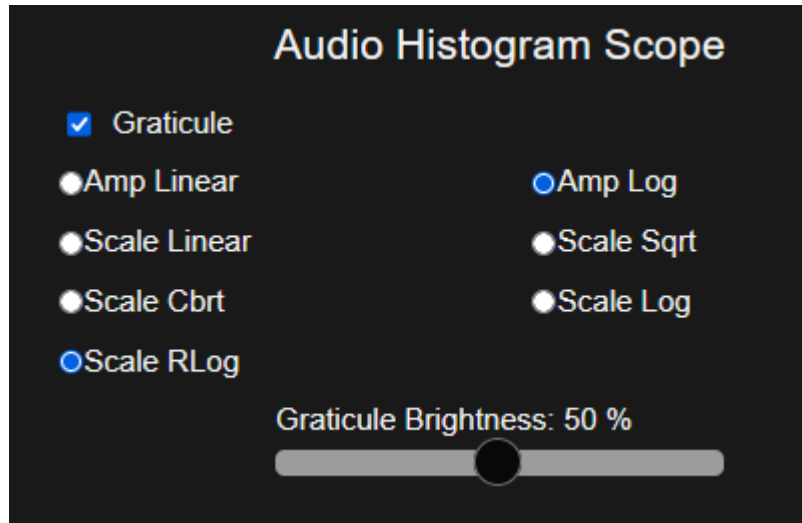

Graticule checkbox – select to display the graticule over the audio histogram scope

Amp linear checkbox – select to set the display to Amp Linear

Amp Log checkbox – select to set the display to Amp Logarithmic

Scale Linear checkbox – select to set the display to Scale Linear

Scale Sqrt checkbox – select to set the display to Scale Square Root

Scale Cbrt checkbox – select to set the display to Square Cube Root


Scale Log checkbox – select to set the display to Scale Logarithmic

Scale RLog checkbox – select to set the display to Scale R Logarithmic

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Wave Scope

Setting a scope to display the Audio Wave Scope view provides the following options:

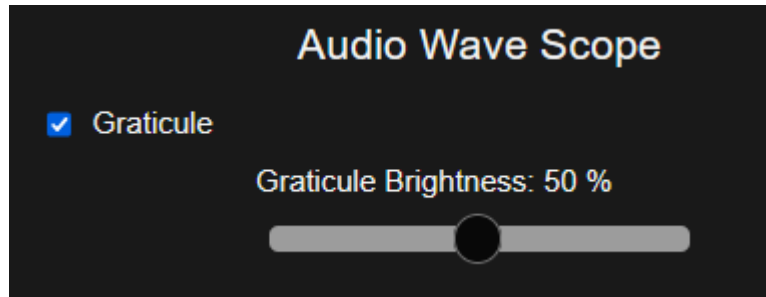


Graticule checkbox – select to display the graticule over the audio phase scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Meters Scope

Setting a scope to display the Audio Meters Scope view provides the following options:

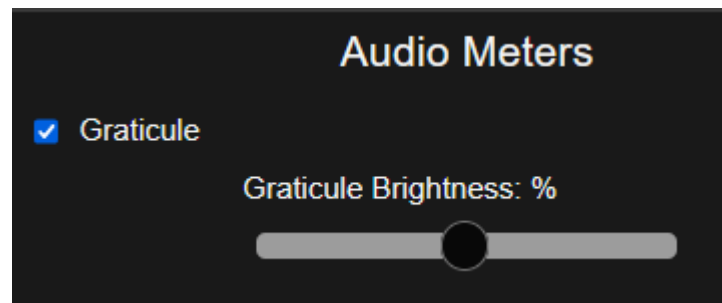


Graticule checkbox – select to display the graticule over the audio phase scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Audio Surround Sound Scope

Setting a scope to display the Audio Surround Meters view provides the following options:

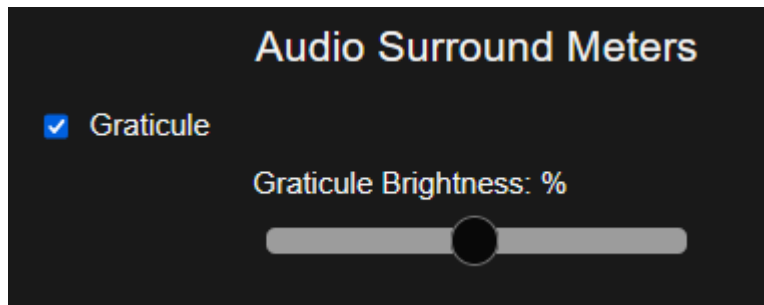

Graticule checkbox – select to display the graticule over the audio phase scope

Graticule Brightness slider – adjust the brightness of the graticule overlay by using the slider. Pull to the left makes the graticule dimmer, and pull to the right makes it brighter.

Contact - displays contact information for Drastic Technologies

Drastic Technologies Ltd.

523 The Queensway Suite 201

Toronto, Ontario

Canada M8Y 1J7

Monday To Friday

9:00 am - 5:00 pm EST

Phone: (416) 255-5636

Fax: (416) 255-8780

Email: sales@drastictech.com

Event Log



Log button – opens up the Event Log, which allows the user to review specific types of events, useful for troubleshooting errors or other issues.


NetworkVideoAnalyzer							
<input type="checkbox"/> Show info events		<input checked="" type="checkbox"/> Auto scroll		<input type="checkbox"/> Auto load		event_0000000725_2022_11_23-08_53_57.csv	
						Event Sensitivity	Show Logs
	Date-Time	Timecode	Code	SubCode	Event	Description	Details
4	2022_11_23-09_30_55	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
5	2022_11_23-09_30_56	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
6	2022_11_23-09_30_56	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
7	2022_11_23-09_30_56	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
8	2022_11_23-09_31_28	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
9	2022_11_23-09_31_28	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
10	2022_11_23-09_31_28	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
11	2022_11_23-09_31_28	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
12	2022_11_23-09_31_46	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
13	2022_11_23-09_31_46	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
14	2022_11_23-09_31_46	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
15	2022_11_23-09_31_46	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
16	2022_11_23-09_31_49	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
17	2022_11_23-09_31_49	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
18	2022_11_23-09_31_49	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
19	2022_11_23-09_31_49	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
20	2022_11_23-09_31_55	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
21	2022_11_23-09_31_55	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
22	2022_11_23-09_31_55	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
23	2022_11_23-09_31_55	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
24	2022_11_23-09_31_57	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
25	2022_11_23-09_31_57	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
26	2022_11_23-09_31_57	n/a	Hardware	0x00000002	0x0000000B	Closing video board	
27	2022_11_23-09_31_58	n/a	Hardware	0x00000002	0x0000000A	Found and opened VGA ...	
28	2022_11_23-10_16_10	n/a	Hardware	0x00000002	0x0000000B	Closing video board	

The following controls are available:

Show Info Events checkbox – click to show or hide the events listed in the log.

Auto Scroll checkbox -

Auto Load checkbox – when selected, each time the Log button is pressed, the Event Log will open with the most recent event log displayed. When this checkbox is deselected, the log pulldown menu to the right becomes active, so the user can load other saved event logs.

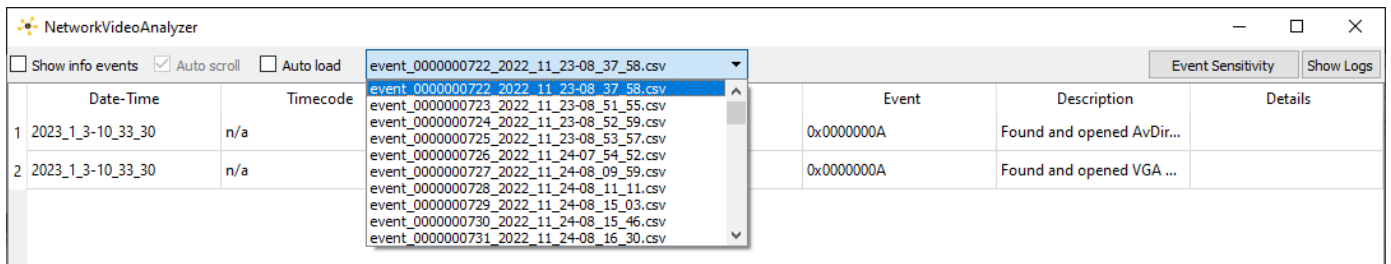


Selecting an event log from this list lets the user view less recent event logs.

Audio/Video Event Sensitivity

Event Sensitivity button – opens the Event Sensitivity window

Each category of event can be adjusted to suit the requirements of the user's workflow. The default value is displayed, and the user can adjust a parameter by using the sliders provided. A reset button is available for each individual setting.

Vertical Line Repetition

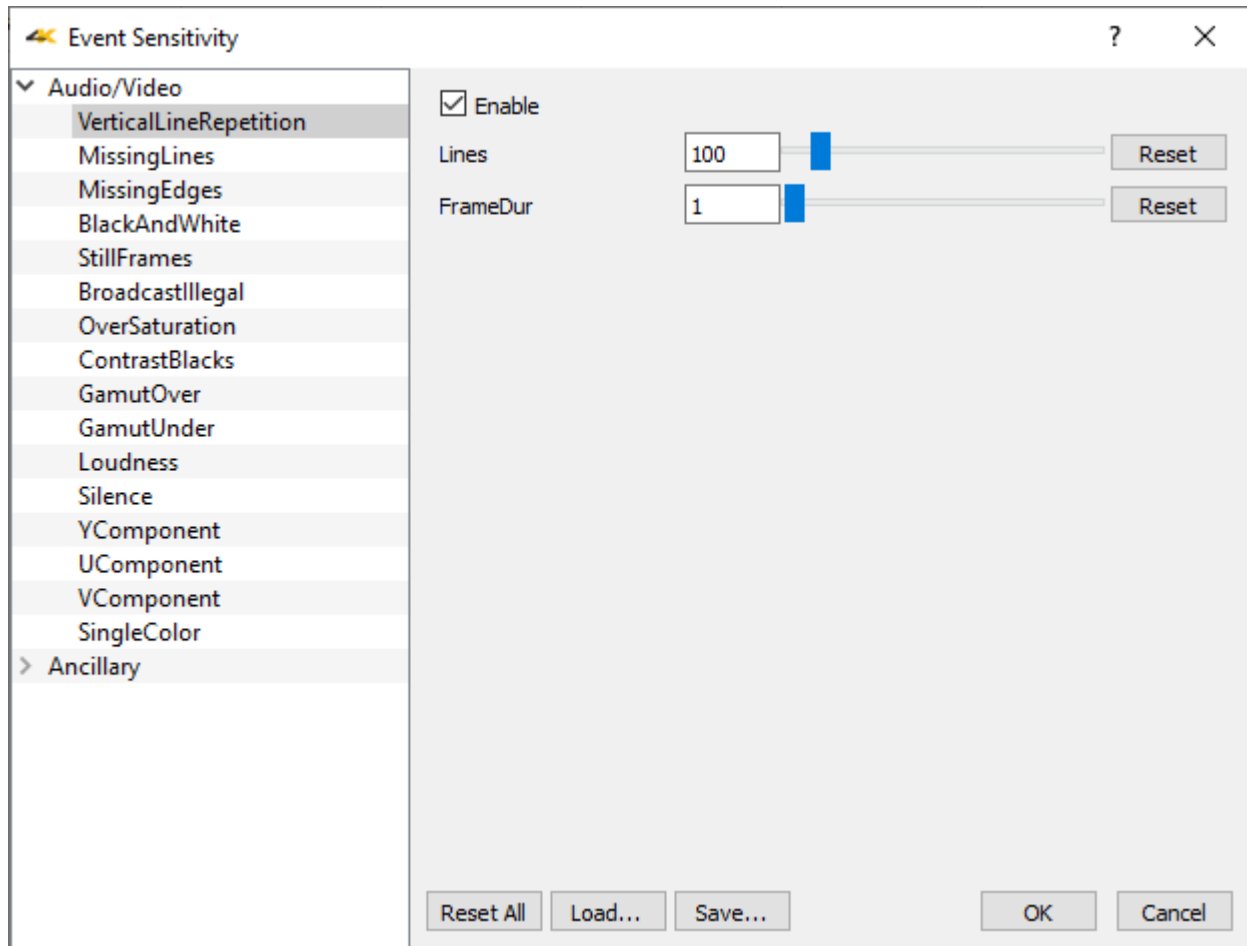

Enable checkbox – click to enable checking for Vertical Line Repetition, and adjust any relevant settings.

Lines (number of lines) – default 100

FrameDur (frame duration) – default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Missing Lines

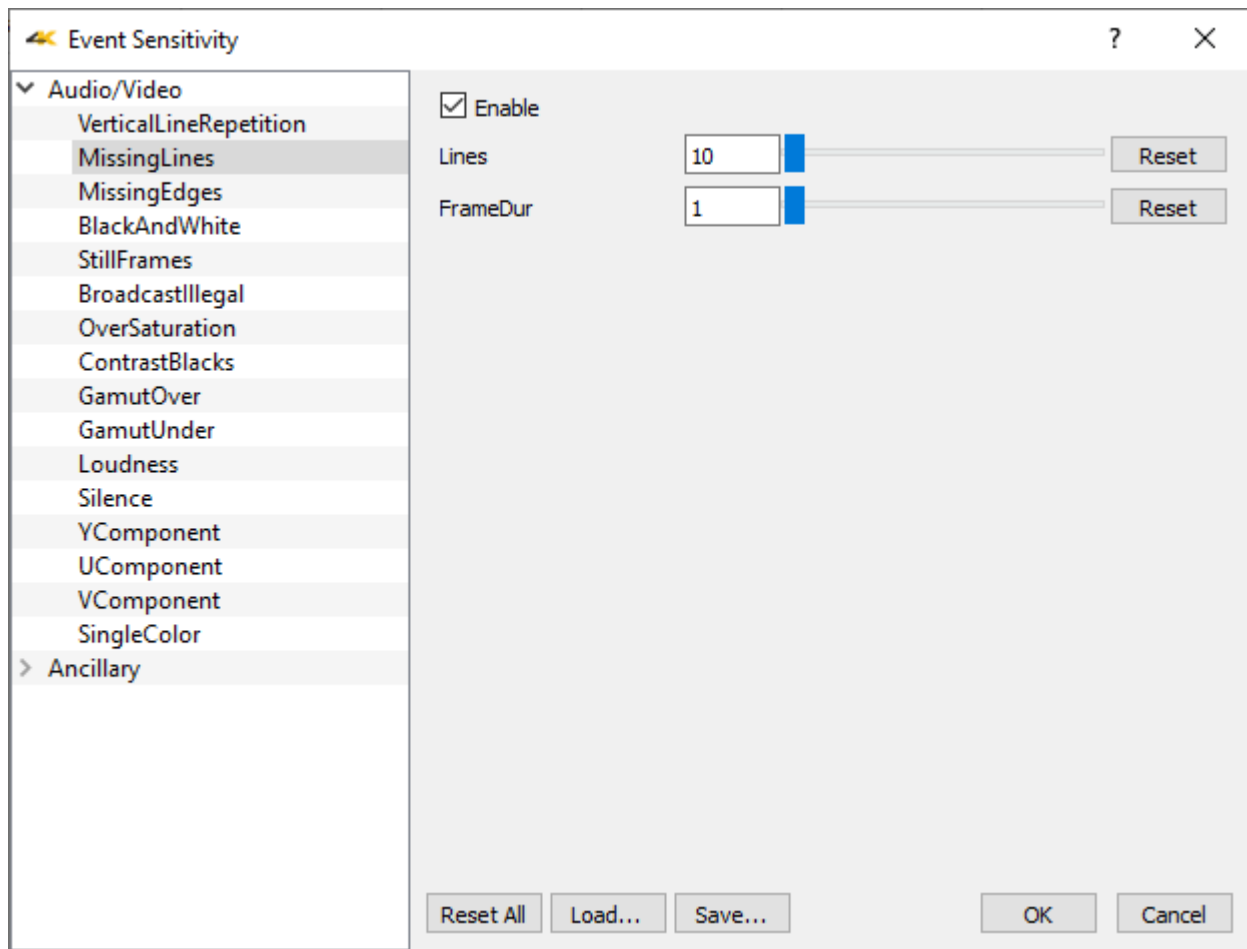

Enable checkbox – click to enable checking for missing Lines, and adjust any relevant settings.

Lines (number of lines) – default 10

FrameDur (frame duration) – default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Missing Edges

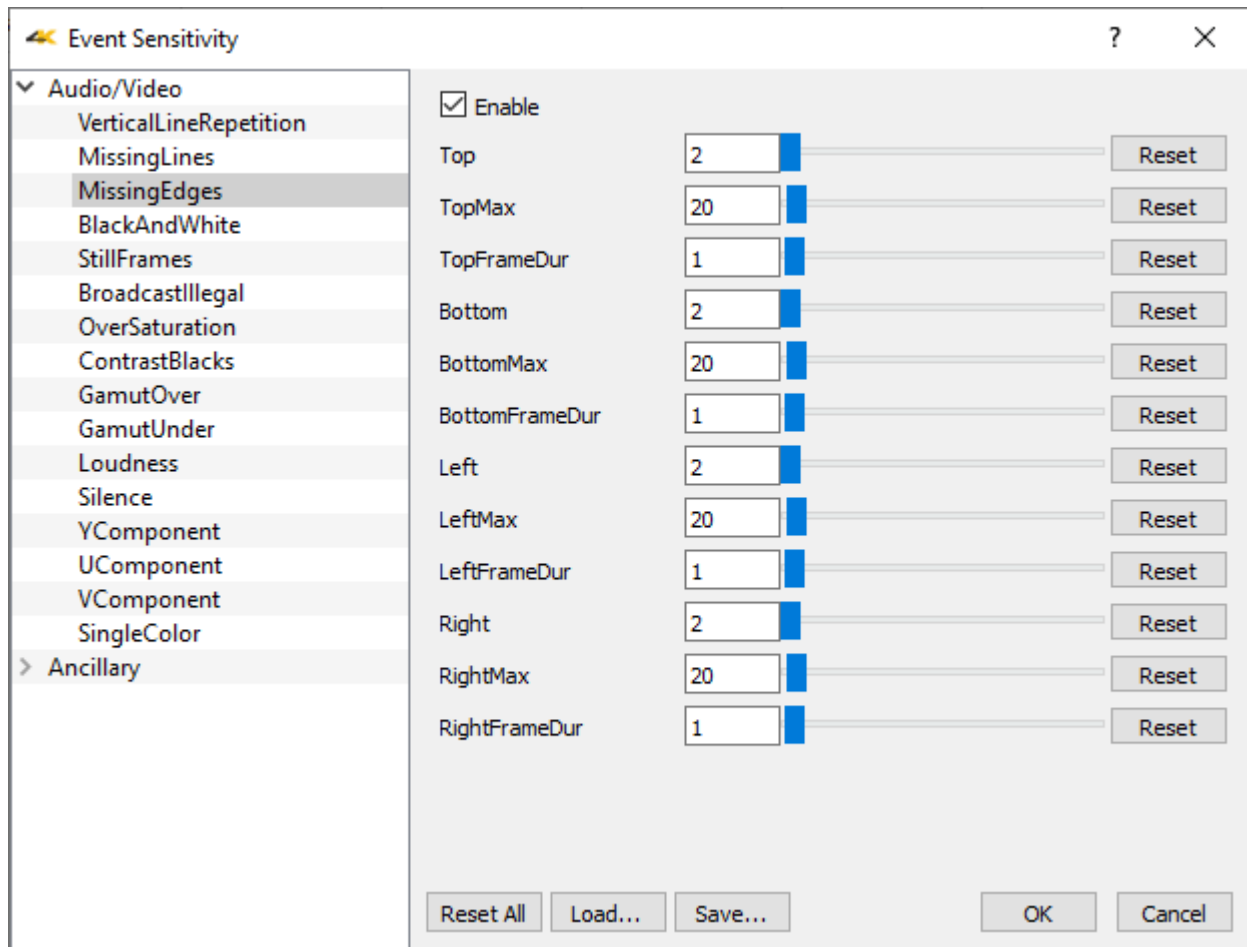

Enable checkbox – click to enable checking for missing edges, and adjust any relevant settings.

Top - default 2

TopMax - default 20

TopFrameDur - default 1

Bottom - default 20

BottomMax - default 20

BottomFrameDur - default 1

Left - default 2

LeftMax - default 20

LeftFrameDur - default 1

Right - default 2

RightMax - default 20

RightFrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Black and White

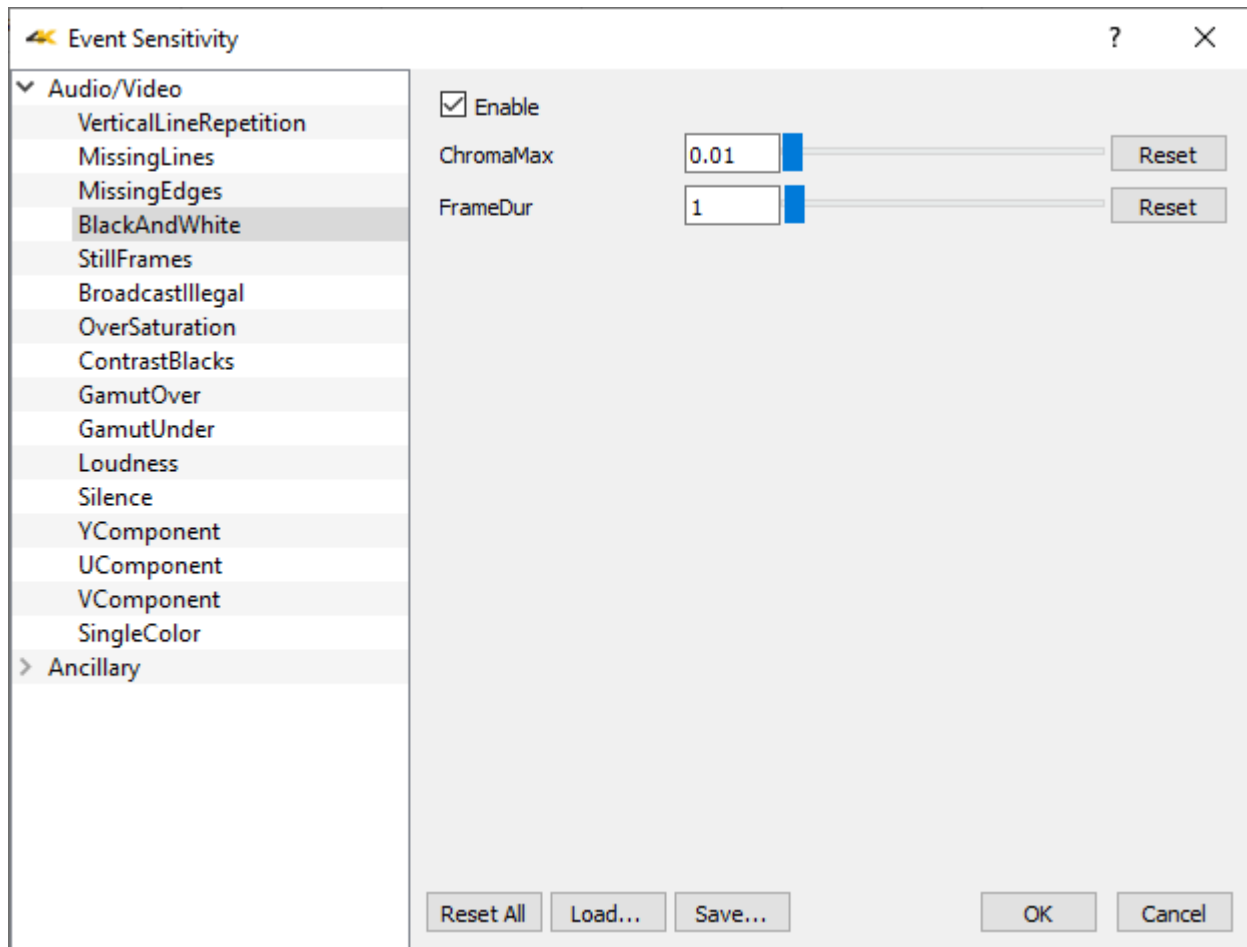

Enable checkbox – click to enable checking the black and white levels, and adjust any relevant settings.

ChromaMax - default 0.01

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Still Frames

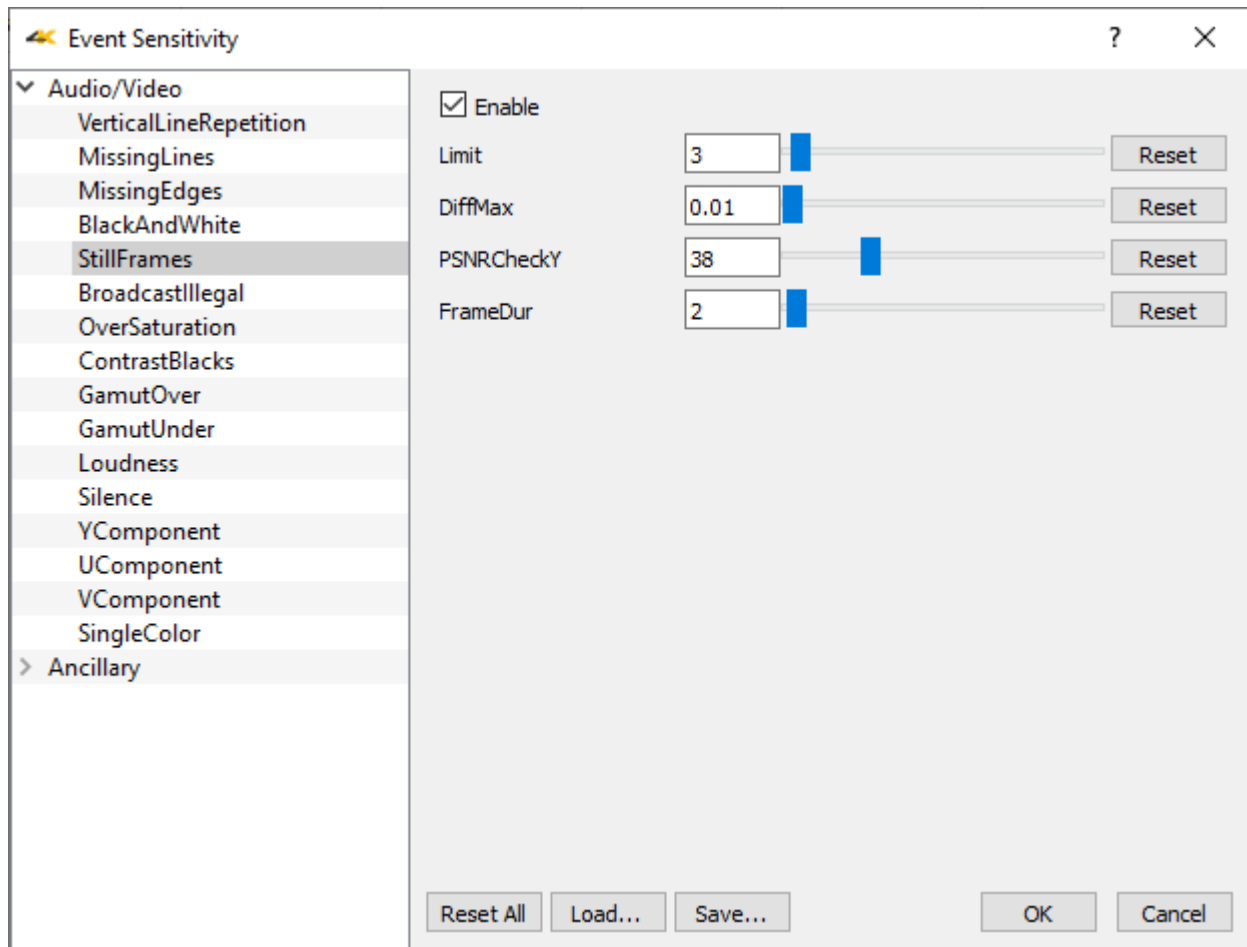

Enable checkbox – click to enable checking for still frames, and adjust any relevant settings.

Limit - default 3

DiffMax - default 0.01

PSNRCheckY - default 38

FrameDur - default 2

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Broadcast Illegal

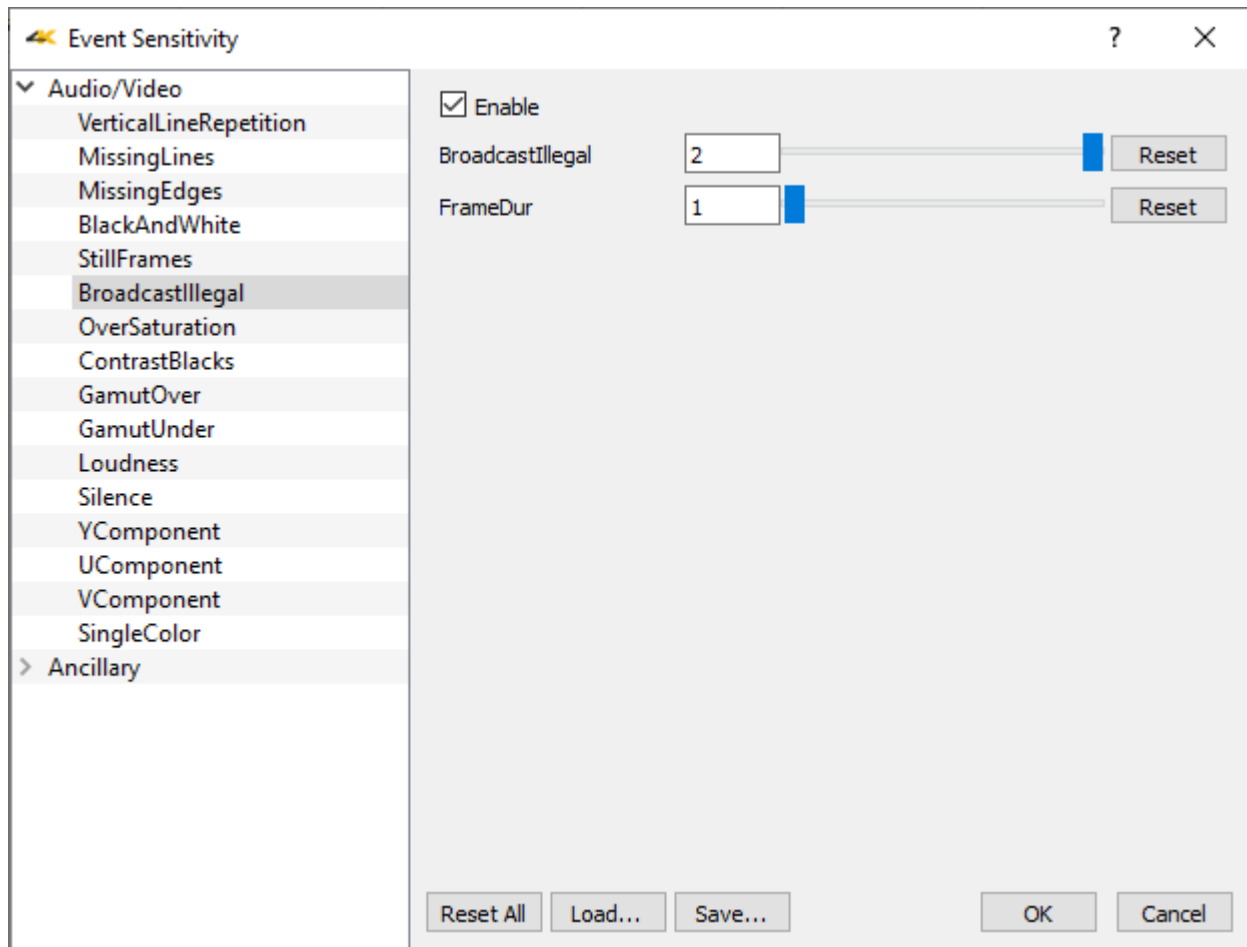

Enable checkbox – click to enable checking for broadcast illegal, and adjust any relevant settings.

BroadcastIllegal - default 2

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Oversaturation

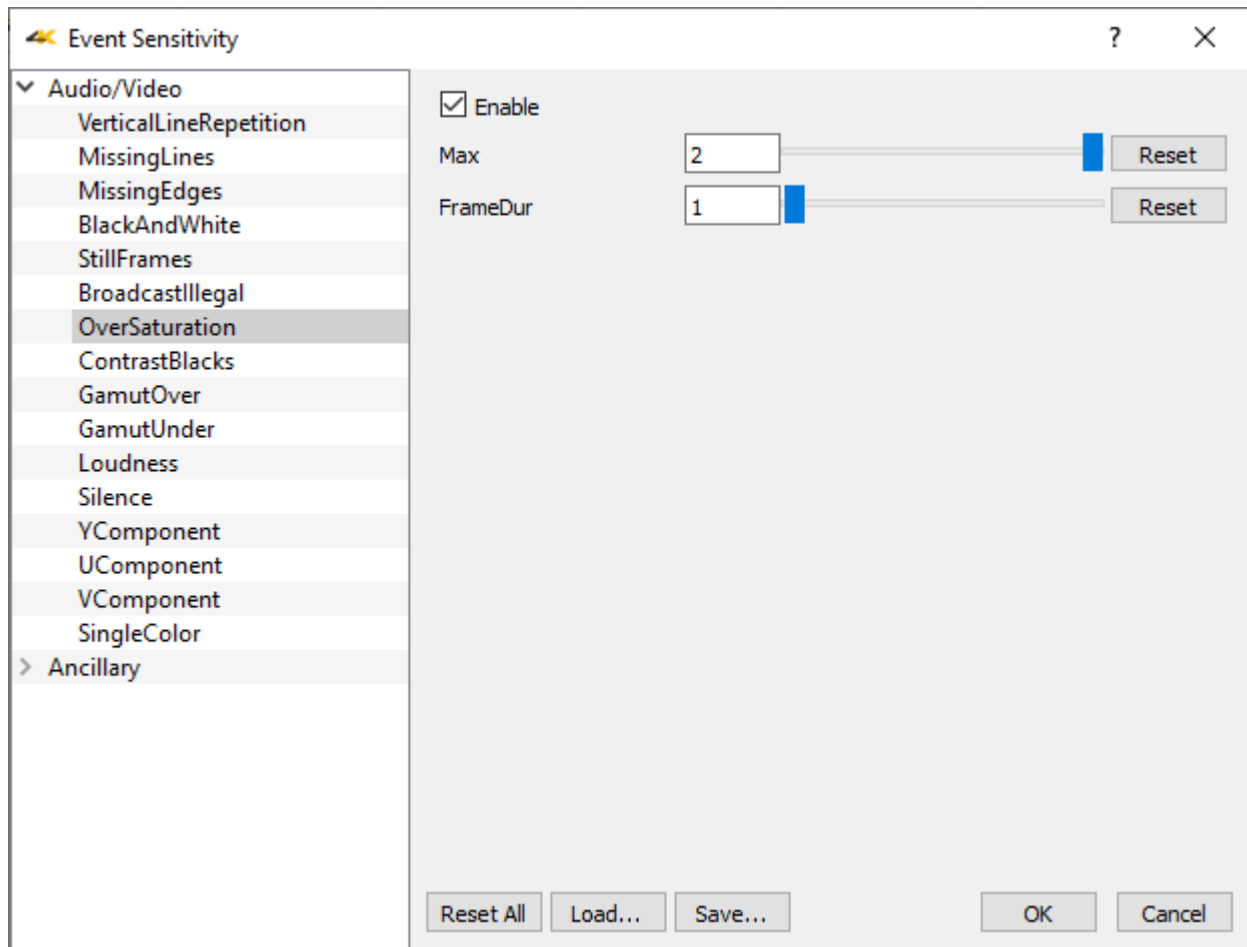

Enable checkbox – click to enable checking for oversaturation, and adjust any relevant settings.

Max - default 2

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Contrast Blacks

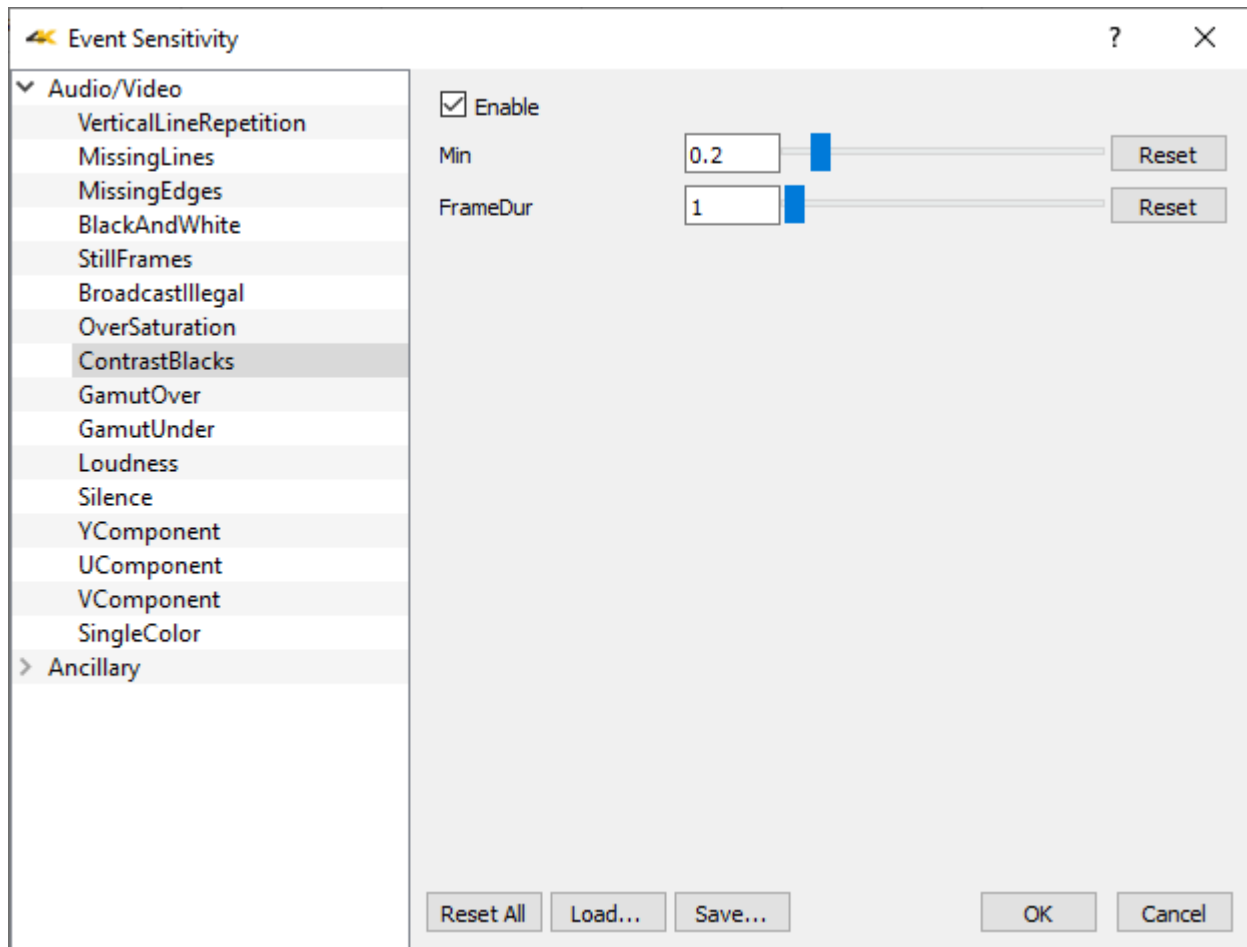

Enable checkbox – click to enable checking for contrast blacks, and adjust any relevant settings.

Min - default 0.22

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Gamut Over

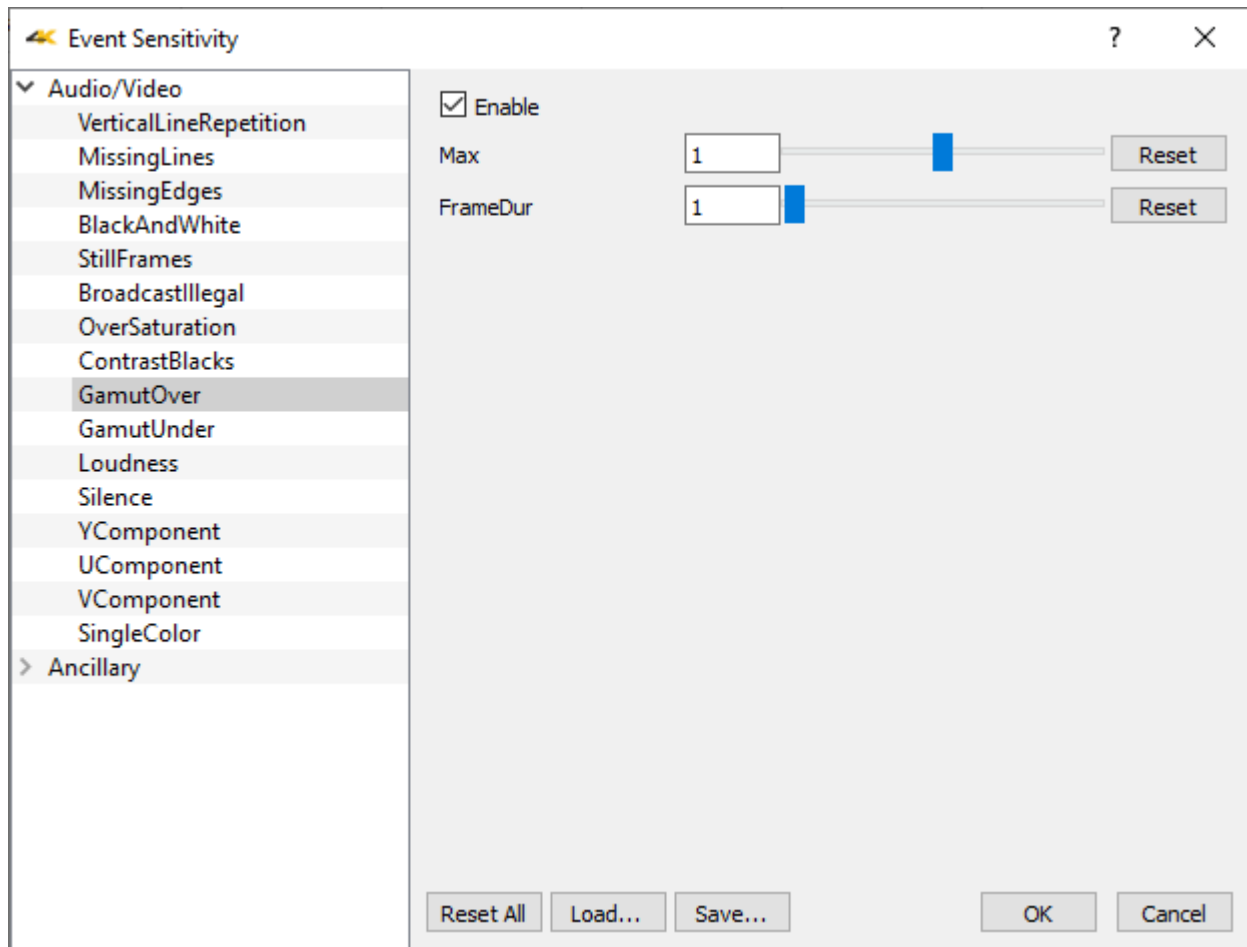

Enable checkbox – click to enable checking for gamut over, and adjust any relevant settings.

Min - default 1

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Gamut Under

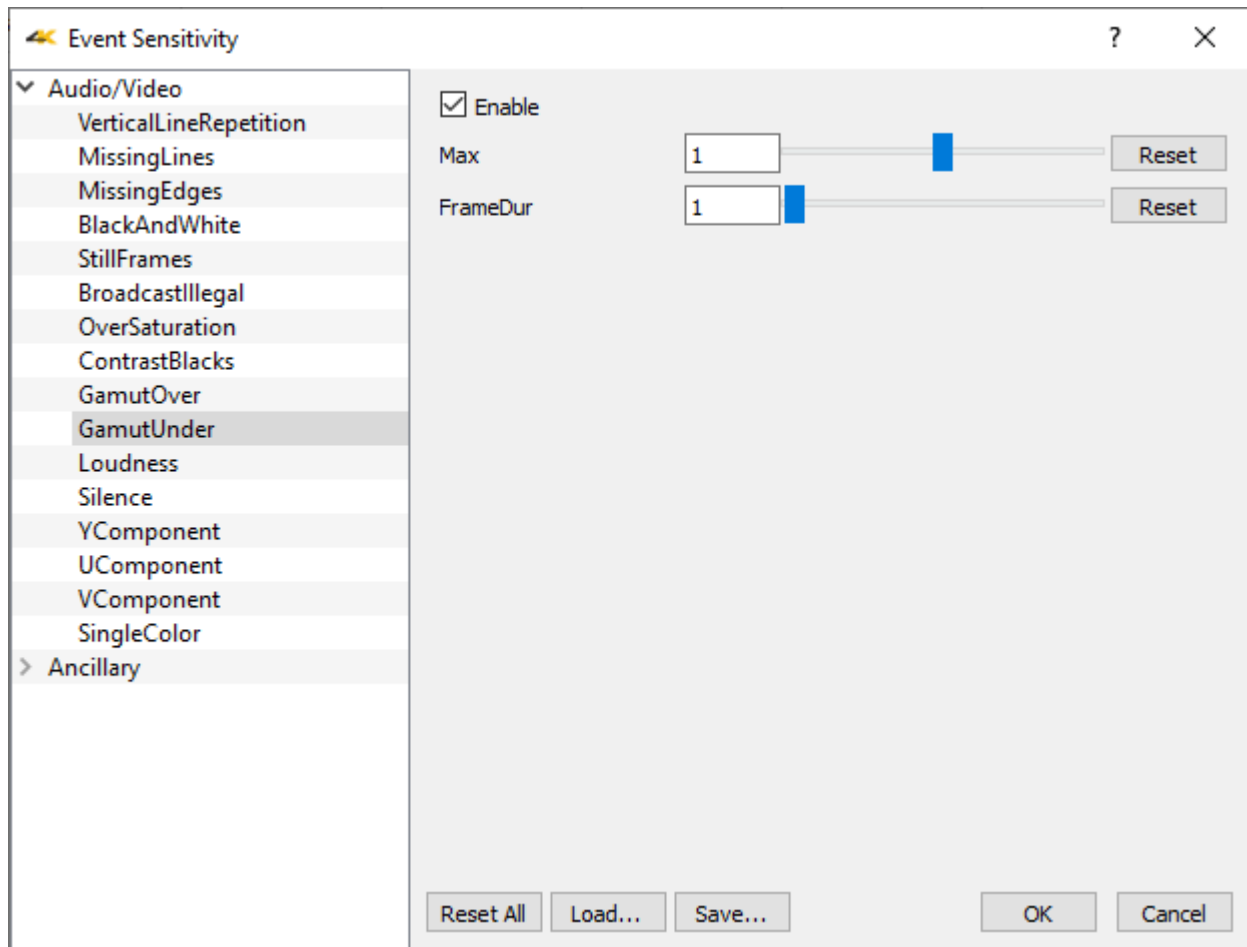

Enable checkbox – click to enable checking for gamut under, and adjust any relevant settings.

Max - default 1.0

FrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Loudness

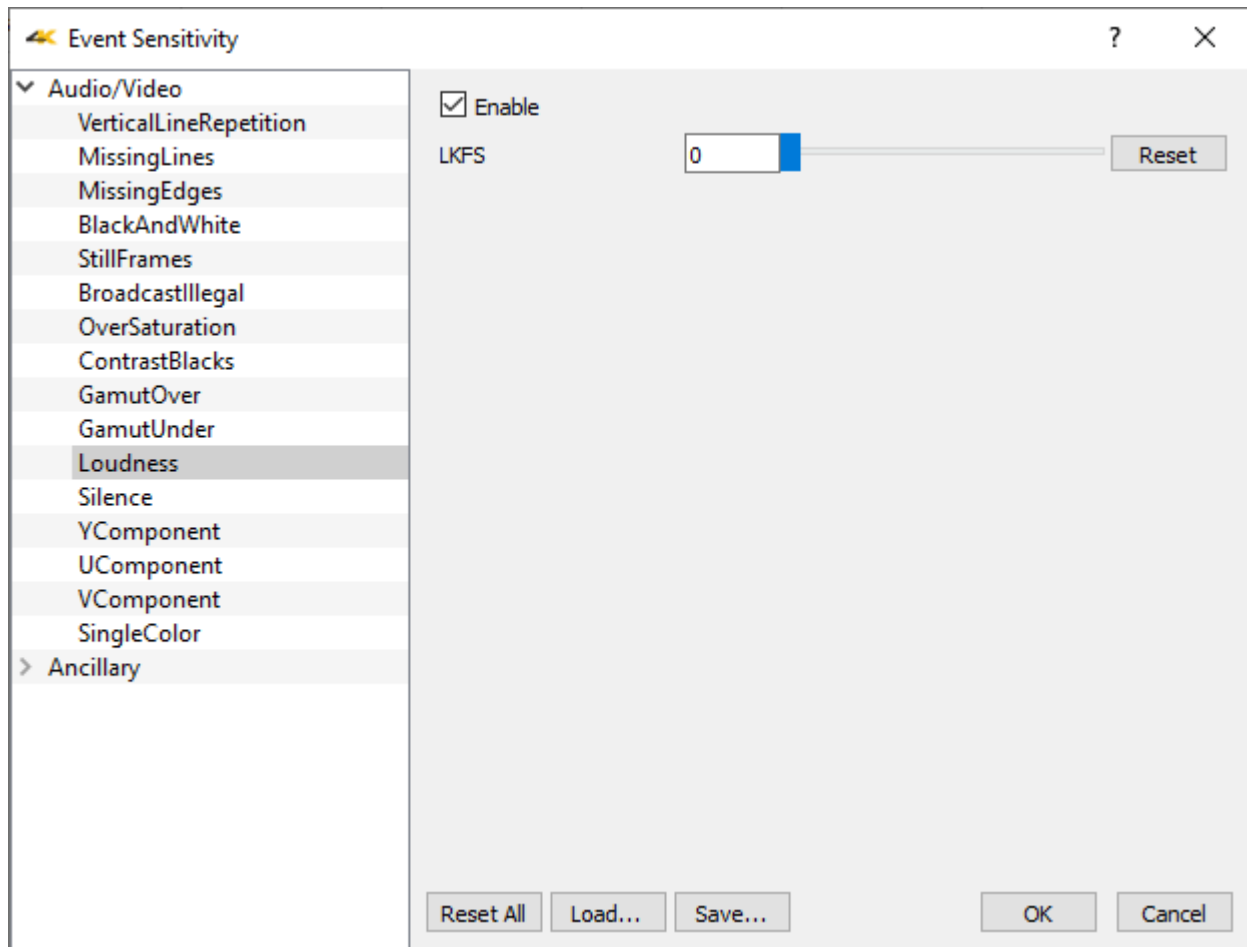

Enable checkbox – click to enable checking for loudness, and adjust any relevant settings.

LKFS - default 0

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Silence

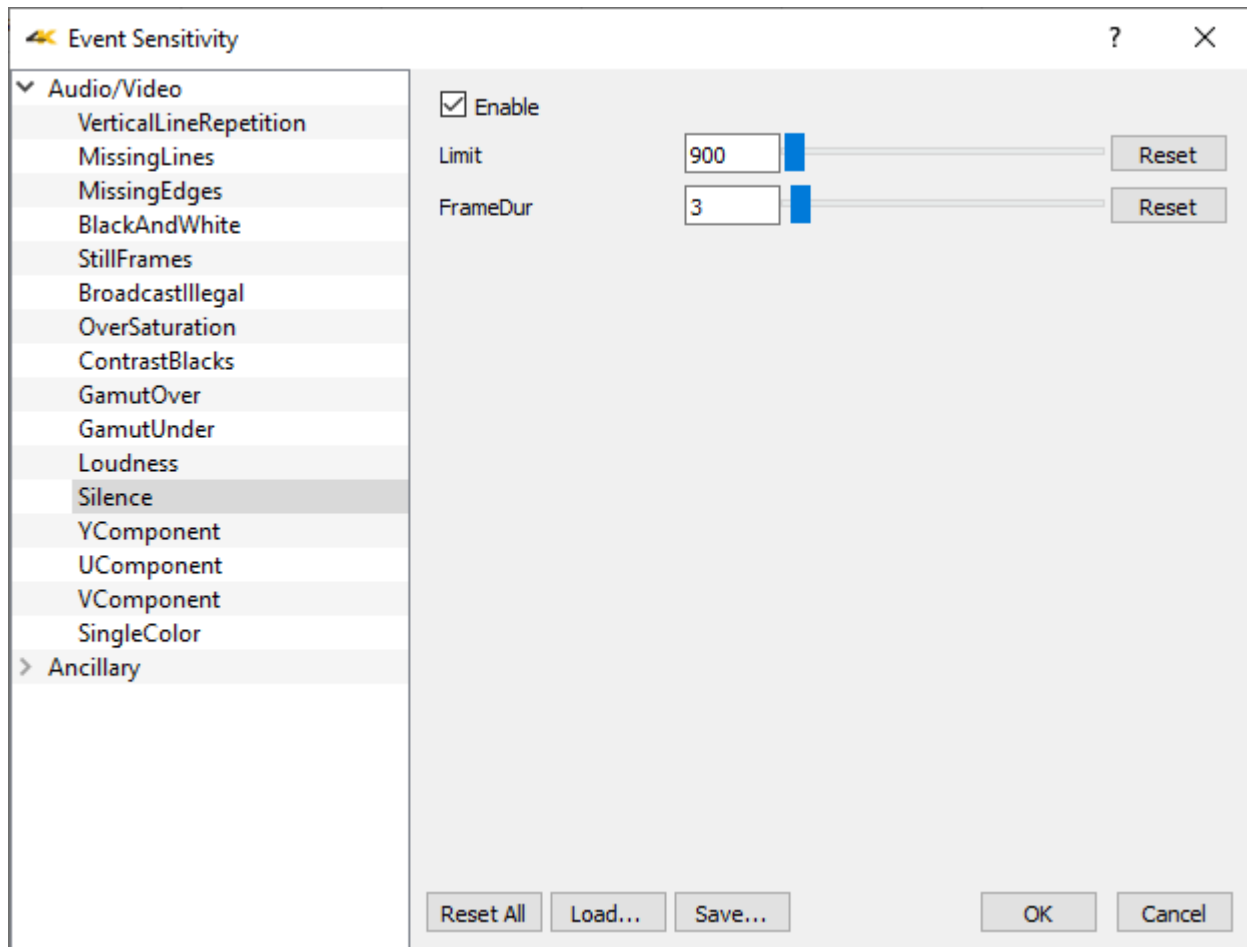

Enable checkbox – click to enable checking for silence and adjust any relevant settings.

LKFS - default 0

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Y Component

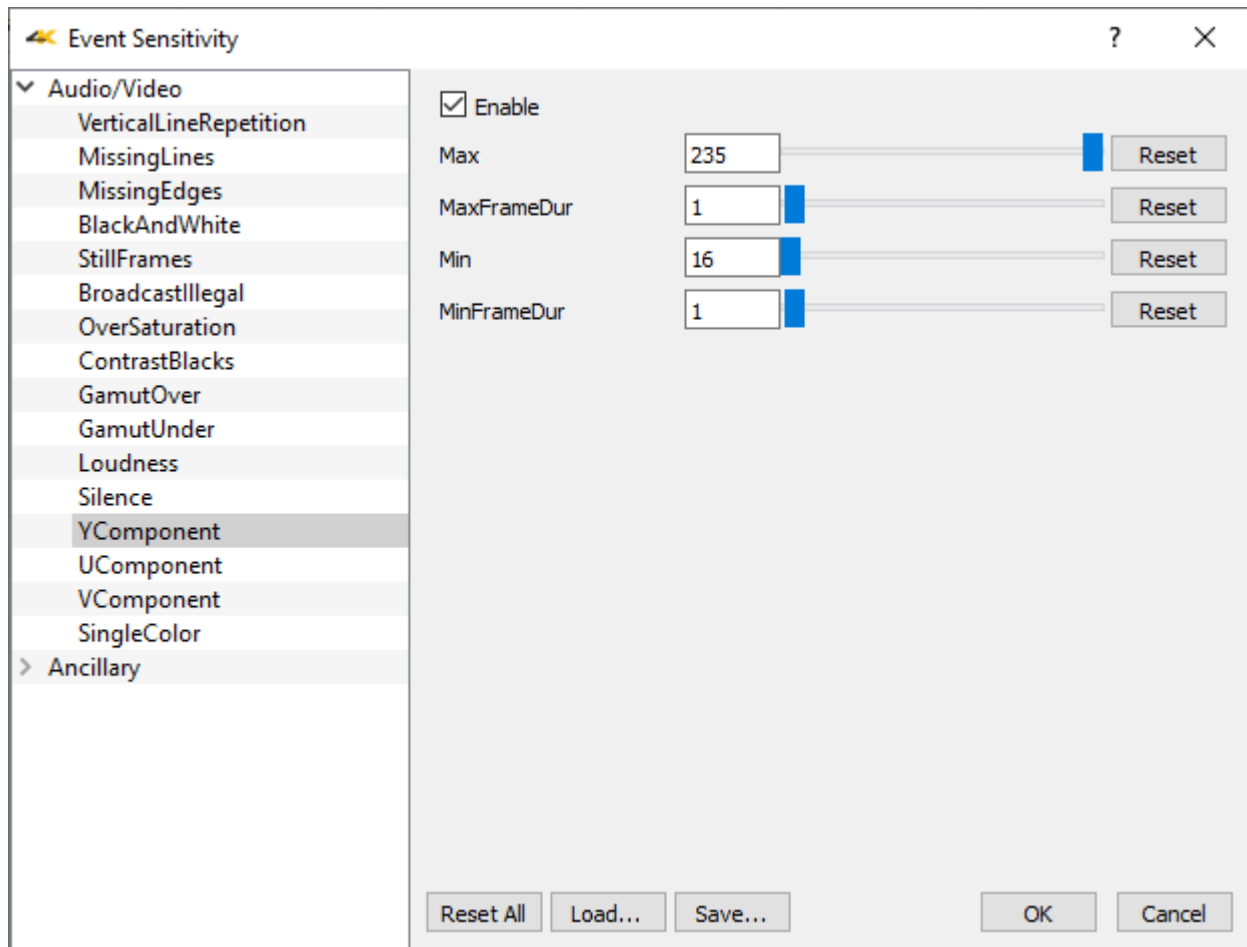

Enable checkbox – click to enable checking the Y component and adjust any relevant settings.

Max - default 235

MaxFrameDur - default 1

Min - default 16

MinFrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

U Component

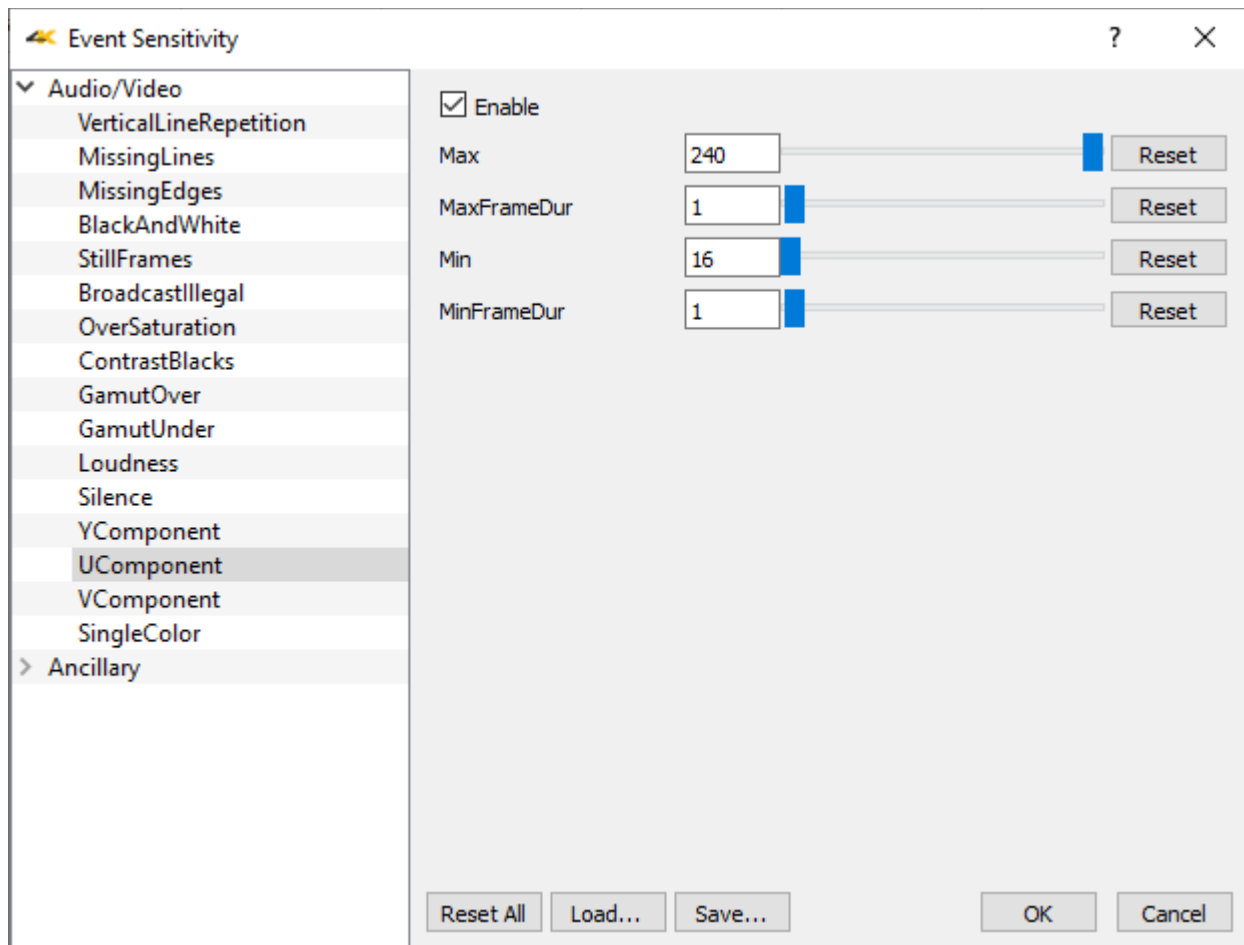

Enable checkbox – click to enable checking the U component and adjust any relevant settings.

Max - default 240

MaxFrameDur - default 1

Min - default 16

MinFrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

V Component

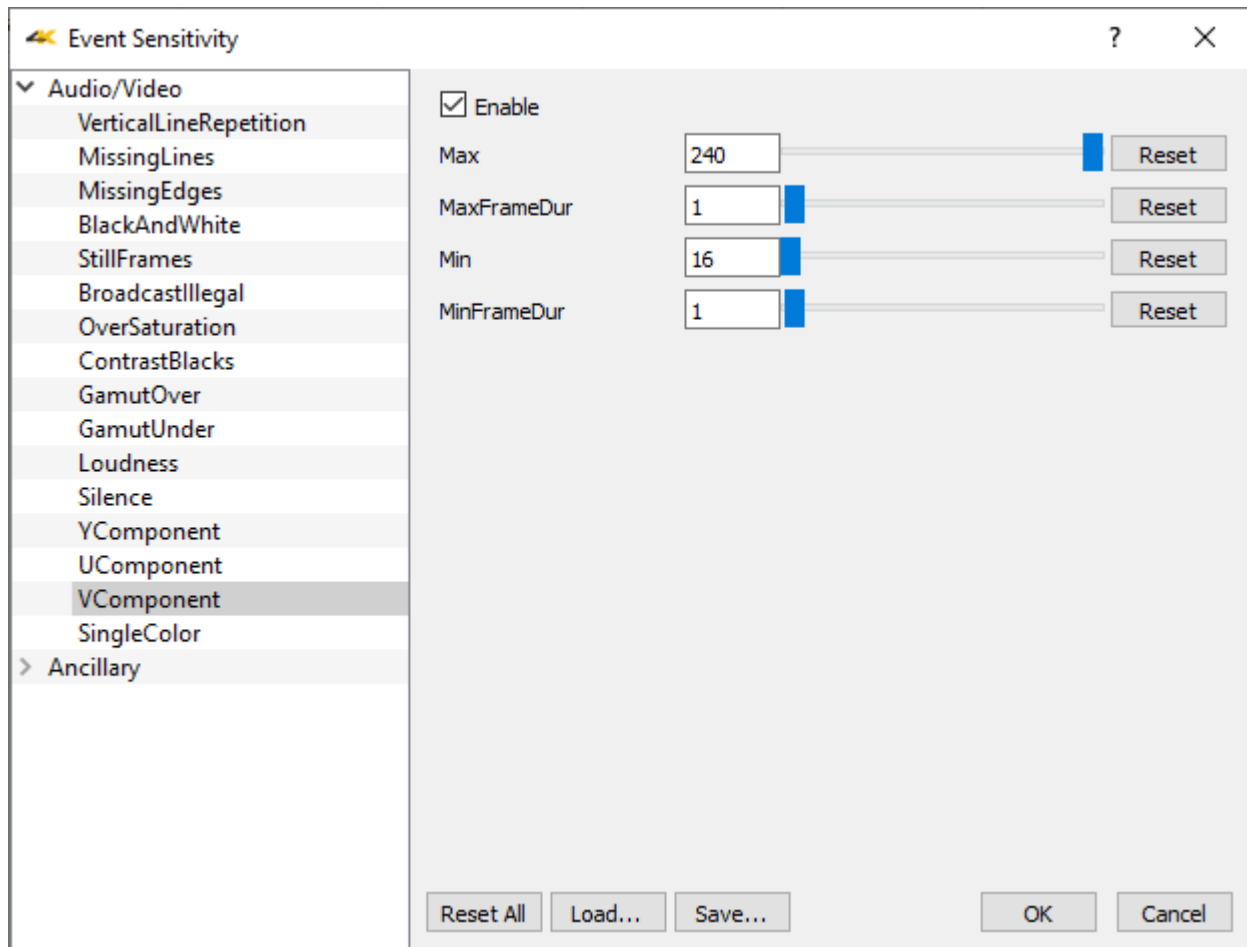

Enable checkbox – click to enable checking the V component and adjust any relevant settings.

Max - default 240

MaxFrameDur - default 1

Min - default 16

MinFrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.


Load – opens a browser so you can load a saved event sensitivity file.

Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Single Color

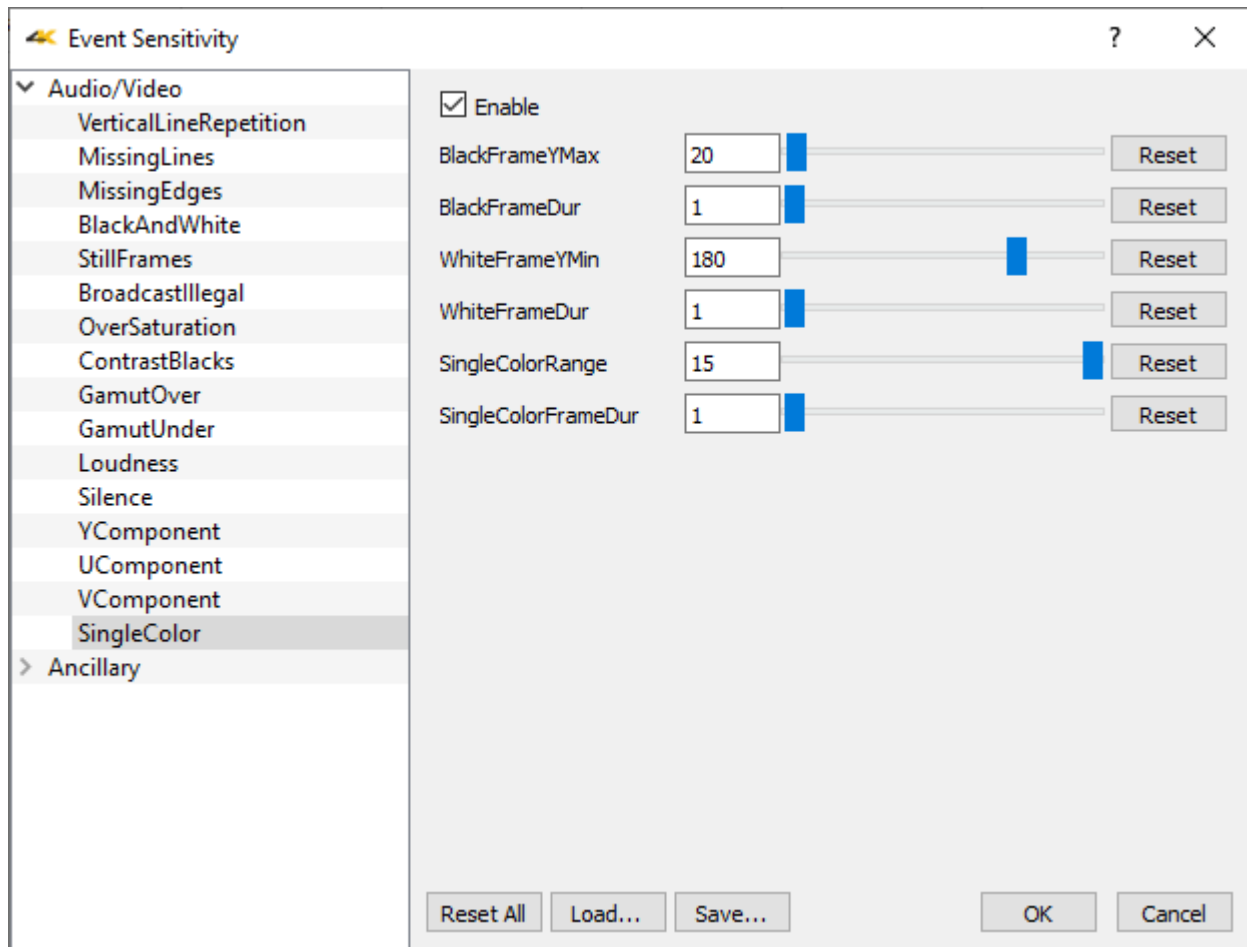

Enable checkbox – click to enable checking for single color and adjust any relevant settings.

Max - default

BlackFrameYMax - default 20

BlackFrameDur - default 1

WhiteFrameYMin - default 180

WhiteFrameDur - default 1

SingleColorRange - default 15

SingleColorFrameDur - default 1

Reset All – clicking Reset All returns all values to their default settings.

Load – opens a browser so you can load a saved event sensitivity file.


Save – opens a standard Save As window, so you can save the event sensitivity values to a file for later retrieval.

OK – press OK to enable any changes you have made, and close the Event Sensitivity window.

Cancel – press Cancel to exit the Event Sensitivity window without enabling any of the changes you have made.

Ancillary Data Streams Sensitivity

Each type of ancillary data stream can be set to produce an entry in the error log based on a number of settings. The default value is displayed, and the user can adjust a parameter by using the sliders provided. A reset button is available for each individual setting.

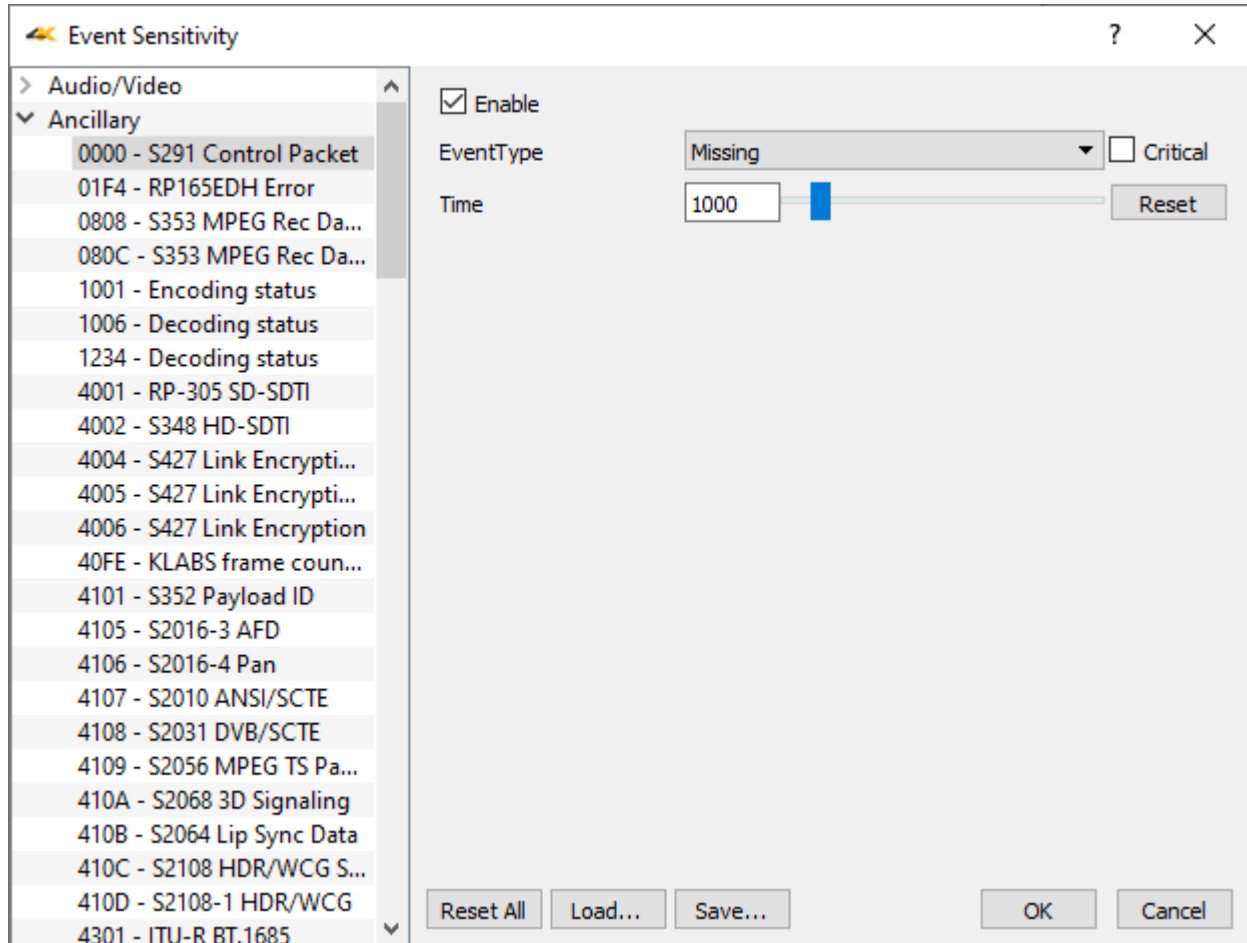

For each data type, the following controls are available:

- Enable** checkbox – click to enable checking for ancillary data and adjust any relevant settings.
- Critical** checkbox – check to indicate that any events in the data stream that trigger a warning are critical.
- EventType** pulldown menu – specifies the condition which will trigger an event in the event log for the selected ancillary data type. Conditions include:
 - Missing** – the expected data is not present
 - Present** – the data is present
 - Appeared** – the data is in this frame and was not in the previous frame
 - Disappeared** – the data was present in the previous frame and is not in the current frame
 - Changed** – the data has undergone a change
 - Occurred** – the data occurred in this frame
- Time** – default 1000

Supported Data Stream Types

- 0000 – **S291 Control Packet** [RTP Payload format for SMPTE Ancillary data, as defined by SMPTE ST 291-1]
- 01F4 – **RP165EDH Error** [Error checking using the RP 165 EDH packets in SD-SDI mode]
- 0808 – **S353 MPEG Rec Data V** [SMPTE 291M defined MPEG recording data in VANC]
- 080C – **S353 MPEG Rec Data H** [SMPTE 291M defined MPEG recording data in HANC]
- 1001 – **Encoding status** [current encoding status]
- 1006 – **Decoding status** [current decoding status]
- 1234 – **Decoding status** [current decoding status]
- 4001 – **RP-305 SD-SDTI** [Standard Definition Serial Data Transport Interface]
- 4002 – **S348 HD-SDTI** [SMPTE 291M defined HD-SDTI Transport in active frame space]
- 4004 – **S427 Link Encryption 1** [Link Encryption for 1.5Gb/s1 Serial Digital Interface type 1]
- 4005 – **S427 Link Encryption 2** [Link Encryption for 1.5Gb/s1 Serial Digital Interface type 2]
- 4006 – **S427 Link Encryption** [Link Encryption for 1.5Gb/s1 Serial Digital Interface type 0]
- 40FE – **KLABS frame counter** [KLABS frame counter packets]
- 4101 – **S352 Payload ID** [SMPTE ST 352 Video Payload Identification Codes for Serial Digital Interfaces]
- 4105 – **S2016-3 AFD** [AFD for baseband SDI carriage as standard SMPTE 2016-1-2007, "Format for Active Format Description and Bar Data"]
- 4106 – **S2016-4 Pan** [SMPTE 2016-4 Vertical Ancillary Data Mapping of Pan-Scan Information]
- 4107 – **S2010 ANSI/SCTE** [ANSI/SCTE 104 messages, a mechanism for signaling advertising avails, program splice points, and DRM signals]
- 4108 – **S2031 DVB/SCTE** [SMPTE S2031 DVB/SCTE vertical blanking interval data]
- 4109 – **S2056 MPEG TS Packets** [per SMPTE ST 2056, a standardized wrapper for the carriage of low bit rate MPEG-2 TS packets, in the 10-bit VANC space of a standard definition or high definition serial digital link in accordance with SMPTE ST 291]
- 410A – **S2068 3D Signaling** [per SMPTE 2068, Stereoscopic 3D frame compatible packing and signaling for HDTV]
- 410B – **S2064 Lip Sync Data** [the real-time transport of audio and video fingerprints used for audio to video timing measurement. These fingerprints and their containerization are defined in SMPTE ST 2064-1]
- 410C – **S2108 HDR/WCG Settings** [per SMPTE ST 2108-1:2018, Settings for HDR/WCG Metadata Ancillary Data Packet]
- 410D – **S2108-1 HDR/WCG** [per SMPTE ST 2108-1:2018, HDR/WCG Metadata Ancillary Data Packets]
- 4301 – **ITU-R BT.1685** [Structure of inter-station control data conveyed by ancillary data packets]
- 4302 – **OP47 Caption SDP** [OP-47 Subtitling Distribution Packet - storage and distribution of Teletext data such as closed captions/subtitles in the vertical ancillary data space of the 10 bit serial HD-SDI signal complying with Recommendation ITU-R BT.1120-7]
- 4303 – **OP47 VBI/WST MP** [OP-47 vertical blanking interval World System Teletext subtitling for HD]
- 4304 – **ARIB-TR-B29 AV Mon** [Association of Radio Industries and Businesses - Metadata to monitor Errors of Video and Audio Signals on a Broadcasting Chain]
- 4305 – **RDD18 Camera Params** [SMPTE RDD 18:2021 - Acquisition Metadata Sets for Video Camera Parameters]
- 4313 – **SMPTE 346M** [time division multiplexing of various standard-definition digital video and generic 8-bit data signals over high-definition serial digital interfaces]
- 4404 – **RP214V KLV Metadata** [Packing KLV Encoded Metadata and Data Essence into

- SMPTE 291M VANC Ancillary Data Packets]
- 4414 – **RP214H KLV Metadata** [Packing KLV Encoded Metadata and Data Essence into SMPTE 291M HANC Ancillary Data Packets]
- 4444 – **RP223 UMID/ID** [per SMPTE RP 223, Packing UMID and Program Identification Label Data into SMPTE 291M Ancillary Data Packets]
- 4501 – **S2020 Audio-1** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 1]
- 4502 – **S2020 Audio-2** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 2]
- 4503 – **S2020 Audio-3** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 3]
- 4504 – **S2020 Audio-4** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 4]
- 4505 – **S2020 Audio-5** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 5]
- 4506 – **S2020 Audio-6** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 6]
- 4507 – **S2020 Audio-7** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 7]
- 4508 – **S2020 Audio-8** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 8]
- 4509 – **S2020 Audio-9** [structure and timing requirements of an asynchronous serial audio metadata stream with respect to an associated video signal – channel 9]
- 4601 – **S2051 Two Frame** [SMPTE ST 2015:2014 Two-Frame Marker for progressive HDTV video formats at 48/1.001(47.95)-Hz, 48-Hz, 50-Hz, 60/1.001(59.94)-Hz, and 60-Hz frame rates]
- 5001 – **RDD8 WSS** [SMPTE RDD8 wide screen signaling for storage and distribution of subtitles]
- 5101 – **RP215 Film Codes** [Vertical Ancillary Data Mapping of Film Transfer and Video Production Information]
- 5102 – **RDD18 Metadata** [per SMPTE RDD 18:2021, Acquisition Metadata Sets for Video Camera Parameters]
- 5153 – **BMD Dev Control** [Blackmagic SDI PTZ camera control protocol]
- 524D – **Rec start/stop** [record start or record stop]
- 5701 – **CBS ID Info** [Cell Broadcast Service to relay messages related to public warning]
- 5FCF – **TR-B18 Color** [Association of Radio Industries and Businesses - per ARIB technical report TR-B18, Color Frame Information for Component Interface of 525/60 and 1125/60 Television Systems]
- 5FDC – **B37 Mob Captions** [Association of Radio Industries and Businesses - per ARIB STD-B37, structure and operation of closed caption conveyed by ancillary data packets]
- 5FDD – **B37 Ana Captions** [Association of Radio Industries and Businesses - per ARIB STD-B37, structure and operation of closed caption conveyed by ancillary data packets]
- 5FDE – **B37 SD Captions** [Association of Radio Industries and Businesses - per ARIB STD-B37, structure and operation of closed caption conveyed by ancillary data packets]
- 5FDF – **B37 HD Captions** [Association of Radio Industries and Businesses - per ARIB STD-B37, structure and operation of closed caption conveyed by ancillary data packets]
- 5FE0 – **ARIB TR-B.22 ANC** [Association of Radio Industries and Businesses - per ARIB TR-B.22, Operational Guidelines for Transport of the Ancillary Data for Television Program Contribution]
- 5FFA – **ARIB TR-B.23(1)** [Association of Radio Industries and Businesses - per ARIB TR-B.23, Operational Guidelines for Ancillary Data Used to Convey Inter-Stationary Data]
- 5FFB – **ARIB TR-B.23(2)** [Association of Radio Industries and Businesses - per ARIB TR-

- B.23, Operational Guidelines for Ancillary Data Used to Convey Inter-Stationary Data]
- 5FFC – **ARIB TR-B.23(1)** [Association of Radio Industries and Businesses - per ARIB TR-B.23, Operational Guidelines for Ancillary Data Used to Convey Inter-Stationary Data]
 - 5FFD – **ARIB B.35ProgEx** [Association of Radio Industries and Businesses - per ARIB STD-B35, Data Program Exchange Specification for Digital Broadcasting]
 - 5FFE – **ARIB B.39** [Association of Radio Industries and Businesses - per ARIB STD-B39, Structure of Inter-Stationary Control Data Conveyed by Ancillary Data Packets]
 - 5FFF – **ARIB B.15** [Association of Radio Industries and Businesses - per ARIB TR-B15, specifies the function of receivers and the operational guidelines in the broadcasting station of the BS and CS digital broadcasting]
 - 6060 – **S12M-2 Anc TCode** [per SMPTE 12M-2, standards to label individual frames of video or film with a timecode]
 - 6061 – **S12M-3 HFR-TCode** [per SMPTE 12M-3, standards to label individual frames of high frame rate video or film with a timecode]
 - 6062 – **Generic Time Label** [generic time of day stamp]
 - 6101 – **EIA-708 Caption** [HD captioning]
 - 6102 – **EIA-608 Caption** [SD captioning]
 - 6103 – **SMPTE334 WST Packet** [per SMPTE ST 334-1:2015, Vertical Ancillary Data Mapping of Caption Data and Other Related Data]
 - 6104 – **SMPTE334 SDE** [per SMPTE ST 334-1:2015, Vertical Ancillary Data Mapping of Caption Data and Other Related Data]
 - 6105 – **SMPTE334 ARIB Caption HD** [per SMPTE ST 334-1:2015, Vertical Ancillary Data Mapping of Caption Data and Other Related Data]
 - 6106 – **SMPTE334 ARIB Caption SD** [per SMPTE ST 334-1:2015, Vertical Ancillary Data Mapping of Caption Data and Other Related Data]
 - 6107 – **SMPTE334 ARIB Caption Ana** [per SMPTE ST 334-1:2015, Vertical Ancillary Data Mapping of Caption Data and Other Related Data]
 - 6201 – **RP207 Program** [per SMPTE RP 207, Transport of Program Description Data in Ancillary Data Packets]
 - 6202 – **S334-1 Data BCast** [per SMPTE 334-1-2007, closed caption data from Ancillary data packets]
 - 6203 – **RP208 VBI Data** [per SMPTE RP 208-2002, Transport of VBI Packet Data in Ancillary Data Packets]
 - 6264 – **RP196 LTC Timecode** [per SMPTE RP 196, Transmission of LTC Data as HANC Packets in Serial Digital Television Interfaces]
 - 647F – **RP196 VITC Timecode** [per SMPTE RP 196, Transmission of VITC Data as HANC Packets in Serial Digital Television Interfaces]
 - 8000 – **Mark Deleted** [when a mark has been deleted]
 - 8400 – **End Packet** [signals the end of a packet]
 - 8800 – **Start Packet** [signals the start of a packet]
 - A000 – **HD Aud Ctrl 8** [HD audio control 8]
 - A100 – **HD Aud Ctrl 7** [HD audio control 7]
 - A200 – **HD Aud Ctrl 6** [HD audio control 6]
 - A300 – **HD Aud Ctrl 5** [HD audio control 5]
 - A400 – **HD Aud Data 8** [HD audio data 8]
 - A500 – **HD Aud Data 7** [HD audio data 7]
 - A600 – **HD Aud Data 6** [HD audio data 6]
 - A700 – **HD Aud Data 5** [HD audio data 5]
 - D200 – **QA F1 Test** [F1 quality assurance metric]
 - D300 – **QA F2 Test** [F2 quality assurance metric]
 - E000 – **HD Aud Ctrl 4** [HD audio control 4]

E100 – **HD Aud Ctrl 3** [HD audio control 3]
E200 – **HD Aud Ctrl 2** [HD audio control 2]
E300 – **HD Aud Ctrl 1** [HD audio control 1]
E400 – **HD Aud Data 4** [HD audio data 4]
E500 – **HD Aud Data 3** [HD audio data 3]
E600 – **HD Aud Data 2** [HD audio data 2]
E700 – **HD Aud Data 1** [HD audio data 1]
EC00 – **SD Aud Ctrl 4** [SD audio control 4]
ED00 – **SD Aud Ctrl 3** [SD audio control 3]
EE00 – **SD Aud Ctrl 2** [SD audio control 2]
EF00 – **Aud Ctrl 1** [SD audio control 1]
F400 – **Error Detect** [an error has been detected]
F800 – **SD Aud Ext Data 4** [SD audio external data 4]
F900 – **SD Aud Data 4** [SD audio data 4]
FA00 – **SD Aud Ext Data 3** [SD audio external data 3]
FB00 – **SD Aud Data 3** [SD audio data 3]
FC00 – **SD Aud Ext Data 2** [SD audio external data 2]
FD00 – **SD Aud Data 2** [SD audio data 2]
FE00 – **SD Aud Ext Data 1** [SD audio external data 1]
FF00 – **SD Aud Data 1** [SD audio data 1]

Area Select



Pressing the Area Select button allows the user to select an area of the signal and view it through any of the scopes. With the button pressed (it will be outlined), click to drag a rectangle across the picture display.



The rest of the screen will be darkened, and the selected area will be highlighted. In the above example, the selected area of the color chart features orange, red, and magenta color chips. With the H/S scope selected, only these areas of the spectrum are seen by the scope.

Note: Vectorscope, Chromaticity, and Histogram displays will respect the boundaries of the rectangle you have selected.

However, the Waveform Monitors (YCbCr and RGB) only respect the top and bottom, and have no way to constrain the left and right boundaries. So, when you select an area in a Waveform monitor, it will 'see' a band across the screen bounded by the top and bottom of the rectangle you have drawn.

License



Pressing the license button opens the licensing dialog. Here is a system that is licensed for a long term but temporary license.

Drastic Technologies License Application - v8.0.0.0

332 Trial days remain. Licensed for:

- Drastic DDR Software
- MediaReactor Software
- MediaNXS HD
- FlowCaster
- VideoQC
- VideoQCWorkStation
- Preview -PreviewPro -4KScope -SDIScope
- CC -4K -Camera Raw -Device Control
- Cineform -AVCi -DNxHD -JPEG-2000
- NXC -SCP -BBReplay -FBReplay

User Name: corey

Email: corey.cousineau@gmail.com


Site Code: J5QzUzNyxOZXR3b3JrVmlkZW9BbmFseXplciA6IFdpbjY0

Site Key:


You can check the status of your license here. If the system is unlicensed, you can get a license by following the detailed instructions here:

<https://www.drastic.tv/support-59/licensing>

Audio Routing




Pressing the audio routing button opens the audio routing window. This window provides routing for up to 32 channels. The pulldown menu at the top right of the window lets the user select between 8, 16, 24, or 32 channel setups.

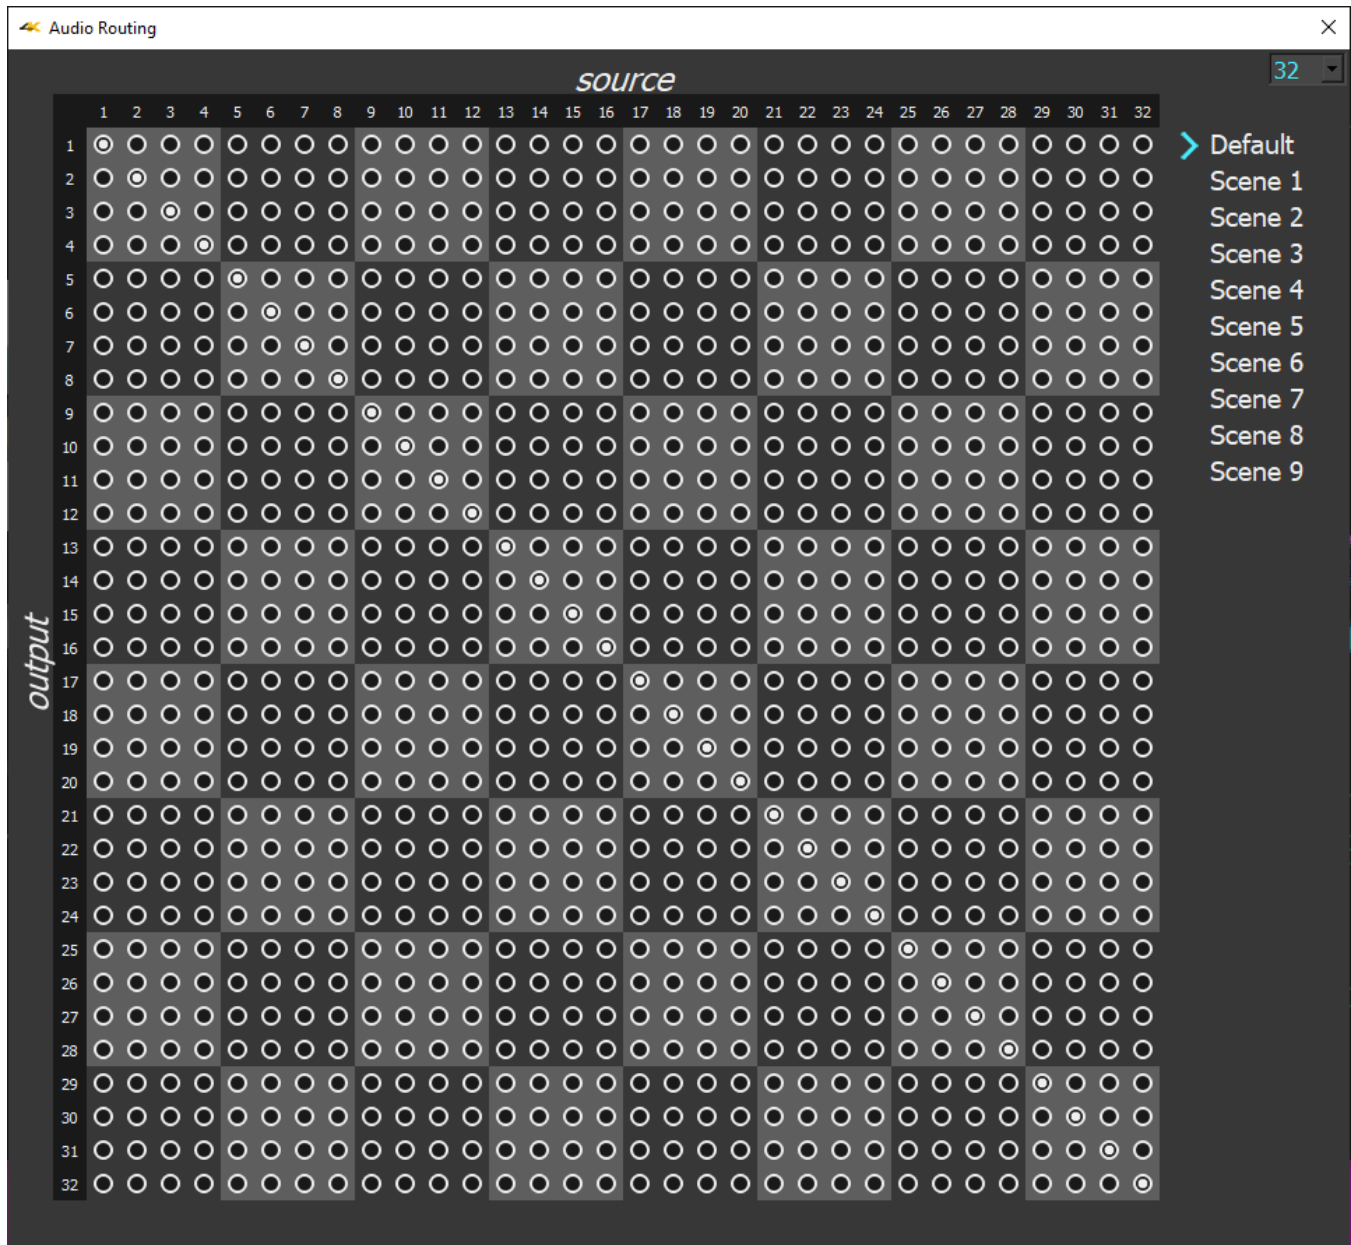

The audio routing allows the user to route the output of their audio to whichever channel they like. This feature is hardware-dependent. The above image shows a system set to 32 channels, with no routing applied.

The audio sources come in through the top, where it says **Source**. The outputs go out through the left side, where it says **Output**.

Here is an audio routing scheme where channels 1 and 2 are sent out through channels 7 and 8, and channels 7 and 8 are sent out via channels 1 and 2.

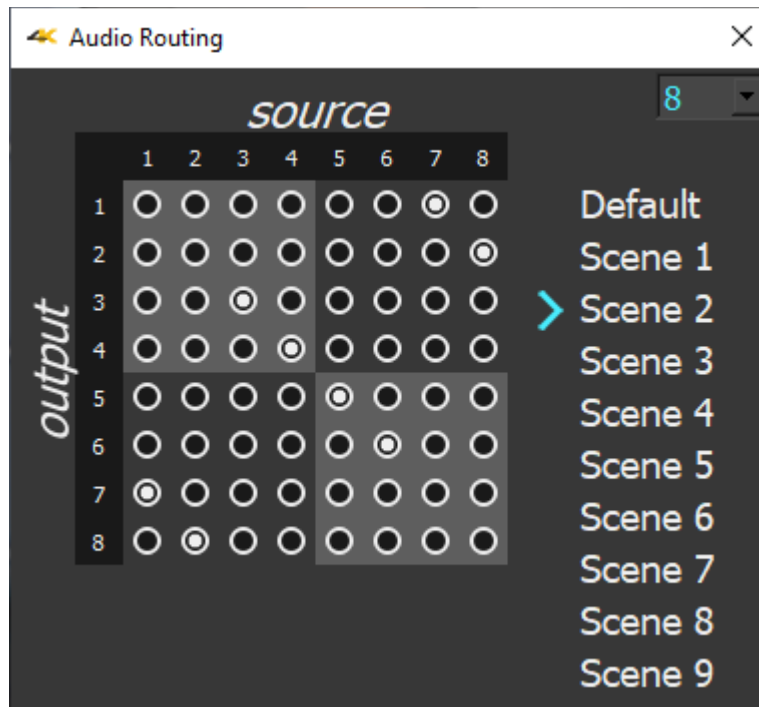

If **Default** is selected, no changes can be made, and audio routing is off. The user needs to select one of the 'scenes' to make changes. Each **Scene** will remember what you set it to last, and can be recalled as needed.

Note: most hardware (video boards and such) is limited to 16 channel audio. Certain IP stream inputs may have as many as 32 channels of audio.

Setup

Install the Software

Install **2110Scope** software on the system. Regardless of the delivery method, the software will be available at some level as an (executable) installable file. Double-click on the file, or right click and select **Open** from the context menu. Follow the prompts to set where the software should be installed and make other installation-specific decisions.

To take full advantage of the hardware based features of **2110Scope**, the system should contain one of the supported AJA, Blackmagic, Matrox or Bluefish444 boards. Here are some recommended environments:

For **SMPTE 2110/2022**

[Matrox](#): ST 2110 Network Adapters

[AJA](#): Kona IP

[Mellanox NVIDIA Bluefield-2](#) or [Connect-X 6](#): (requires Rivermax license)

For **8K/SUHD/K/QHS/HD/SD**

[AJA](#): KONA 5G

There are also a number of low cost alternatives for various SD and HD workflows. The board's manufacturers will have the most up to date information for system specifications and recommended drivers.

- [Bluefish444](#): Epoch Supernova, Epoch Neutron, KRONOS
- [AJA](#): KONA LHe/plus, KONA LHi, KONA 3G, KONA 4, KONA IP, KONA 5, KONA HDMI, Io-XT, Io-4K, OEM2K, Corvid Series, U-TAP
- [Blackmagic](#) (version 11/12 drivers required): UltraStudio, DeckLink, Intensity Pro, Intensity, Mini Recorder, UltraScope, HyperDeck, Ursa, BMPCC
- [NewTek](#): NDI®
- [Inogeni](#): 4K, 3G, DVI, VGA/CVBS
- [Magewell](#): HDMI and SDI USB-3 devices
- [Logitech](#): HDMI Screen Share
- [Elgato](#): Game device capture devices
- [Mokose](#): HDMI/SDI USB-3
- [Epiphan](#): AV.io HDMI/SDI/4K
- [Digitnow](#): HDMI USB Capture
- [Rybozen](#): HDMI USB Capture
- [Microsoft](#): USB Cameras
- [UVC](#): Most UVC (USB Video Class) compliant video devices


You can view the supported hardware page on our website for the latest information:

<https://www.drastic.tv/support-59/supporttipstechnical/81-supported-audio-video-hardware>

License the Software

How Do I Remove the Watermarks?

If you run Drastic software without a license, many of the features will be unavailable. Also, there will be watermarks you cannot remove (image below), 10 second media duration, length of run limitations, no hardware support, nag screen, auto-shutoff, and other significant limitations. To remove these limitations, you will need a valid license.

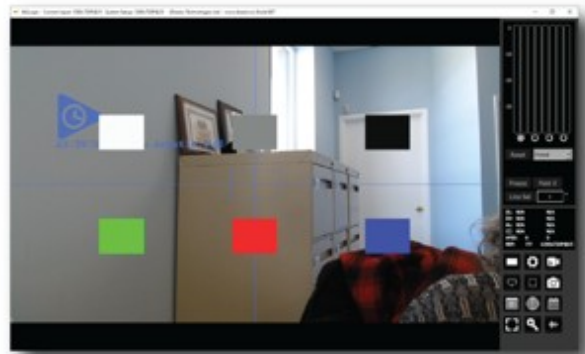

Sample watermarks

In order to license 2110Scope, open 2110Scope and navigate to the Settings ("Gear" icon at the bottom right of the application). Next click on the "License" button at the bottom of the Settings menu box and then follow the steps at the following location: <http://license.drastictech.com/>

Run the Software

Run the software. If the default installation path is used, you can open it at: **Start|Programs|Drastic Network Video Analyzer|Network Video Analyzer**. The software will then need to be set up.

Setup Window


Confirm that the signal you wish to monitor is connected to the correct input(s) of the video board. Click on the **Setup** button to confirm or adjust any settings for the type of signal format being used. Once the system is correctly set up, pressing the **Done** button closes the **Setup** window.

Color Space and HDR/HLG in 2110Scope

2110Scope supports 8, 10, and 12 bit color in both YCbCr 4:2:2 and RGB 4:4:4 modes. Correct measurement of signals require the correct setup.

Input Color - YCbCr (YUV) and RGB

Once the signal format is set, the next most important is the overall color format. 2110Scope supports YCbCr (broadcast) at 8 and 10 bits, and RGB (post production) at 8, 10 and 12 bit (depending on hardware). For most SDI and HDMI signals you will want to be in YCbCr 10 bit, as this is by far the most common format. Even if the signal source is 8 bit, it will still work in 10 bit and vice versa. If you are monitoring a high end post system (Nucoda, Assimilate, Autodesk, Resolve, etc) then the input may be a 4:4:4 RGB, also known as dual link, input. In this case, it will be either a 10 bit or 12 bit signal. As 10 bit will work for both 10 and 12 source, if the image is incorrect in 12 but correct in 10, then it is likely a 10 bit source. Correct measurement of signals require the correct setup of the bit depth, color format, primaries and transfer mode of the signal you are measuring within 2110Scope.

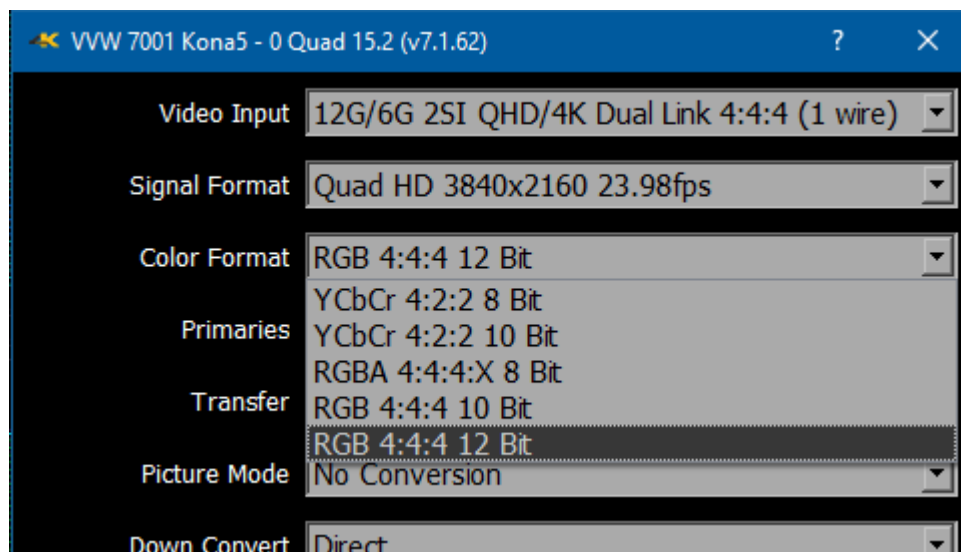


Primaries

2110Scope supports a wide variety of primaries. These describe the color space being used in terms of chrominance and saturation. As a general rule of thumb, the following are the standard primaries for various signal types:


- SD - CCIR 601
- HD - Rec 709
- QHD/4K - BT 2020 (but may be Rec 709)
- QHD/4K Post - P3/BT 2020/709 (but may be Full Range RGB)

While it is possible to mix these (e.g. send 4K with CCIR 601 primaries), it would be very uncommon. The trickiest part of this configuration can be the SMPTE Video Range vs Full Range RGB, when running in RGB modes. When producing RGB over SDI/HDMI/IP, the creation software can choose to make the 0% color (standard black) and the 100% color (standard white) to be the 0 value and 4095/1023 value. In this case it is using the 'Full' range of the RGB to describe the standard color range. As normal video has a range that allows brighter than white and darker than black, it is very

common to duplicate this functionality in RGB space, making standard black 64 and standard white 3760/940. This is known as SMPTE or Video Range. If the signal is using SMPTE or FULL, and 2110Scope is set to the opposite, then the graticules will not line up properly. These settings must match.

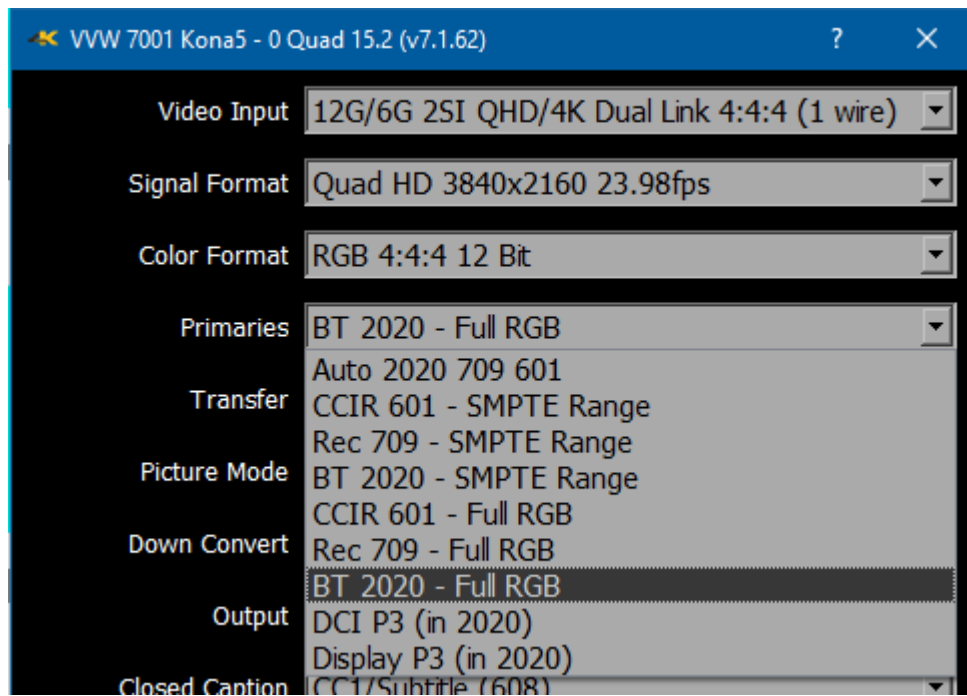


When using RGB Full, it is also important that the RGB Waveform Scope has its 'Full Scale' check box checked or unchecked to match. In some YCbCr cases it needs to be independent from the main primary selection.

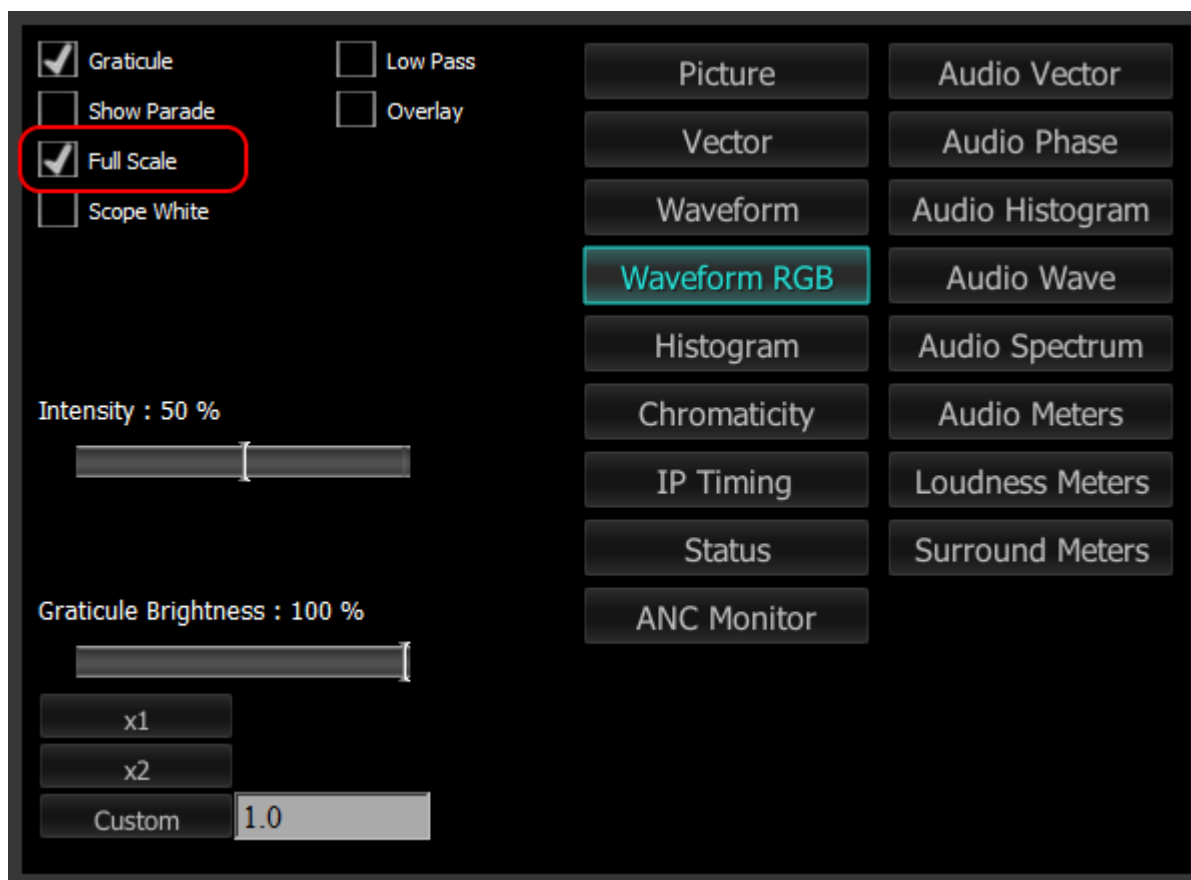

Transfer Characteristics

The transfer characteristics describe how the luminance, or brightness, is encoded in the signal. Unless you are measuring a high dynamic range (HDR) signal, this will be set to SDR. If the source is an HDR10, SMPTE 2084 or HDR10+ signal, this should be set to HDR10 (max 10,000 nits). If it is an HLG signal, it should be set to HLG (max 1000 nits).

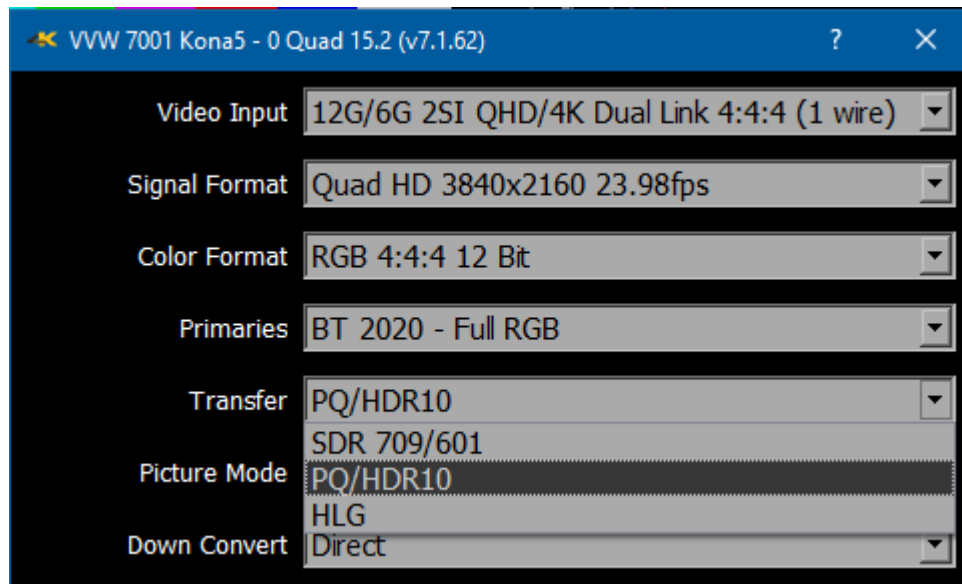

Turning Off Background Programs in Linux

If 2110Scope is likely to be run with mostly with no direct interaction from the keyboard, and if there is a screen saver/power saver/sleep mode/kernel update set to run, these background programs can cause 2110Scope to crash.

Here is how to prevent these from running under Linux.

Disable Hibernate, Sleep

```
sudo systemctl mask sleep.target suspend.target hibernate.target  
hybrid-sleep.target
```

```
sudo systemctl disable
```

```
systemd-hibernate.service  
systemd-hybrid-sleep.service  
systemd-suspend.service
```

Disable Kernel Updates

```
/etc/yum.conf  
add, at the bottom of the file exclude = kernel*
```

Set Default Kernel

```
/etc/default/grub  
GRUB_DEFAULT=saved  
GRUB_SAVEDEFAULT=true
```

Operations

2110Scope can be used to view an input signal through its range of waveform/vectorscope tools. Supported sources include:

- ST-2110 through a supported NIC
- IP streams including SRT, RIST, UDP, RTP, TR-01, TR-07
- AJA hardware
- Bluefish444 hardware
- Blackmagic hardware
- UltraScope hardware
- Matrox hardware
- USB/DirectShow/UVC devices
- NDI streams
- Desktop applications
- Adobe/Avid/OpenFX/Assimilate/AvVr3D ScopeDirect plugins

Once a capable system has been equipped with an install of 2110Scope, the user may connect a signal to the appropriate inputs and begin to use the software.

Multiple inputs may be connected to a switcher to compare and adjust any mismatched parameters of setup.

Use the **Setup** Window to confirm or adjust any settings for your video signal.

Use the **Scope Config** window to set the layout (number and arrangement of windows), and which window uses which scope.

At this point if all has been properly set up, the user should be able to view their signal through the appropriate scopes and other signal analysis tools.

Controlling 2110Scope

Zoom and Pan

HDRScope supports zooming the waveform monitors and vectorscope for a closer look at low saturation signals, or the luma elements of the waveform. The live picture can also be zoomed in or out, and panned with the mouse.

To zoom, place the mouse over the picture or scope, and roll the mouse wheel.

To pan the picture, click on it and drag it until the area of interest is visible.


To reset to normal zoom, right click the mouse.

Mouse Control

HDRScope features extended mouse controls. These include:

- <MouseWheel> - zoom in and out symmetrical
- <MouseWheel><Alt> - zoom X axis
- <MouseWheel><Ctrl> - zoom Y axis
- <RightClick> - reset zoom to view all
- <LeftClick>Drag - pan and scan the video image in the app
- <MiddleClick> - zoom 1:1
- <DoubleLeftClick> - enter and exit full screen mode
- <T> - enable or disable time code display in full screen

Making Marks/Guides (cross, line and box)

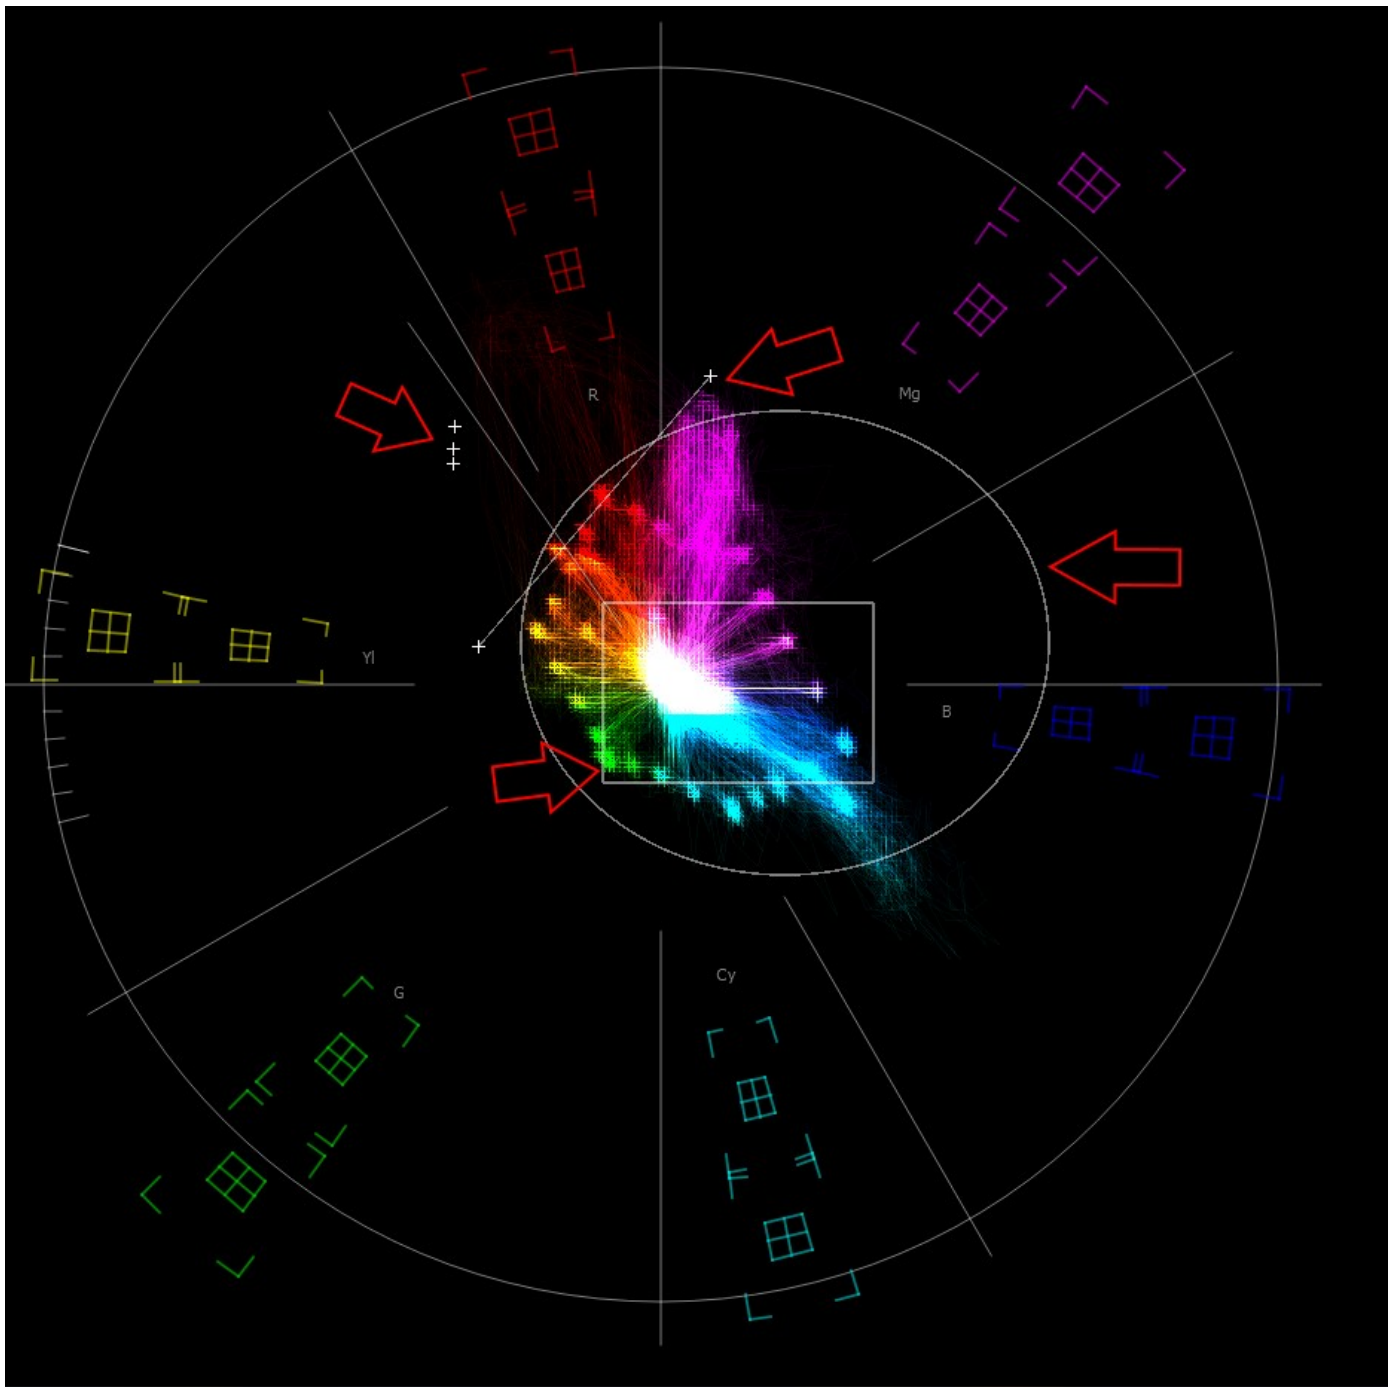

- <SHIFT><LeftClick> - Make a point/cross
- <SHIFT><ALT><LeftClick> - Undo last
- <SHIFT><CTRL><LeftClick> - Drag to make a line
- <SHIFT><CTRL><ALT><LeftClick> - Drag to make a box
- <CTRL><ALT><LeftClick> - Drag to make an ellipse
- <SHIFT><RightClick> - Clear all markers/guides

Frame Compare

HDRScope includes a signal compare feature that can be used to freeze a complete frame of video (two fields in interlaced), every second line (field) or at a 50/50 dissolve to compare two signals or cameras.

Once frozen, all the standard scopes are still available for setup and comparison. While a frame is frozen, the comparison mode and type of scope can be changed.

To access the frame compare features, press the **Frame Grab** button.

Command Line Parameters

The command line parameters can be used to allow 2110Scope to open automatically on startup in the mode and size required.

```
4KScope -f -m -s D H P R W V
-f Open in full screen mode
-m Open in maximized mode
-s Open in standard mode
D Show Data view on open
H Show Histogram view on open
P Show Picture view on open
R Show Waveform RGB on open
W Show Waveform on open
V Show Vectorscope on open
```

Set Layout

```
<ALT>-1 - set to single scope
<ALT>-2 - set to two scopes
<ALT>-4 - set to four scopes
<ALT>-6 - set to six scopes
```

Capture Image

The keyboard commands can be used to capture compressed and uncompressed frames directly from the incoming signal.

<CTRL>-0 Capture uncompressed frames as YUV (8 bit), v210 (10 bit), RGB10 (10 bit)

These are headerless frames, with only the raw data in them. They can be viewed or read in Drastic software like videoQC, DTMediaRead, Net-X-Code Server, etc. Please contact Drastic for the bit format of these files.

```
<CTRL>-1 Capture a full size JPG image (in 8 bit YCbCr only)
<CTRL>-2 Capture a 50% size JPG image (in 8 bit YCbCr only)
<CTRL>-3 Capture a 25% size JPG image (in 8 bit YCbCr only)
<CTRL>-4 Capture a 10% size JPG image (in 8 bit YCbCr only)
<CTRL>-9 Capture a 1% size JPG image (in 8 bit YCbCr only)
```

Other Features

D - Show the frozen frame
F - Toggle full screen
M - Show mix of live and frozen signal
S - Show the live signal
<CTRL><ALT><SHIFT> 0..9 Save a preset to Documents\4kScope\0..9.ini
<CTRL><ALT> 0..9 Load a preset from Documents\4kScope\0..9.ini
<CTRL><SHIFT>-D - set the interface dimming for HDR display screens
<CTRL>-F - Freeze and thaw
<ESC> Leave full screen mode
<SPACE> Freeze/Thaw data view

2110Scope Front Panel Controller

Use the layout menu in the 2110Scope GUI to set up the number of screens available to display scopes on.

Once the layout has been set, you can use the front panel controller to change which scope is displayed in which screen, and to set various overlays and methods of display for each scope.

Controls and Displays



Along the left are the LEDs which function as audio meters.

In the center the LCD screen displays various data and menus, and allows the user to navigate to specific scopes to choose which scopes are displayed, and to access settings for each scope.

At the right are the controls: The up/down arrows, the left/right arrows, the X, and the check mark. These provide various functions as described below.

Scope Selection

The LCD display will show all the scopes that have been set up. One of the scopes will have angle brackets around it to indicate it is selected.

You can change which scope is selected by using the up/down/left/right arrow keys.

Change Settings For the Scope

Once you have selected a scope, pressing the Check button will bring up the menus for that scope in that location. The menus let you set whether particular graticules are displayed, whether luma or parade views are displayed for particular scopes, and so on.

You can then go up/down to change the menu you are on and left/right to change the value of that menu.

Pressing the X button will bring you back to the main screen.

Change the Scope

Select the scope you want to change and press the X button; this will show the selection of available scopes and let you select a new scope for that spot.

To select a new scope to display, navigate to it and press the Check button. To cancel, press the X button. Please note, there are more scopes than will fit in one screen. To get the rest of the selections, go to the arrow on the right part of the screen and press the Check button. This will switch to the other screen of choices.

Audio Meters

The LEDs will light up as audio meters going from off to green to orange to red. The time code will be displayed at the bottom of the display, if on the main page.

The Scopes and Settings

The available scopes, overlays, settings options appear on the screen as the text in brackets (below), which are shortened to fit as fields in the LCD display.

Here are the available choices:

<pict >	LCD Picture View
<vect >	LCD Vectorscope
<wrgb >	LCD Waveform Monitor RGB
<wave >	LCD Waveform Monitor YCbCr
<gamut>	LCD Chromaticity Scope
<histo>	LCD Histogram
<timng >	LCD IP Timing
<stat >	LCD Status View
<avect>	LCD Audio Vectorscope
<aphas>	LCD Audio Phase
<ahist>	LCD Audio Histogram
<awave>	LCD Audio Waveform Monitor
<afreq>	LCD Audio Frequency
<meter>	LCD Audio Meters
<asprm>	LCD Audio Spectrum
<data >	LCD Data View
<grat >	LCD Graticule

The available overlays and methods of display for the selected scopes appear on the screen as the text in brackets (below), which are shortened to fit as fields in the LCD display.

Not all choices will be available for all scopes, and certain choices may be scope-specific:

<picture >	Picture Safe
<Action >	Action Safe Overlay
<Graphic >	Graphic Safe Overlay
<Pict Frame>	Picture Frame Overlay
<Active Rgn>	Active Region Overlay
<Title Safe>	Title Safe Overlay
<waveform>	Waveform Overlay
<Graticule >	Graticule Overlay
<100% Marks>	100% Marks Overlay
<75% Marks >	75% Marks Overlay
<AngleMarkr>	Angle Marker Overlay
<Skin Tone >	Skin Tone Overlay

<Show Parade>	Show Parade
<Scp White >	Display the scope using white only
<Scale Type>	Scale Type setting
<Full Scale>	Full Scale Setting
<Only Luma >	Display the scope using only luma
<Color >	Color
<Intensity >	Intensity setting
<vector >	Vectorscope Overlay
<Trngl 601 >	Triangle 601 Overlay
<Trngl 709 >	Triangle 709 Overlay
<Trngl 2020>	Triangle 2020 Overlay
<Trngl P3 >	Triangle P3 Overlay
<Invert >	Invert the black and white in the display
<Black >	Black setting
<Brightness>	Brightness setting
<	> Empty Space
<[>	Open Bracket
<]>	Close Bracket

Specific settings may be available in setting up certain scopes.

Action Safe
 Title Safe
 Picture Safe
 Graphic Safe
 Active Region
 8 Bit Processing On/Off
 LissajousXY On/Off
 Lissajous On/Off
 Polar On/Off
 Amp Linear On/Off
 Amp Logarithmic On/Off
 Scale Linear On/Off
 Scale Sqrt On/Off
 Scale Cbrt On/Off
 Scale Logarithmic On/Off
 Scale R Logarithmic On/Off
 Zoom In/Out
 Histogram Type 1
 Histogram Type 2
 Wave MV Scope
 Graticule On/Off
 Lines On/Off
 Marks 100% On/Off
 Marks 75% On/Off
 Angle Marker On/Off
 Skin Tone Marker On/Off
 Drastic Luma Stick On/Off
 Chromaticity/Gamut Scope On/Off
 709
 2020
 P3
 Invert Chromaticity Display Black/White

- Chromaticity Black Only
- Intensity Setting
- Quality Setting
- Brightness Setting
- Waveform Parade Display
- Waveform White Only Display
- Illegal Marker On/Off
- Luma Only Display
- RGB Histogram Display
- HSV Histogram Display
- Spectra Histogram Display
- Overlap Histogram Display
- Color Histogram Display
- ST2084 Display
- Full Scale Display
- Intensity Setting
- Quality Setting
- Brightness Setting
- Select Audio Pair

Adding Picture Scope

- Add Picture Scope
 - Action Safe Overlay
 - Graphics Overlay
 - Picture Safe Overlay
 - Active Region Overlay
 - Title Safe Overlay

Adding Vector Scope

- Add Vectorscope
 - Graticule
 - 100% Marks
 - 75% Marks
 - Angle Marker
 - Skin Tone
 - Color
 - Intensity
 - Brightness

Adding Waveform YCbCr Scope

- Add Waveform Monitor
 - Select between (Digital/MV/IRE) Scale Settings
 - Graticule
 - Show Parade Setting
 - Luma Only Display
 - White Only Display
 - MV Scope Scale
 - Intensity
 - Brightness

Adding Waveform RGB Scope

Add Waveform RGB
Graticule
Show Parade
Full Scale Setting
White Only Display
Intensity Setting
Brightness Setting

Adding Histogram Scope

Add Histogram
Select between (YCbCr/RGB/HSV/Luma/H/S Scp) Settings
Graticule
MV Scope Scale

Adding Chromaticity Scope

Add Chromaticity (Gamut) Scope
Graticule
TR601 Setting
TR 709 Setting
TR 2020 Setting
TR P3 Setting
Invert Black/White Setting
Black Only Display

Adding Status Scope

Add Status Scope
Brightness

Adding Audio Phase Scope

Add Audio Phase Scope
Graticule
Brightness Setting

Adding Audio Wave Scope

Add Audio Wave Scope
Graticule
Brightness

Configuring the Crystalfontz Front Panel Linux

/etc/udev/rules.d/99-usb-crystalfontz.rules

```
SUBSYSTEMS=="usb", KERNEL=="ttyACM[0-9]*", SUBSYSTEM=="tty",  
SYMLINK+="cryfontz", ACTION=="add", ATTRS{idVendor}=="223b", ATTRS  
{idProduct}=="0004", MODE="0666"
```

Permission Commands

```
sudo chown root:root /etc/udev/rules.d/99-usb-crystalfontz.rules
```

```
sudo chmod 0644 /etc/udev/rules.d/99-usb-crystalfontz.rules
```

```
udevadm control --reload-rules
```

REST API Commands

Basic Command Structure

2110Scope REST API provides many commands that allows you to modify the number of scopes displayed, to select which scopes are displayed, and to adjust specific scope settings.

All commands to 2110Scope start with:

<http://127.0.0.1:1080/drasticcmd?>

Most commands must includes an x= and y= to specify the target scope

<http://127.0.0.1:1080/drasticcmd?x=0&y=1>

The x and y coordinates represent the positioning of scopes in the form of a grid. This grid has a maximum of 2 rows and 3 columns. The maximum number of scopes that can be displayed is 6 and the minimum is 1 scope. The image below displays 4 possible scope layouts depending on how many scopes the user would like to have active.



The x and y coordinates can range from (0,0) to (1,2). From the last layout from the image above, the first row is represented by (0,0), (0,1), (0,2) and the second row is represented by (1,0), (1,1), (1,2). Below is a more detailed explanation about the scope layout.

Number of Scopes

The maximum number of scopes that can be displayed is 6 and the minimum is 1. There are four possibilities on how the scope layout can be displayed. The scope layout can display either 1 scope, 2 scopes, 4 scopes or 6 scopes as provided with the image above. The linear number in the upper left corner in the image below shows each quadrant's ID in the list, while the x/y numbers identify the quadrant's display ID (for positioning and settings). When 4 scopes are visible, we hide scopes 2(0,2) and 5(1,2). For 2 scopes only 0(0,0) and 1(0,1) will be visible.

0 0,0	1 0,1	2 0,2
3 1,0	4 1,1	5 1,2

The **getscopenumber** command will return a value which represents how many scopes are being displayed. It will only return a value of 1, 2, 4 or 6 depending on how many scopes are currently visible. The command below will return how many scopes are currently visible.


```
http://127.0.0.1:1080/drasticcmd?getscopenumber=
{
  "response": 0.
  "value": 4
}
```

The **setscopenumber** command will allow you to change the number of scopes that are displayed. There are only 4 possible input values when using this command. **setscopenumber** can only be set to 1, 2, 4, or 6. The command below will set the number of scopes visible to 2 scopes.

```
http://127.0.0.1:1080/drasticcmd?setscopenumber=2
{
  "response": 0.
}
```

Set/Get Individual Scopes

The commands below provide ways of getting a specific scope and setting a specific scope. The user must make sure the x and y coordinates are within the range of the number of scopes present. From the image below, the selected scope is a Vectorscope as it is highlighted and has an x and y coordinate of (0,1).

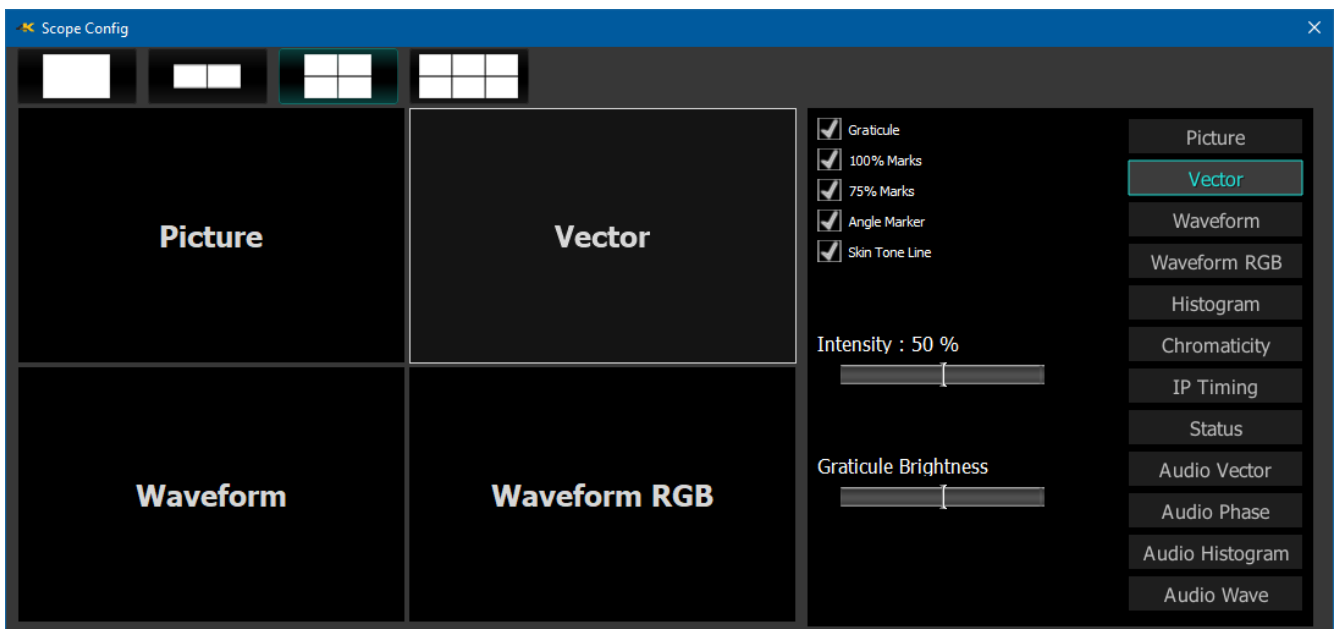

The **getscope** command will return a value representing a specific scope type. The user must specify the x and y coordinates in order to get the desired scope. The list below provides scope values and their corresponding scope type. The command for getting the Vectorscope from the image above is provided below.

```
http://127.0.0.1:1080/drasticcmd?x=0&y=1&getscope=
{
  "response": 0.
  "value": 1
}
```

The user can then compare this value to the values in the list and find the corresponding scope

List of scope values vs names

- 0 = picture
- 1 = vector
- 2 = waveformrgb
- 3 = waveform
- 4 = histogram
- 5 = gamut
- = timing
- 10 = status
- 11 = audiovector
- 12 = audiophase
- 13 = audiohistogram
- 14 = audiowave
- = data

The **setscope** command will allow the user to change the scope based on the x and y coordinates and the scope type name. The command below will change the scope at (0,1) which is the Vectorscope to a Histogram scope

<http://127.0.0.1:1080/drasticcmd?x=0&y=1&setscope=histogram>

```
{
  "response": 0.
}
```

Set/Get Audio Meters

Not Implemented Yet

<http://127.0.0.1:1080/drasticcmd?getmeters=>


```
{
  "response": 0.
  "value": 2
}
```

<http://127.0.0.1:1080/drasticcmd?setmeters=0>

```
{
  "response": 0.
}
```

Set/Get Scope Settings

The commands below provide ways of getting the settings of a scope or assigning a value to a setting of a specific scope. The image below displays a Waveform scope with multiple settings such as Graticule, Show Parade, Only Luma, Scope White, Intensity and Graticule Brightness.

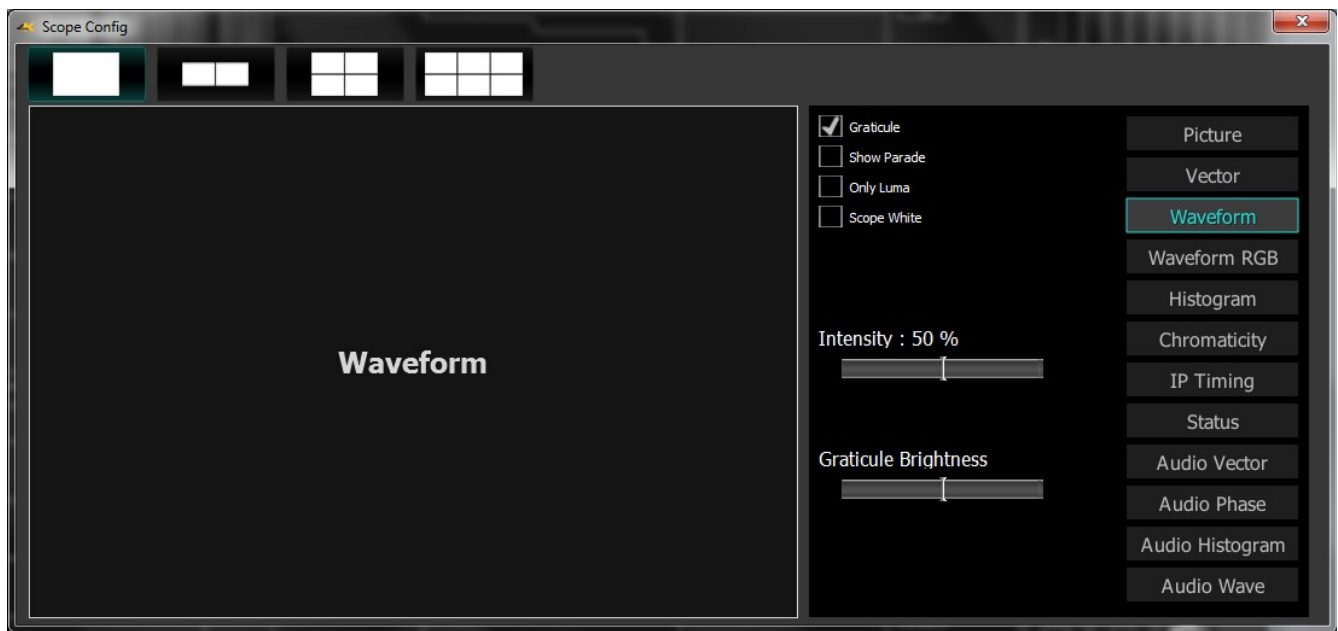

The list below provides correct input setting name commands according to a specific scope setting

- Active Picture = `activepicture`
- Graphic Safe = `graphicsafe`
- Picture Safe = `picturesafe`
- Active Region = `activerregion`
- Title Safe = `titlesafe`
- Graticule = `graticule`
- 100 Marks = `100marks`
- 75 Marks = `75marks`
- Angle Marker = `anglemarker`
- Skin Tone Line = `skintoneline`
- Color = `color`
- Intensity = `intensity`
- Brightness = `brightness`
- Show Parade = `showparade`
- Only Luma = `onlyluma`
- Scope White = `scopewhite`
- Scale Type = `scaletype`
- Full Scale = `fullscale`
- Triangle 601 = `triangle601`
- Triangle 709 = `triangle709`
- Triangle 2020 = `triangle2020`
- Triangle P3 = `trianglep3`
- Invert = `invert`
- Black = `black`
- Histogram Type = `histogramtype`
- Audio Vector Type = `audvectortype`
- Audio Histogram Log = `audhistlog`
- Audio Histogram Scale = `audhistscale`

- Display Mode = `displaymode`
- Freeze = `freeze`
- Line Select = `lineselect`
- Wave Hi/Lo = `wavehilo`
- Overlay = `overlay`
- Lowpass = `lowpass`
- Display None = `display_none`
- Display Luma = `display_luma`
- Display Red = `display_red`
- Display Green = `display_green`
- Display Blue = `display_blue`
- Display Edges = `display_edges`
- Display False = `display_false`
- Display Alpha = `display_alpha`
- Display Focus = `display_focus`
- Display Zebraluma = `display_zebraluma`
- Display Zebrachroma = `display_zebrachroma`
- Display Clip = `display_clip`
- Display Calibrate = `display_calibrate`
- Display HDR False = `display_hdrfalse`
- Display Weighted RGB = `display_weightedrgb`
- Display Weighted = `display_weighted`
- Display FlipFlop = `display_flipflop`
- Display Opacity = `display_opacity`
- Display Key Luma = `display_keyluma`
- Display Key Green = `display_keygreen`
- Display Key Chroma = `display_keychroma`

The **getsetting** command allows the user to get a specific setting from a scope based on the x and y coordinates provided and the setting name. From the image above, only one scope is present which is the Waveform scope. This scope has (x,y) coordinates of (0,0). The command below will give us the value of the setting Graticule for this Waveform scope

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&getsetting=graticule`

```
{
  "response": 0.
  "value": 1
}
```

Since the Graticule box is checked, it is returning a value of 1.

The command below will return the setting value of Show Parade

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&getsetting=showparade`

```
{
  "response": 0.
  "value": 0
}
```

Since the Show Parade box is unchecked it will return a value of 0.

When dealing with checkboxes, a checkbox will either return a value of 1 or 0. If the value is 1 then a checkbox is checked, if 0 then it is not checked. Getting the setting value of Intensity or Graticule Brightness will return the numeric value it is currently set to.

Some scopes may have a pulldown menu with many options. As an example, we can assume the Waveform scope from above has a pulldown setting item called ColorSelection. ColorSelection contains options such as red, blue and green. We can say red, blue and green are stored in a list called colorsList somewhere in the back end of the code. Assume green is already selected. The command below will give us the value of the setting ColorSelection.

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&getsetting=ColorSelection`

```
{
  "response": 0.
  "value": 2
}
```

You can think of colorsList as a list that contains three items, red, blue and green with the corresponding numeric value automatically assigned.

colorsList:

- red = 0
- blue = 1
- green = 2

Each item in the list has a corresponding number value. The user can get information based on the number value returned from the setting. Since the command above returned a value of 2, the color green must be the current setting value of the scope setting ColorSelection.

The **setsetting** command allows the user to set a value to a specific setting. To set a scope setting the user must provide: the x and y coordinate of the desired scope, the scope setting name and a value to set the setting. From the image above, Scope White is unchecked. The command below will set the Scope White setting value to 1. This will allow the Scope White checkbox to be checked

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&setsetting=scopewhite&value=1`

```
{
  "response": 0.
}
```

The command below will set the Graticule checkbox to be unchecked

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&setsetting=graticule&value=0`

```
{
  "response": 0.
}
```

If the scope setting is a checkbox, a value of only 1 or 0 should be used when setting the value. A numeric value between 0-100 can be used when assigning a value to the scope settings Intensity or Graticule Brightness. The command below will change the value of the Intensity setting from the image above from 50 to 60.

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&setsetting=intensity&value=60`

```
{
  "response": 0.
}
```

Referring back to the setting ColorSelection above, user can set the value of this setting using a numeric value. The command below will set the ColorSelection setting to blue.

`http://127.0.0.1:1080/drasticcmd?x=0&y=0&setsetting=ColorSelection&value=1`

```
{
  "response": 0.
}
```

The command above looks for the setting ColorSelection and assigns it a value of 1. The value of one is passed back into the code and will be sent to the colorsList.

colorsList:

- red = 0
- blue = 1
- green = 2

Since we set the value of the setting ColorSelection to be 1, it will now set the setting ColorSelection to a value of blue (1).

This manual has been compiled to assist the user in their experience using **2110Scope** software. It is believed to be correct at the time of writing, and every effort has been made to provide accurate and useful information. Any errors that may have crept in are unintentional and will hopefully be purged in a future revision of this document. We welcome your feedback.

Drastic Technologies Ltd
523 The Queensway, Suite 201
Toronto, ON, M8Y 1J7
Canada
(416) 255 5636
(416) 255 8780

(c)opyright 2025, Drastic Technologies Ltd. All Rights Reserved.